



**ELITE MODEL PI-121
PC AVIATION TRAINING DEVICE /
ELITE MODEL PI-135
BASIC AVIATION TRAINING DEVICE
OPERATOR'S HANDBOOK**



Software Version:

Serial Number:

July 2008

Intentionally
Left
Blank

TABLE OF CONTENTS

PREFACE

| | |
|--------------------------------------|------|
| APPLICABILITY | xiii |
| WARNING | xiii |
| REVISIONS | xiii |
| GENERAL | xiv |
| ELITE Model PI-121 | |
| PC Aviation Training Device | xiv |
| ELITE Model PI-135 | |
| Basic Aviation Training Device | xv |
| COPYRIGHT | xix |
| LICENSE AGREEMENT | xx |

CHAPTER 1

ASSEMBLY AND STARTUP

| | |
|---|----|
| SYSTEM FEATURES | 1 |
| General | 1 |
| Navigation Data | 2 |
| Avionics, Instrumentation, and Hardware | 2 |
| Malfunctions | 2 |
| Weather | 3 |
| Mapping and Evaluation | 3 |
| LIST OF COMPONENTS | 4 |
| Main Component | 4 |
| 1. Flight Controls | 4 |
| 2. Avionics | 4 |
| 3. Computer System (Optional) | 5 |
| 4. Administrative Support Items | 5 |
| INSTALLING THE SOFTWARE | 6 |
| SOFTWARE INSTALLATION | 6 |
| Windows XP or VISTA | 6 |
| GenView™ Visual Databases | 18 |

| | |
|---------------------------------------|-----------|
| Desktop Icons | 18 |
| Hardware Installation | 18 |
| CONNECTING SIMULATOR HARDWARE | |
| TO THE COMPUTER | 19 |
| CONNECTING POWER | 20 |
| STARTING AND SHUTTING DOWN | |
| THE PI-135 BASIC ATD | 21 |
| Before Starting ELITE: | 21 |
| Starting the PI-135 | 21 |
| Shutting Down The PI-135 | 24 |
| Configuration | 24 |
| HARDWARE INSTALLATION | 26 |
| Multi-Monitor Setup | 26 |
| Two Displays | 26 |
| Three Displays | 26 |
| Tips For using Multiple Screens | 27 |
| General Settings | 28 |
| Aircraft Module | 28 |
| Navigation Databases | 28 |
| HARDWARE CONFIGURATION | 29 |
| Changing System Settings | 29 |
| Flight Controls Calibration | 29 |
| Limits | 30 |
| Null Zone | 30 |
| Power Quadrant | 31 |
| Changing Throttle Quadrants | 32 |
| USB Button | 36 |
| Second Monitor | 37 |
| INSTRUMENT CONFIGURATION | 38 |

CHAPTER 2
INSTRUCTOR / OPERATOR'S STATION (IOS)

| | |
|--|-----------|
| MENU DESCRIPTION AND OVERVIEW | 39 |
| Program Menu | 39 |
| Malfunctions Page | 41 |

| | |
|---|-----------|
| Meteo Page | 42 |
| Metar Page | 43 |
| Modification Page | 44 |
| Configuration Page | 45 |
| Map Page | 46 |
| Control Page | 47 |
| Instrument | 48 |
| Freeze | 48 |
| Quit | 48 |
| PROGRAM FEATURES | 49 |
| Map Page | 49 |
| Aircraft Position | 51 |
| Map Scale | 51 |
| Nav Data Symbols | 51 |
| Map Cursors | 52 |
| Map Information | 53 |
| Map Borders | 53 |
| Reposition | 53 |
| Multiple ILS / Deselection | 56 |
| Aircraft Snapping | 59 |
| Map Zoom Levels | 60 |
| Show Facilities | 61 |
| Transponder Tag | 63 |
| MAP Page “Spot Weather” Feature | 63 |
| Navigation Databases | 64 |
| Instrument Approach Scenarios (IAS) | 68 |
| State Panel | 71 |
| Heading Panel | 72 |
| Altitude Panel | 72 |
| Airspeed Panel | 73 |
| Profile Button | 73 |
| Route Button | 84 |
| Print Button | 84 |
| Heading / Distance Cursor | 85 |
| Route Planner | 86 |
| Shortcuts | 87 |

| | |
|--|------------|
| HotPlates | 92 |
| Meteo Page | 95 |
| General Layout (GenView) | 96 |
| Transition Zones | 99 |
| Wind Direction | 100 |
| Wind Speed | 100 |
| Turbulence | 101 |
| Ceiling (Standard View) | 101 |
| Visibility (GenView) | 101 |
| Clouds (GenView) | 103 |
| Visibility (Standard View) | 104 |
| Altimeter | 104 |
| Temperature | 105 |
| Structural Icing | 105 |
| Saving & Loading Meteo Files | 108 |
| Reference Meteo Time | 109 |
| Metar Page | 111 |
| Active Metar | 111 |
| Wind and Gusts | 112 |
| Using the METAR Page | 112 |
| Using Existing METAR Data | 112 |
| Downloading METAR Files | 114 |
| Station Plot | 118 |
| Wind Barb Description in the Northern Hemisphere | 119 |
| Aerodrome Actual Weather METAR And SPECI Decode | 120 |
| Malfunctions Page | 122 |
| Instruments and Systems Failures | 124 |
| Failure Time Window | 124 |
| Immediate Failure | 125 |
| Specific Time Failure | 125 |
| Receivers, Gear, and Flaps Failures | 126 |
| Engine Failures | 127 |
| Random Failures | 128 |
| Instrument INOPs | 129 |
| Failure States | 130 |

| | |
|---|-----|
| Control Page | 132 |
| Visual Panel | 132 |
| Preset Level of Detail (GenView) | 133 |
| Scenery/Runway Lighting (Standard View) | 135 |
| Running the Instrument Approach Scenarios (IAS) | 138 |
| State Panel | 140 |
| Time Flown Panel | 142 |
| Configuration Page | 143 |
| State Files | 143 |
| Visual Settings | 144 |
| Password Protection | 144 |
| Time Difference LT To UTC | 144 |
| ATD Detection Report | 145 |
| Activating Failures With Keyboard | 145 |
| Measurement for Weight & Fuel | 146 |
| Changing Hanging Color Of Numbers | 146 |
| Sound and Volume Control | 147 |
| 3D Sound | 147 |
| Aircraft Information | 147 |
| Modification Page | 149 |
| Creating Facilities | 149 |
| Modifying Facilities | 150 |
| Deleting Facilities | 150 |
| Undo Changes | 151 |
| Facility Info | 152 |

CHAPTER 3

EXTERNAL VISUAL DISPLAY - GENVIEW™

| | |
|----------------------------------|-----|
| GENVIEW VISUAL DISPLAY | 157 |
| GenView Vector Data | 157 |
| GenView Runway Definitions | 157 |
| Taxiing in GenView | 158 |

CHAPTER 4

OPERATIONAL CONCEPTS

| | |
|---|------------|
| BASIC OPERATIONAL CONCEPTS | 162 |
| KEYBOARD CONTROL | 162 |
| MAP Screen Shortcuts: | 162 |
| Zoom | 162 |
| Scroll | 162 |
| Route | 162 |
| HDG/Dist | 163 |
| Position | 163 |
| Custom Zoom | 163 |
| General Shortcuts: | 163 |
| Visual | 163 |
| Simulation Speed | 163 |
| Control | 163 |
| Engine Sound | 163 |
| Mouse Control | 164 |
| Pushing Buttons: | 164 |
| Knobs and Rotary Dials: | 165 |
| Switches: | 165 |
| Power Levers: | 166 |
| Wheels: | 166 |
| PROGRAM MENU | 166 |
| Malfunctions Page | 168 |
| Meteo Page | 168 |
| Metar Page | 168 |
| Modification Page | 168 |
| Configuration Page | 168 |
| Map Page | 169 |
| Control Page | 169 |
| Instrument | 169 |
| FREEZE | 169 |
| Quit | 170 |
| INSTRUMENT SCREEN | 171 |
| GENVIEW VISUAL DISPLAY | 172 |
| GenView Vector Data | 172 |

| | |
|--------------------------------------|-----|
| GenView Runway Definitions | 172 |
| Taxiing in GenView | 172 |
| Adjusting the Instrument Panel | 174 |
| Using the Menu Interface | 175 |

CHAPTER 5 AIRCRAFT

| | |
|--------------------------------------|-----|
| GENERAL INSTRUMENTS | 177 |
| Artificial Horizon | 177 |
| Airspeed Indicator | 177 |
| Turn Indicator | 178 |
| Altimeter | 178 |
| Vertical Speed Indicator | 178 |
| Gyro Compass | 178 |
| Horizontal Situation Indicator | 179 |
| VOR/LOC/Glideslope Indicator | 180 |
| Radio Magnetic Indicator | 180 |
| Moving Dial Indicator | 181 |
| Moving Map | 181 |
| Radio Navigation Receivers | 183 |
| NAV/COMM | 183 |
| DME Receiver | 184 |
| Frequency Mode: | 184 |
| GS/T Mode: | 185 |
| RMT Mode: | 185 |
| ADF Receiver | 186 |
| Marker Receiver | 186 |
| Transponder | 187 |
| GPS Receiver | 187 |
| GX55 | 188 |
| GX50 | 188 |
| GX60 | 188 |
| GX65 | 188 |
| Trimble 2000 Approach Plus GPS | 188 |

| | |
|---|-----|
| GPS Annunciator | 190 |
| With Apollo GPS | 190 |
| With Trimble GPS | 190 |
| Silver Crown Plus Avionics System | 191 |
| EFS 40 - EADI/EHSI | 192 |
| Bendix / King EFS 40 | 193 |
| Autopilot | 195 |
| KAP 150 / KFC 150 | 195 |
| AP ENG: | 195 |
| HDG: | 195 |
| NAV: | 196 |
| APR / GS / BC: | 196 |
| ALT: | 197 |
| CWS: | 197 |
| FD: (KFC 150 only) | 197 |
| Altitude/Vertical Speed Selector | 198 |
| SINGLE ENGINE | 200 |
| Cessna 172R | 200 |
| Cockpit Functions | 201 |
| Aircraft Checklist | 207 |
| Aircraft Settings Panel | 210 |
| Climb | 211 |
| Cruise | 212 |
| Cessna 182S | 213 |
| Aircraft Checklist | 214 |
| Aircraft Settings Panel | 219 |
| Cessna 182RG | 223 |
| Aircraft Checklist | 224 |
| Piper Archer III | 230 |
| Cockpit Functions | 231 |
| Archer Carb Heat Lever | 232 |
| Archer CH Choice | 232 |
| Aircraft Checklist | 233 |
| Aircraft Settings Panel | 237 |
| Piper Arrow IV | 240 |
| Cockpit Functions | 241 |

| | |
|--------------------------------------|------------|
| Aircraft Checklist | 243 |
| Aircraft Settings Panel | 246 |
| Climb Performance | 247 |
| Cruise Performance | 248 |
| Mooney M20J | 249 |
| Cockpit Functions | 251 |
| Aircraft Checklist | 252 |
| Aircraft Settings Panel | 256 |
| Socata TB10 Tobago | 259 |
| Cockpit Functions | 260 |
| Aircraft Checklist | 262 |
| Aircraft Settings Panel | 270 |
| Socata TB20 Trinidad | 271 |
| Cockpit Functions | 272 |
| TB20 Landing Gear | 272 |
| TB20 Rudder Trim | 272 |
| Aircraft Checklist | 273 |
| Climb: | 276 |
| Aircraft Settings Panel | 280 |
| Bonanza A36 | 281 |
| Cockpit Functions | 282 |
| Aircraft Checklist | 286 |
| Aircraft Settings Panel | 290 |
| MULTI-ENGINE AIRCRAFT | 295 |
| King Air B200 | 297 |
| Operational Limitations | 298 |
| Load / Voltmeter Panel: | 298 |
| Battery & Generator Switches: | 298 |
| Firewall Shutoff Valves: | 298 |
| AP-3000 Avionics Panel: | 300 |
| NAV1/ NAV2 Toggle: | 302 |
| Cowl Flap Switches: | 303 |
| Collins Flight Control System: | 304 |
| GPS-NAV Control: | 307 |
| Aircraft Checklist | 308 |
| Aircraft Settings Panel | 313 |

| | |
|-------------------------------|-----|
| Piper Seneca III | 316 |
| Cockpit Functions | 317 |
| Aircraft Checklist | 320 |
| Aircraft Settings Panel | 325 |
| Beech Baron 58 | 331 |
| Cockpit Functions | 332 |
| Aircraft Checklist | 336 |
| Aircraft Settings Panel | 340 |

**CHAPTER 6
TROUBLE SHOOTING**

| | |
|-----------------------|-----|
| SOFTWARE ISSUES | 345 |
| HARDWARE ISSUES | 346 |
| ERROR MESSAGES | 347 |
| CONTROLS | 351 |

| | |
|--------------------|-----|
| INDEX | 353 |
|--------------------|-----|

| | |
|--------------------------|-----|
| SUPPLEMENTS | 367 |
|--------------------------|-----|

PREFACE

APPLICABILITY

Application of this handbook is limited to the specific model of training device and software designated by version number and serial number on the face of the title page of this handbook. This manual primarily features the PI-135 Basic Aviation Training Device (BATD), but also covers the PI-121 PC Aviation Training Device (PCATD) in a limited aspect. Both feature similar functions, with the PI-121 more limited to the panel controls. Despite these panel differences, which will be noted early on in this manual, the operation will follow the same procedures as the PI-135 unless noted.

WARNING

Any unauthorized changes to the trainer regarding removal, replacement or repositioning of original flight control components, avionics or switches, not in accordance with manufacturer specifications, will void the FAA approval for logging flight time credit. Only ELITE ATD software may be used with this training device for certification purposes. The instructions and limitations detailed in the FAA letter of approval pertaining to this model of advanced aviation training device must be adhered to and kept in close proximity to the trainer. The controlling authority for the use this training device in a Part 61 or 141 course of instruction is the Federal Aviation Administration, General Aviation and Commercial Division, 800 Independence Avenue, Washington D.C. 20591.

REVISIONS

For operational purposes, this handbook should be kept in current status with revisions provided with software upgrades or hardware modifications. Revisions to this

handbook will be distributed whenever necessary as complete replacements or additions and shall be inserted into the handbook as below:

- a. Revision pages will replace only pages with the same page number.
- b. Insert all additional pages in proper numerical order within each section.
- c. Page numbers followed by a small letter shall be inserted in direct sequence with the same common numbered page.

GENERAL

ELITE MODEL PI-121 PC AVIATION TRAINING DEVICE



The PI-121 was initially evaluated and approved by the FAA in July 1997 in accordance with AC 61-126 as a PCATD (Personal Computer Aviation Training Device).

The trainer consists of the following components:

- a. Pro Panel SE Flight controls (yoke, rudders, throttles and ancillary switches)
- b. Avionics, King Silver Crown – style
- c. Rudder Pedals
- d. Optional Instructor Operator Station (desk, LCD monitor, keyboard and mouse)
- e. ELITE Version 8.x PCATD software

ELITE MODEL PI-135 BASIC AVIATION TRAINING DEVICE



The PI-135 is in a category of trainer designated as a Basic Aviation Training Device or BATD. Because of its capabilities, the PI-135 was upgraded in 2003 to a new designation called BATD. In addition to the 10 hours instructional use toward an Instrument Rating, additional credit for Instrument Experience under Section 61.57 (c) (1) (currency) and Private Pilot Certificate (2.5 hours under 61.109(i)(1)) was granted.

The trainer consists of the following components:

- f. Pro Panel II Flight controls (yoke, rudders, throttles and ancillary switches)
- g. Avionics, King Silver Crown – style
- h. Rudder Pedals
- i. Optional Instructor Operator Station (desk, LCD monitor, keyboard and mouse)
- j. ELITE Version 8.x BATD software



The software includes eleven (11) aircraft personalities from simple, complex to twin engine aircraft that provide a broad range of training capabilities. The aircraft were evaluated as “generic in-category” aircraft or aero models with correct performance characteristics to practice simulated flight, tasks and procedures under instrument meteorological conditions. Data modeling and performance characteristics, however, represent actual aircraft specifications. Aircraft represented include Cessna 172R, Cessna 182RG, Cessna 182S, Piper Archer III, Piper Arrow, Mooney M20J, Socata TB10 and TB20, Piper Seneca III, Beech Bonanza A36 and Beech Baron 58.



C172R



C182RG



C182S



Piper Archer III



Piper Arrow



Mooney M20J



Socata TB10



Socata TB20



Piper Seneca III



Bonanza A36



Baron 58



The Operator, via the IOS, can change the flying environment such as winds, turbulence, icing characteristics, visibility, ceilings and cloud layers. Any aircraft instrument, receiver or system can be failed immediately, realistically or programmed for a timed failure without interrupting the student's flight. Both weather and malfunctions scenarios can be saved and re-loaded. The software contains utilities to monitor, record and replay flights over a map page displaying the horizontal and vertical flight paths in real time. The navigation data is from the FAA National Flight Data Center (US only) or Jeppesen®. The data includes airways, intersections, published holding patterns, nav aids and airports and airport frequencies. Though designed for instrument training and proficiency, the visual image is actual satellite digital elevation models with a generic ground texture. Major roads, railroads, urban areas bodies of water and shorelines are depicted.

COPYRIGHT

Copyright 1989 - 2008 by
ELITE Simulation Solutions
Im Schorli 1
8600 Dubendorf, Switzerland

All rights reserved.

Under the copyright laws, this manual may not be copied, reproduced or distributed in any form or by any means, in whole or in part, without the written consent of the author: ELITE Simulation Solutions AG. Your rights to the software are governed by the accompanying software license agreement.

Every effort has been made to ensure that the information in this manual is accurate. ELITE Simulation Solutions AG is not responsible for printing or clerical errors.

All terms mentioned in this manual that are actually known to be trademarks or service marks are listed below. ELITE Simulation Solutions AG cannot attest to the accuracy of this information. Use of a term in this manual should not be regarded as affecting the validity of any trademark or service mark.

Apple Logo and Macintosh are registered trademarks of Apple Computer. IBM and PC are trademarks of International Business Machines Corporation. Windows 95, 98, 2000, Me, NT and XP are trademarks of Microsoft Corporation. Jeppesen is a trademark of Jeppesen Sanderson Inc.

LICENSE AGREEMENT

This is a license agreement and not an agreement for sale. A license agreement is a legal agreement between you, the end user (You), and ELITE Simulations solutions AG "Licensor." Please read this software license agreement "Agreement" carefully. If you do not agree with the terms and conditions of this Agreement, you should contact ELITE Simulation Solutions AG within 30 days from the invoice date.

Ownership of the Software

4. The enclosed ELITE software program "Software" and the accompanying written materials are owned by ELITE Simulation Solutions AG, Switzerland, and are protected by United States copyright laws, by laws of other nations, and by international treaties.

Grant Of License

5. Licensor grants to You the non exclusive right to use one copy of the Software on the PI-135 in accordance with the terms of the Agreement. You may not install the software on a network or on a computer other than the one that came as a component of the PI-135 Advanced ATD without express written permission from ELITE Simulation Solutions..

Restrictions on Use and Transfer

6. You may not use the software on another computer or loan, rent, transfer, or assign them to another user except as part of the permanent transfer of the PI-135 aviation training device.
7. You may not copy the Software, except that you may transfer the Software to a single hard disk for backup or archival purposes. You may not copy the written materials.
8. You may permanently transfer the PI-135 Software and accompanying written materials (including the most recent update and all prior versions) if you retain no copies and the transferee agrees to be bound by the terms of this Agreement. Such a transfer terminates Your license. You may not rent or lease the Software

or otherwise transfer or assign the right to use the Software, except as stated in this paragraph.

9. You may not reverse engineer, decompile, modify, disassemble or create derivative works based upon the Software in whole or part.

Term and Termination

10. This license terminates if You fail to comply with any provision of this Agreement. You agree upon termination to destroy the Program, with all copies, modifications and merged portions in any form, including any copy in Your computer memory or on a hard disk .

Limited Warranty

11. Licensor warrants that the Software will perform substantially in accordance with the accompanying written materials for a period of 90 days from the date of your receipt of the Software. Any implied warranties on the Software are limited to 90 days. Some states do not allow limitations on duration of an implied warranty, so the above limitation may not apply to You.
12. LICENSOR DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT, WITH RESPECT TO THE SOFTWARE AND THE ACCOMPANYING MATERIALS. This limited warranty gives You specific legal rights. You may have others, which vary from state to state.
13. LICENSOR’S ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY SHALL BE, AT LICENSOR’S CHOICE, EITHER (A) RETURN OF THE PRICE PAID OR (B) REPLACEMENT OF THE SOFTWARE THAT DOES NOT MEET LICENSOR’S LIMITED WARRANTY AND WHICH IS RETURNED TO LICENSOR WITH A COPY OF YOUR RECEIPT. Any replacement Software will be warranted for the remainder of the original warranty period or 30 days,

whichever is longer. These remedies are not available outside the United States of America.

14. This Limited Warranty is void if failure of the Software has resulted from modification, accident, abuse, or misapplication.
15. IN NO EVENT WILL LICENSOR BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY LOSS OF PROFITS, LOST SAVINGS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OR INABILITY TO USE THE SOFTWARE. Because some states do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to You.
16. This Agreement constitutes the entire agreement between You and Licensor regarding the Software and supersedes any other information, advice or representation given to You by Licensor or its dealers, distributors agents or employees. This Agreement is governed by the laws of the State of Florida, U.S.A. and Switzerland, whichever is applicable. If any provision of this Agreement is found to be invalid by any court of competent jurisdiction, the balance of this Agreement shall remain in full force and effect.
17. If You have any questions concerning this Agreement or wish to contact Licensors for any reason, please write to:

ELITE Simulation Solutions
5700 Dot Com Court Suite 1010
Oviedo, FL 32765-3400
18. U.S. Government Restricted Rights. The Software and documentation are provided with Restricted Rights. Use, duplication, or disclosure by the Government is subject to restrictions set forth in subparagraph (c) (1) of The Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1)(ii) and (2) of Commercial Computer Software - Restricted Rights at 48 CFR 52.227-19, as applicable.

CHAPTER 1

ASSEMBLY AND STARTUP



SYSTEM FEATURES

GENERAL

- Precise aerodynamic modeling
- High resolution and accurately detailed instrument panels
- Graphical instructor's station (with second monitor)
- HotPlates™ approach chart viewer
- Accurate runway characteristics and lighting
- Automatic local/UTC time set and offset
- Enhanced 3D sound
- Weather and malfunction "state" files

NAVIGATION DATA

- US and Canadian navigational databases
- US GenView™ Visual Database
- International GPS database
- Add, delete, and modify navigation facilities/
database elements

AVIONICS, INSTRUMENTATION, AND HARDWARE

- Bendix King Silver Crown Avionics
- Trimble 2000 Approach Plus™ GPS
- Apollo Series GPS
- Selectable HSI/RMI and DG/ADF (on
selected aircraft)
- Moving map display
- Autopilot / flight director
- Altitude/vertical speed preselect (on selected
aircraft)
- Radar altimeter (on selected aircraft)
- Electric pitch trim
- Rudder trim
- Toe brakes w/proportional braking

MALFUNCTIONS

- Fully programmable instrument, power plant,
avionics, gear, flap and system failures
- Set immediate, timed, gradual, and random
failures
- Accurately modeled insidious failure
behavior

- Virtual instrument covers (for partial panel work)
- Create and save an unlimited number of malfunction “state” files

WEATHER

- Advanced static and/or dynamic weather modeling
- Fully programmable wind, turbulence, visibility, clouds, temperature, pressure and icing
- Downloadable METAR reports and integrated real time weather (internet connection required)
- Create and save an unlimited number of weather “state” files

MAPPING AND EVALUATION

- Plan, profile and extended profile views
- Gear/flap position graph and airspeed plot
- Flight Data Recorder with VCR-style playback control
- Virtual airport facility directory
- Transponder tag w/squawk code, heading and altitude readout
- “Spot WX” station model display symbology (wind, temp, visibility and pressure display)
- Quick “click and drag” aircraft repositioning
- Real time and/or recorded flight instrument presentation on IOS Map Screen
- Route planner

- Heading/Distance MAP cursor (instant E6B-style calculations)
- Instrument Approach Scenarios (optional)
- Print, save, and replay and unlimited number of aircraft "path" files
- Create and save an unlimited number of aircraft "state" files

LIST OF COMPONENTS

Please insure that you have all PI-135 BATD components before setup:

MAIN COMPONENT

1. FLIGHT CONTROLS

- ELITE® PPII Flight Console (includes USB cable, master power key and 9v Power Supply (300 to 500 mA))
- ELITE® Rudder Pedals with USB cable (10 ft)
- SEL (Single Engine Land) Throttle Quadrant

2. AVIONICS

- AP-3000 Avionics Panel (includes USB cable and 9v Power Supply (1.2 Amp))
- AP3 Quick Start Guide

3. COMPUTER SYSTEM (OPTIONAL)

- Main computer with pre-loaded ELITE ATD software and USB WIBU key. **NOTE:** ELITE computers are preconfigured with the necessary graphic hardware for multi-monitor use.

monitor(s); main and instructor
keyboard
mouse
speakers

4. ADMINISTRATIVE SUPPORT ITEMS

- Software (Windows CD, ELITE® BATD DVD, ELITE External Visual DVD)
- PI-135 BATD Letter & Qualification Guide
- PI-135 Operator's Handbook

NOTE: If you purchased the ELITE Computer, all software is pre-installed and ready to run. Software CDs and DVDs are for archival purposes only! Do not install software until you contact ELITE Technical Support (407-359-8488)

Please contact ELITE Customer Support for missing components (407-359-8767). If operational assistance is required to set up and run the BATD, call ELITE Technical Support (407-359-8488); e-mail support@flyelite.com or visit our Support Section at <http://www.flyelite.com>.

INSTALLING THE SOFTWARE

The installation process will use a combination of a DVD installation disc and a USB key called a Wibu Key, which holds your license information. **Do not loose this key!** Without the Wibu Key, you will only be able to operate the demo version of the program. Other add-ons require a serial code to be purchased and entered when prompted during the install.



NOTE: Before proceeding with installation, disable or exit any running programs

SOFTWARE INSTALLATION

WINDOWS XP OR VISTA

ELITE software can be installed on computers operating Windows XP Home/Pro or Windows Vista using the following procedures:


1. Insert the installation DVD.
2. After a few moments the DVD should “auto-launch” and begin installation.

NOTE: If your computer is not setup to auto-launch or if the DVD is already in the CD/DVD drive, then run the SETUP.EXE program file located on the disc.


3. This, or a similar box will appear. Select **Next** to begin.



4. Agree to the ELITE License Agreement to proceed, otherwise you will exit the installation. Select **Next**.

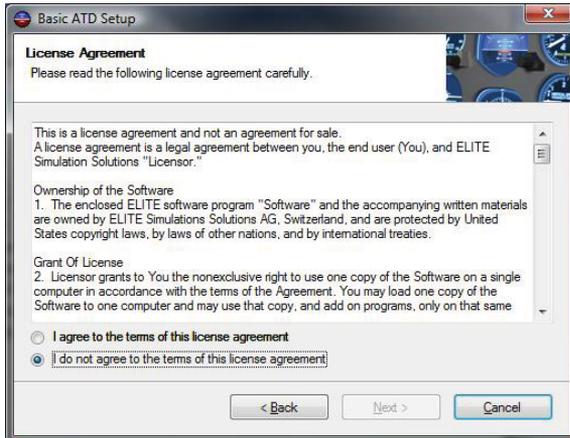


5. ELITE software will work with various external hardware, including older ELITE Serial connected products and other manufacturers equipment. For the best performance it is recommended to use ELITE hardware which uses high speed USB connectors. Choose the option that best describes your hardware, then select **Next** to continue.

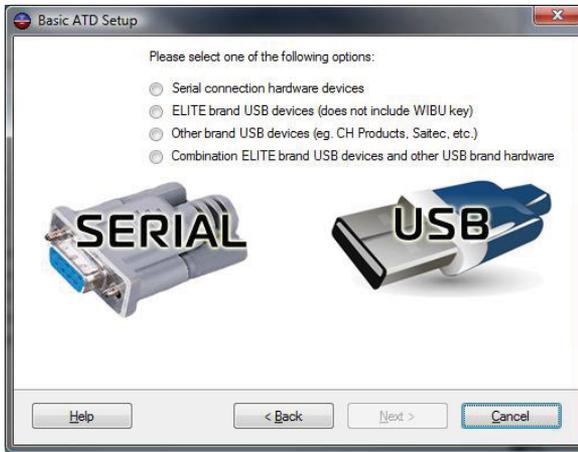

NOTE: Regardless of the option chosen, the installation of the Wibu Key will begin automatically after the successful installation of ELITE.

- In this step of the setup you are being asked to enter the serial numbers of the software you have purchased. If you have purchased Genview or other database add-ons, you will need to enter each serial number in order to activate them. The number will be found on your invoice next to the product add-on you have ordered. If you wish to purchase add-ons, you may contact ELITE by calling 1-800-557-7590. Once you have entered all the serial numbers to the products you own, select **Next** to continue.

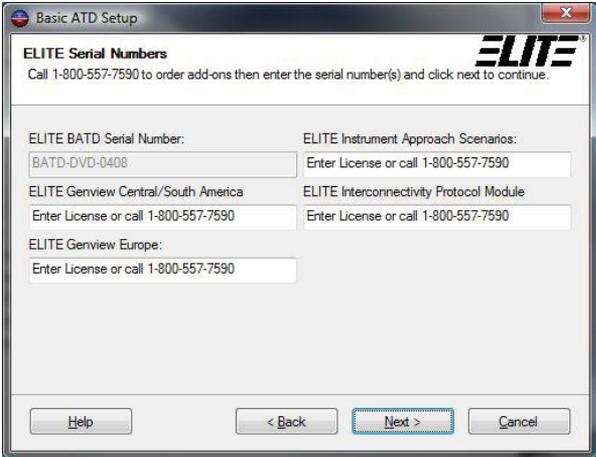


The screenshot shows a Windows-style dialog box titled "Basic ATD Setup". The main heading is "ELITE Serial Numbers" with the ELITE logo to the right. Below the heading, it says "Call 1-800-557-7590 to order add-ons then enter the serial number(s) and click next to continue." The dialog is divided into several sections for entering serial numbers:


- ELITE BATD Serial Number:** A text box containing "BATD-DVD-0408".
- ELITE Instrument Approach Scenarios:** A text box containing "Enter License or call 1-800-557-7590".
- ELITE Genview Central/South America:** A text box containing "Enter License or call 1-800-557-7590".
- ELITE Interconnectivity Protocol Module:** A text box containing "Enter License or call 1-800-557-7590".
- ELITE Genview Europe:** A text box containing "Enter License or call 1-800-557-7590".

At the bottom of the dialog, there are four buttons: "Help", "< Back", "Next >" (which is highlighted with a blue border), and "Cancel".


7. On this screen you are being asked which features of the ELITE software you wish to install. Some will already be selected by default, while others are optional. Your purchased add-ons will install automatically. Select **Next** to continue.

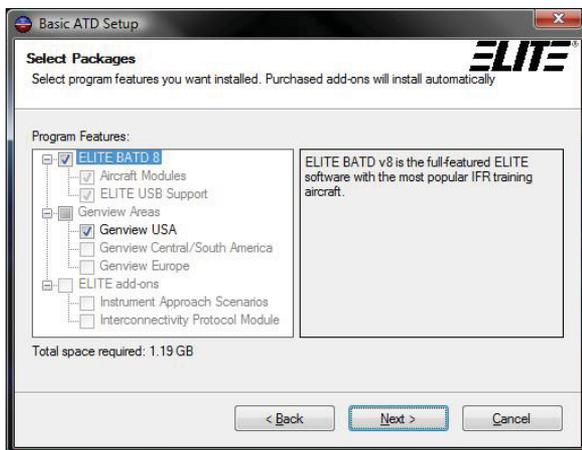


8. By default the ELITE software will be installed on the C Disk Drive and should only be changed by advanced users. Select **Next** to continue.

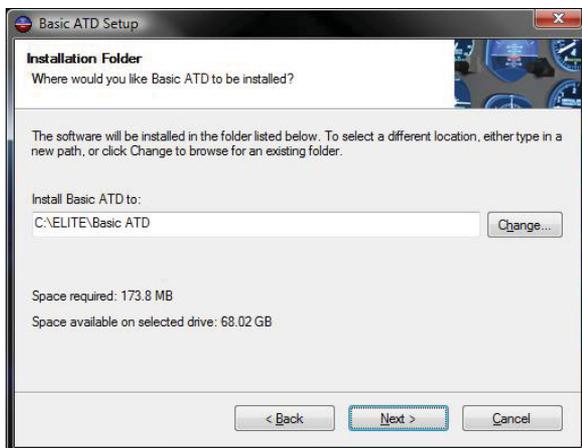


- This is a review before the actual installation. Verify that the information is correct. If not, select **Back** to return to previous setup prompts and change entries, or select **Next** to continue with the installation.

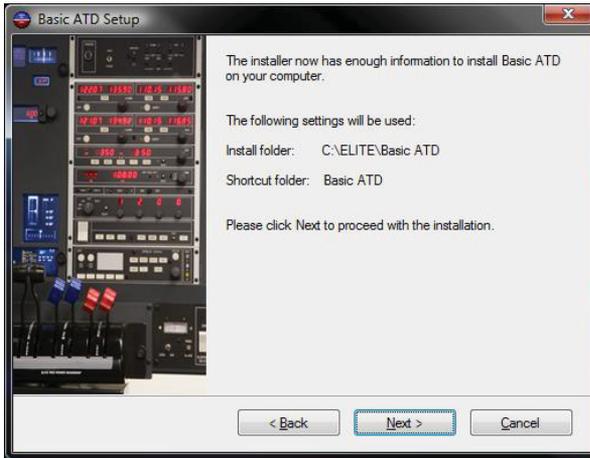


- This screen reflects the progress of the installation and will continue to the next prompt when it has completed. You may abort the install at any time by selecting **Cancel**.

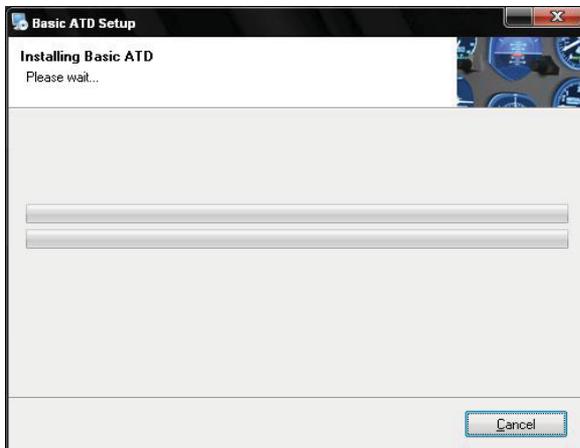


11. Once the progress bars in the previous step have completed, a new screen will appear with the following prompt on top. At this point, insert the Wibu key into an open USB port. Click **OK** to continue.

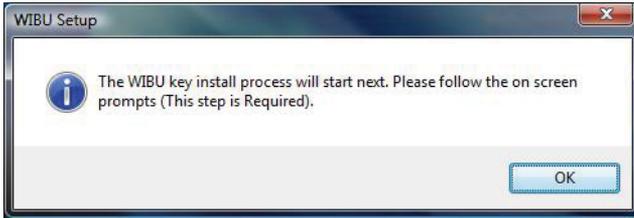


12. The Wibu software installation begins. This needs to be installed for ELITE to function completely, otherwise it will remain in Demo Mode with a three minute operating time. Select **Next** to continue.

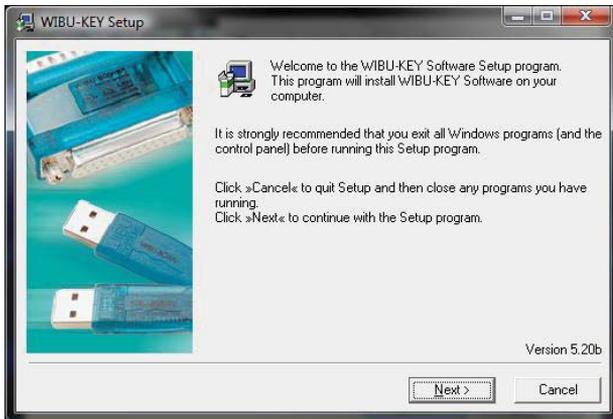


13. You may now select your language of preference. English is the default language. Select **Next** to continue.

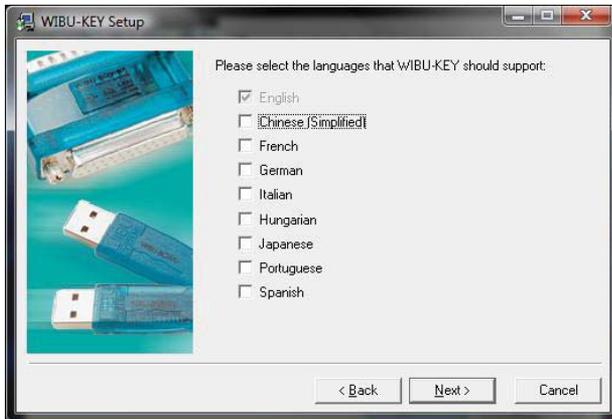


14. This next screen displays information regarding components that will be installed onto your computer. Select **Next** to continue.

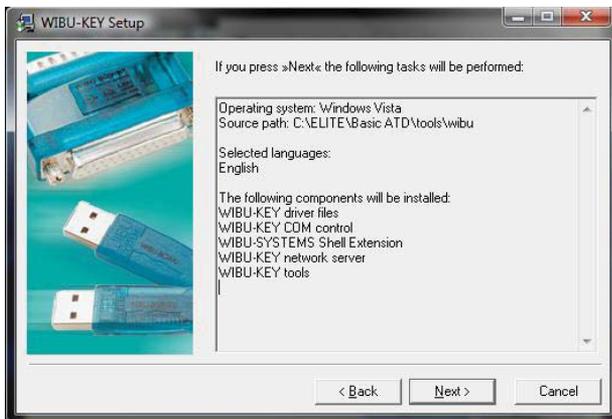


15. During the installation, all buttons will be disabled, and the files being installed display and will scroll within the screen.

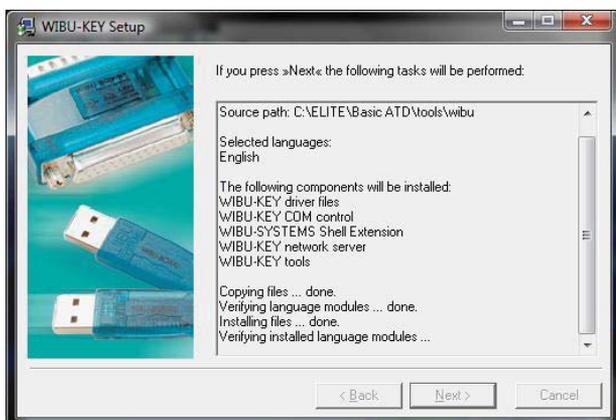

16. Once the Wibu files have been successfully installed, the following screen will appear. You can open the Readme information or deselect the option. Select **Finish** to continue.

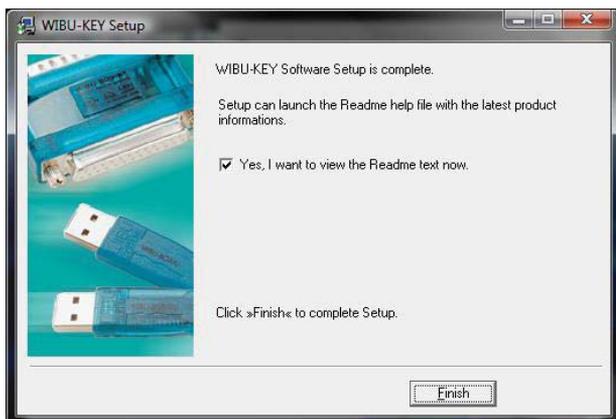

17. Once both the ELITE and Wibu software have been installed, you will be prompted to register your software online with ELITE. Select **Next** to continue.

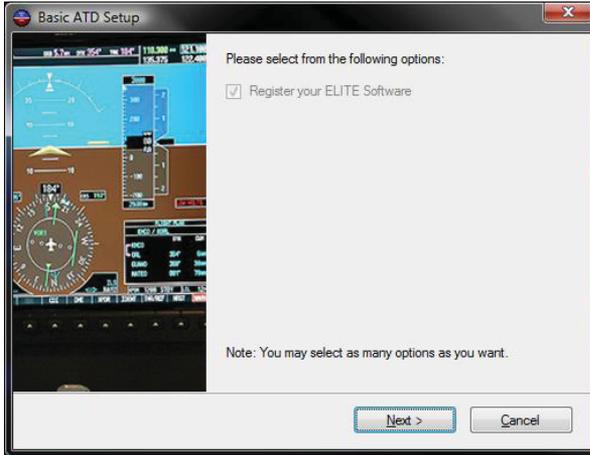

18. Your default Web Browser will open to the *ELITE Product Registration* page within the ELITE Web Site. Fill out the information as prompted. You must have an internet connection for this to function.

ELITE
ELITE SIMULATION SOLUTIONS

Home Software Hardware FAA Approved Extras Support Contact

Login [View Cart](#)

ELITE Product Registration

Please complete the following information to register your product.

First Name:

Last Name:

Address:

Phone Number:

E-Mail Address:


Serial Number:

© Copyright 1990 - 2008
Azure Computing, Inc.
All Rights Reserved.

19. This is the final screen showing that your software has been completely installed. Select **Finish** to exit.



20. You will be prompted to reboot your computer. This will need to be done before the ELITE software can operate.

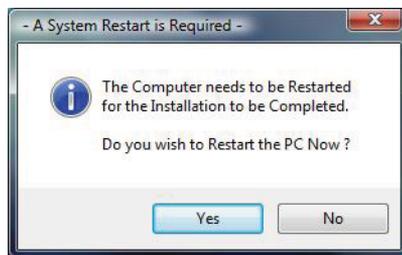

NOTE: The Wibu key must be inserted in order for the ELITE software to operate beyond the Demo Mode.

GENVIEW™ VISUAL DATABASES

The following GenView™ US database areas will be installed:

USSE (United States, Southeast)

UEC (United States, East Central)

USSC (United States, South Central)

USNW (United States, Northwest)

USSW (United States, Southwest)

USAK (United States, Alaska)

USNE (United States, Northwest)

USHI (United States, Hawaii)

USNC (United States, North Central)

21. After installation has finished, REMOVE the DVD from the drive.

DESKTOP ICONS

After installation you should have two ELITE v8.x Program icons on your desktop as well as several additional ELITE document icons.

The ELITE® BATD or ELITE® BATD GV program icons are used to run ELITE v8.x with GenView™.

**HARDWARE INSTALLATION**


1. Connect USB key to a free USB port. The USB key MUST be connected before running ELITE and remain connected for proper software operation.
2. Connect power to devices requiring external power (avionics panels, flight consoles, etc.).
3. Connect flight controls as applicable. If using other than ELITE hardware follow specific manufacturer's instructions for proper

flight control connection and calibration as required.

CONNECTING SIMULATOR HARDWARE TO THE COMPUTER

Connecting USB components of the PI-135 to the computer is a very simple thing to do. Each component comes with a typical USB cable that connects to the computer's USB ports. If the computer does not have enough USB ports for 3 PI-135 components plus mouse and keyboard, a powered USB hub may be necessary (not included). The main monitor and instructor monitor connects to the video out ports on the computer*. The basic layout follows:

Typical USB Connection Diagram (showing rear of components)

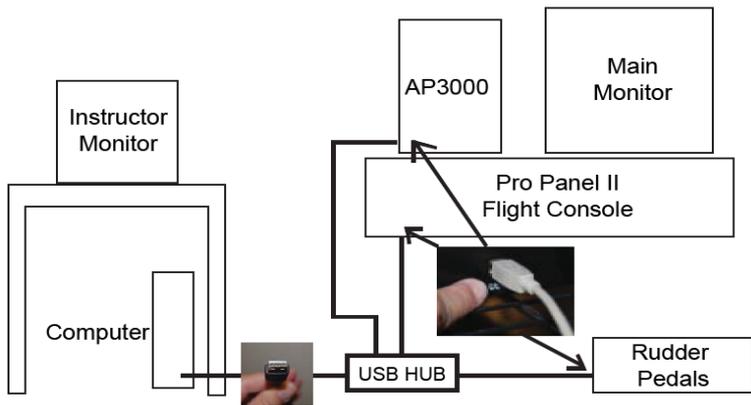

* The ELITE software is designed to accommodate a separate graphical instructor station (second monitor). When using your own computer, you must install either a second graphic card or use a graphic card that has dual monitor output. **You must configure Windows for multi-monitor use.** When Windows is configured properly, ELITE will automatically see and use the second monitor. The station can serve as the controlling monitor and allow the instructor to start the program, close the program and, when in the ELITE program, use all pages of the ELITE

menu system independently of the main monitor (which will only display the instrument screen). Your local computer store can provide assistance in providing the necessary graphic card(s) and configuring Windows for multi monitor use. Because malfunctions can be evoked from the keyboard independent of the simulation, a separate instructor station monitor is not required for certification purposes...but because of the training value, it is highly recommended.

CONNECTING POWER

The PI-135 is powered by 2 AC Adapters. One is for the AP3000 and the other is for the Pro Panel II Flight Console. The AP3000 comes with a 9v DC, 1.2 amp (negative center) power supply. It can also power the Pro Panel II simultaneously with the “power splitter” adapter included with the master key. The Pro Panel II comes with a 9v DC 300 to 500 mA (negative center) power supply. It is your choice whether to use one or both power supplies. **A surge protected is highly recommended!**



STARTING AND SHUTTING DOWN THE PI-135 BASIC ATD

BEFORE STARTING ELITE:

If you are using hardware controls other than ELITE, you will need to go into the *Control Panel* of Windows and calibrate them according to the instructions the manufacturer of the hardware supplied. If you are using ELITE hardware this is not necessary.


NOTE: Once the ELITE software has started, you will need to calibrate the hardware, both ELITE and other manufacturer controls, from within the ELITE program in order for them to function properly.

STARTING THE PI-135

1. Turn on the main computer and monitors.
2. Turn on the Pro Panel II flight console main power key. Check the right corner of the console and insure you see two lights... a solid green light (showing power connection) and a flashing yellow light (showing data transmissions).
3. On the Windows Desktop, double click on the ELITE® BATD icon to start the program.
4. Choose an aircraft by double-clicking on the icon or highlighting the aircraft with a single left click and clicking on CHOOSE button at the bottom of the page.




5. Choose your navigation database in the same manner.

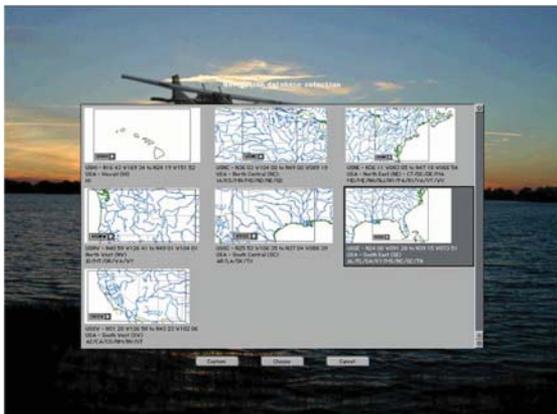

6. The instrument panel of your chosen aircraft will appear on the main monitor. If a second monitor is connected, the MAP Page will appear.
7. Before flight, it is important to calibrate the flight controls. This is a simple exercise to teach the software the range of values from the pitch, roll, yaw, brake and throttle movements. To calibrate the flight controls:
 - a. Bring up the program menu selections on the instructor LCD (right mouse click anywhere on the screen).
 - b. Choose CONFIGURATION
 - c. Left mouse click on CONTROLS CALIBRATION
 - d. The calibration dialog box will open; left mouse click on HELP
 - e. Follow on-screen instructions to calibrate the controls

- f. Click OK to continue when finished and change CONFIGURATION page to MAP page. (The simulation remains in FREEZE when on the CONFIGURATION page!)

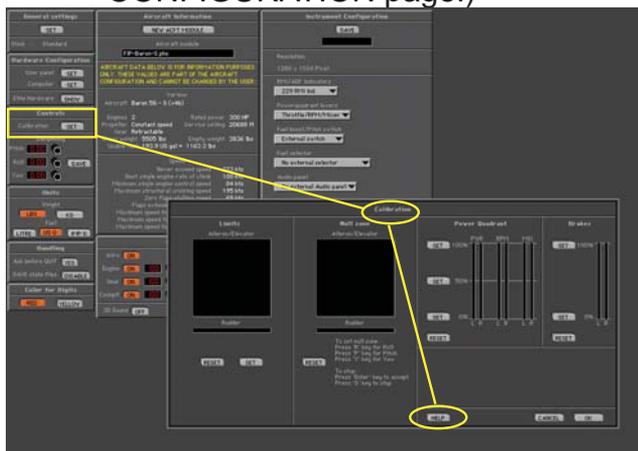

8. Unfreeze the simulation, release the parking brake and you are ready to fly.



The flight controls, switches, levers and knobs perform the same function as their counterpart in the real aircraft. At this point you can change frequencies, adjust instruments and perform all procedures for flight as you would in the actual aircraft. The flight may be paused at any time by pressing the FREEZE button on the AP-3000 avionics panel or by using the main screen menu FREEZE selection.

NOTE: Any disruption in the main power to the flight console (ie. Turning the “Panel Master” key switch off during operations) will require a shutdown and re-start of the ELITE program.



SHUTTING DOWN THE PI-135

1. To shut down the PI-135, you can use the key combination “Alt + Q” on the keyboard or by opening the ELITE Menu and left clicking on QUIT to exit the ELITE program.
2. At the Windows desktop, the Operator should use the typical Windows “START BUTTON” / SHUTDOWN” process.
3. When the computer has shut down, turn the key on the Pro Panel flight console to OFF.
4. Turn off the Main monitor and the Instructor Monitor.

NOTE: The hour meter continues to run when the Pro Panel flight console master key is ON!

CONFIGURATION

It is recommended that this page be reviewed carefully. After configuring to your satisfaction, press the SAVE button to keep all values. These selections are stored in a PREF folder in the program directory. These values will be read when starting the program. Once set, you will seldom need to go to this page. The instructor or operator can set a password to prevent access to the Configuration Page.

Certain features of each aircraft can be changed or configured to personal preference or training requirement. An example of Configuration was the control calibration performed in item 9 above. Some settings are general and apply to all aircraft being flown and some settings

(instrument configuration) are specific to the aircraft selected to be flown.

You get to the CONFIGURATION PAGE by right mouse clicking on the instructor's monitor when ELITE is running. This brings up the ELITE Main Menu. Click on CONFIGURATION PAGE or use the keyboard shortcut "alt G".

The Configuration Page consists of nine sections: General Settings (1), Hardware Configuration (2), Controls (3), Units (4), Handling (5), Color for Digits (6), Aircraft Information (7), Sounds (8) and Instrument Configuration (9). This section will cover the basics to get the PI-135 up and running. Other information from this screen will be covered in Chapter Two.

| General settings | Aircraft Information | Instrument Configuration |
|---|---|---|
| <p>Stick : Standard</p> <p>Hardware Configuration</p> <p>User panel 2 [SET]</p> <p>Computer [SET]</p> <p>Elite Hardware [SHOW]</p> <p>Controls</p> <p>Calibration [SET]</p> <p>Dampening</p> <p>Pitch 0.00 3</p> <p>Roll 0.00 [SAVE]</p> <p>Yaw 0.00</p> <p>Units</p> <p>Weight LBS 4 KG</p> <p>Fuel LITRE US G IMP G</p> <p>Handling</p> <p>Ask before 5 YES</p> <p>SAVE state files [DISABLE]</p> <p>Color for Digits</p> <p>RED 6 YELLOW</p> | <p>NEW ACFT MODULE</p> <p>Aircraft module</p> <p>FIP-Baron-S.pho</p> <p>AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER.</p> <p>Various</p> <p>Aircraft Baron 58 - S (v4b)</p> <p>Engines 7 2 Rated power 300 HP</p> <p>Propeller Constant speed Service ceiling 20688 ft</p> <p>Gear Retractable</p> <p>Gross weight 5505 lbs Empty weight 3836 lbs</p> <p>Usable fuel 193.9 US gal = 1163.3 lbs</p> <p>Speed</p> <p>Never exceed speed 223 kts</p> <p>Best single engine rate of climb 100 kts</p> <p>Minimum single engine control speed 84 kts</p> <p>Maximum structural cruising speed 195 kts</p> <p>Zero flaps stalling speed 68 kts</p> <p>Flaps extended stalling speed 61 kts</p> <p>Maximum speed for flaps extended 122 kts</p> <p>Maximum speed for gear extended 152 kts</p> <p>Maximum speed for gear operation 152 kts</p> <p>Sounds</p> <p>Intro ON Idents 100</p> <p>Engine ON 100 Flaps ON 100</p> <p>Gear ON 100 IAS ON 100 8</p> <p>Cockpit ON 100</p> <p>3D Sound OFF</p> | <p>SAVE</p> <p>Resolution</p> <p>1280 x 1024 Pixel</p> <p>RMI/ADF Indicators</p> <p>229 RMI Ind.</p> <p>Powerquadrant levers</p> <p>Throttle/RPM/Mixer</p> <p>Fuel boost/Pitot-switch</p> <p>External switch 9</p> <p>Fuel selector</p> <p>No external selector</p> <p>Audio panel</p> <p>No external Audio panel</p> <p>Real GPS</p> <p>No Real GPS</p> <p>Instrument Panel</p> <p>Without Mask</p> |

HARDWARE INSTALLATION

MULTI-MONITOR SETUP

When using Windows XP or 2000, ELITE can be set up to operate using up to three displays. On a single monitor setup, ELITE switches between the instrument, map, and other control screens using the menu at the bottom right of the main instrument screen. When starting the program with multiple displays detected, it will prompt for the arrangement of the displays as shown.



TWO DISPLAYS

One display will stay fixed to the instrument panel screen. The second display defaults to the Map screen and can be switched between the Control, Meteo, Configuration, and Modification screens.

THREE DISPLAYS

One display will stay fixed at the instrument panel, one display will stay fixed at the Map screen, the third display will default to the Control screen and can be switched between the Meteo, Configuration, and Modification screens.

NOTE: The first time starting the program with multiple displays, you should go to the Configuration screen to set

the position of the menu to either the second screen or third screen, using the Menu Position button and to set the Startup screen to either the second screen or third screen, using the Startup button. Then quit and restart the program for the change to take effect.



TIPS FOR USING MULTIPLE SCREENS


There are a few rules that should be known for using multiple screens.

1. Anytime the menu is selected with the mouse the simulator will freeze momentarily. If you wish to switch screens while a student is flying without interrupting the flight, use the key board shortcut commands to switch between the Map, Control, and Meteo screens.
2. The simulation will freeze if one of the secondary displays is switched to the Configuration or Modification screens.
3. Clicking anywhere inside the Map display area (to obtain information about a facility) will freeze the simulation.
4. On the Map screen, selecting the following options will Freeze the instrument screen: Dump, Path, Route, Replay, Load, ?, and Show.
5. To adjust the aircraft loading or fuel settings on the Control Screen the program must be in Freeze mode.

GENERAL SETTINGS



Under **General Settings**, clicking the **SET** button opens a dialog box that lets you customize features in the startup sequence, set/change passwords, set LT/UTC offset, toggle ATD detection report, and activate failure control from the keyboard. These settings are retained until changed or reset.

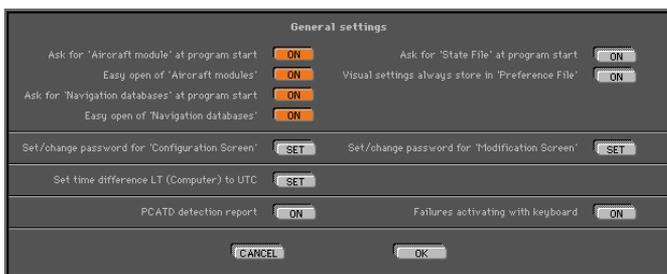

AIRCRAFT MODULE

When “Ask for **Aircraft Module** at program start” button is **ON** (orange), ELITE will ask you (on every startup) to select an aircraft module. “Easy open of aircraft modules” allows you to choose an aircraft by viewing thumbnails (small pictorial representations) of each aircraft cockpit. This is the default and recommended setting. The same is true for NAV databases.

NAVIGATION DATABASES

When “Ask for **Navigation Databases** at program start” button is **ON**, ELITE will ask (on every startup) to select a NAV database area to fly in. “Easy open of Navigation databases” allows you to choose a NAV area by viewing thumbnail maps of all available individual navigation areas installed.


*NOTE: To have **ELITE** automatically start up (default) to the same aircraft and NAV area each time, first make sure you are currently using the desired aircraft and NAV area you would like for subsequent startups, then turn OFF both “Ask for Aircraft module” and “Ask for Navigation databases at program start” buttons.*

HARDWARE CONFIGURATION

CHANGING SYSTEM SETTINGS

Do NOT USE Changing System Settings unless instructed to do so by ELITE Technical Support personnel.


Adjustments to computer configuration can render the PI-135 BATD inoperative.

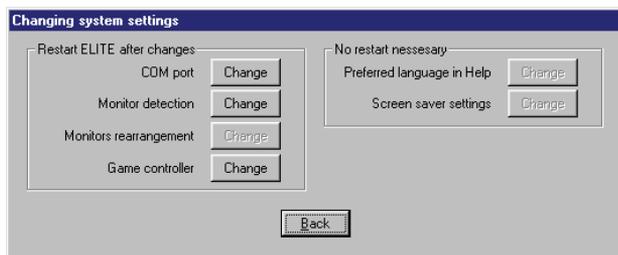

FLIGHT CONTROLS CALIBRATION

Calibration is necessary to bring the PI-135 flight controls (pitch, roll, yaw and throttles) controls into proper tolerances and allow ELITE to learn the limits of the of the controls. (Pressing the HELP button in the Calibration dialog box will open on screen instructions and walk you through the calibration process.)

Under **Controls** click the **SET** button next to calibration. The **Calibration** screen is divided into three sections or “panels.” From left to right these are; Limits, Null zone, and Power Quadrant respectively.

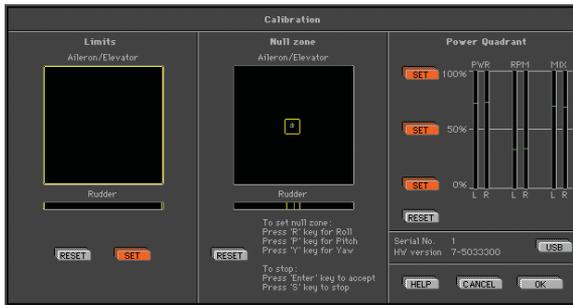

Follow these instructions to properly calibrate your flight control device(s):

LIMITS

Under **Limits**, click the **RESET** button. Notice the small cross-hairs in the box just below “Aileron/Elevator.” Now move your yoke or stick through its FULL range of motion, i.e. forward (down) elevator, back (up) elevator, FULL left and right aileron. The cross-hairs have now traced a blue box graphically representing the limits of the control device being used. If rudder pedals are connected, apply FULL left and right rudder. You will see a small vertical line move with the application of rudder input. Click **SET** to store the new limits settings.

NULL ZONE

The center **Null Zone** panel allows the user to define a “box” within which the control device(s) is considered centered. If a flight control does not physically return exactly to center but is still within the limits of the “box” defined under the **Null Zone** panel, no flight command input will be sent to the software. Some experimentation with different Null zone settings may be necessary to achieve optimum control response. In general, larger Null zones require greater flight control travel accompanied by a coincident perceived decrease in sensitivity. Under **Null Zone**, click **RESET**. Press the “R” key on your keyboard and move the stick or yoke to adjust the size of the aileron (Roll) Null

zone. To accept and store this setting hit **ENTER** or press the “**S**” key to return to the previously stored value. Next, press the “**P**” key on your keyboard and move the stick or yoke to adjust the size of the elevator (**P**itch) Null zone. To accept this setting hit **ENTER** or press the “**S**” key to return to the previously stored value. If rudder pedals are connected press the “**Y**” key on the keyboard and move the pedals to adjust the width of the of the rudder (**Y**aw) Null zone.

*NOTE: Clicking the **RESET** button returns ALL Null zone settings to default. Individual Null zones can be adjusted without clicking **RESET** by simply pressing “**R**”, “**P**”, or “**Y**” keys respectively.*

POWER QUADRANT

Under **Power Quadrant**, click **RESET**. Now physically move the Mixture, Prop, and Throttle levers (if applicable) on your power quadrant or similar device to their halfway position.*

Do NOT use lines on screen under PWR, RPM, and MIX columns for reference. Once levers are positioned physically at 50% (on device) click the middle **SET** button next to the 50% marking on screen. Next, move the levers FULL forward (Throttle OPEN, Prop HIGH, Mixture RICH) and click the top 100% **SET** button. Finally, move the levers FULL aft and click the bottom 0% **SET** button.

**NOTE: If a King Air quadrant or other turbine quadrant is being used then it will be necessary to move the levers to their respective detent positions (Idle, Feather, Low Idle) rather than the halfway position.*

Calibration is now complete! Click **OK** to save these settings & return to the **Configuration** page, or **CANCEL** to return and revert to previous settings without saving. Quit and restart ELITE for new calibration settings to take affect.

Real aircraft are inherently stable, simulators are not. For inexperienced simulator pilots, the most common difficulty is over-controlling or getting used to the control sensitivity. Practice basic flying maneuvers as you would in any new aircraft transition before starting your IFR practice. Remember “the less is more” adage and make small pitch and roll corrections for variation in altitude and/or heading. Do NOT chase the VSI. Monitor instrument/needle trend, not just movement. This makes for smooth, precise, instrument flight and prevents awkward action/reaction responses.

CHANGING THROTTLE QUADRANTS

The ELITE® PI-135 comes with both a single engine “Piper Style” throttle quadrant and a multi-engine throttle quadrant. A Cessna-style vernier two or three element throttle quadrant is available as an option.

To change the throttle quadrant from the PI-135 follow these simple steps:

1. Turn off the Master Panel Power switch using the key switch.



2. Remove the left and right thumbscrews by turning counterclockwise, supporting the throttle quadrant with a free hand.




3. Remove the throttle quadrant making sure not to pull on the gray cable.



4. Loosen the connector thumbscrews by turning counterclockwise.




5. Carefully remove the plug from the rear of the throttle quadrant.

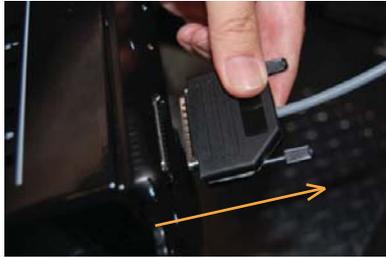

6. Note the orientation of the receptacle.



7. While holding the new throttle quadrant in a free hand, gently insert the plug into the receptacle and tighten the thumbscrews by turning clockwise.

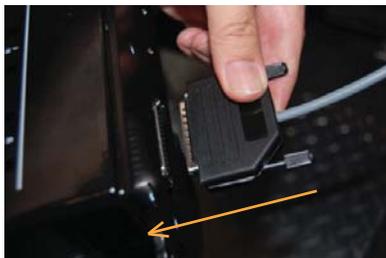

- Carefully insert the throttle quadrant into the console making sure not to bind or bend the gray cable.




- Reinstall and tighten the two thumbscrews by turning clockwise. Note: DO NOT OVER TIGHTEN SCREWS!



- Turn ON Master Panel Power by using the key switch.



11. Observe the green POWER light illuminates steady.

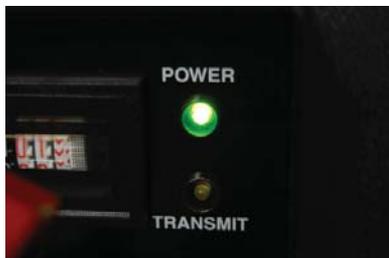

12. Observe the amber TRANSMIT light flashes.



13. Open on the ELITE program by double-clicking the ELITE icon on your desktop

USB BUTTON



Press "USB" button to see ELITE USB hardware connected

Adjusting control sensitivity:

Control dampening is designed to desensitize or add slop to the controls. Start with low to mid-range values and adjust to your satisfaction. Yaw usually requires more dampening than pitch or roll. Click on **SAVE** to store new dampening values after adjustment.



Numbers between 0.00 (no dampening) and 0.20 (maximum dampening) change the sensitivity of flight control devices.

SECOND MONITOR



If you are using an ELITE system with a 2nd (instructor's station) monitor, an additional display panel will appear below the **Color for Digits** panel. Pressing the **2ND SCREEN** button assigns the program menu to the 2nd monitor. This allows someone sitting at the instructor's station easier access to the program menu and features.

INSTRUMENT CONFIGURATION

The **Instrument Configuration** panel is different for each aircraft module depending on the cockpit resolution(s), instrument configurations, power units, and external switches unique to that module.



Clicking on a black arrow opens a drop-down menu displaying all available (changeable) options for that section. Drag the fingertip to the option desired and release the mouse button to make your selection.



The selected option will be indicated, replacing the previous selection.

CHAPTER 2

INSTRUCTOR / OPERATOR'S STATION (IOS)

MENU DESCRIPTION AND OVERVIEW

When the instrument panel is displayed, the IOS LCD monitor will depict a map screen. From here, the operator can access all areas of the program through a MENU system. A brief over view of the MENU items follow:

PROGRAM MENU

After starting the program, you will enter the simulation in the cockpit (in front of the Instrument panel).

The MENU button at the bottom right of your instructor screen is your access to the many features.



Click and hold on the MENU button to open the menu. While holding your mouse button, move the cursor to the menu selection and release. As you move through each selection, the item to be opened will be highlighted. Keyboard shortcuts are listed beside their corresponding menu item. For shortcuts, hold the key board **ALT** key and the designated letter. CAPS Lock should be OFF.


NOTE: The simulation is in the FREEZE mode if Menu or FREEZE is colored red.

| | |
|---------------|--------------|
| QUIT | ALT Q |
| VISUALMANAGER | ALT Y |
| MALFUNCTIONS | ALT S |
| METAR | ALT R |
| METEO | ALT W |
| MODIFICATION | ALT D |
| CONFIGURATION | ALT G |
| MAP | ALT M |
| CONTROL | ALT C |
| INSTRUMENT | ALT I |
| HELP | ALT H |
| FREEZE | ALT F |
| Menu | |

- Exits Program
- Visual Manager Page
- Malfunctions Page
- Active METAR
- Weather Page
- Nav Data Modification
- Configuration Page
- Map Page
- Control Page
- Instrument Panel
- Helps Tips
- Simulation Freeze/Unfreeze


The following is only an overview of the MENU layout. For detailed capabilities and operations, see Program Features.

METAR PAGE

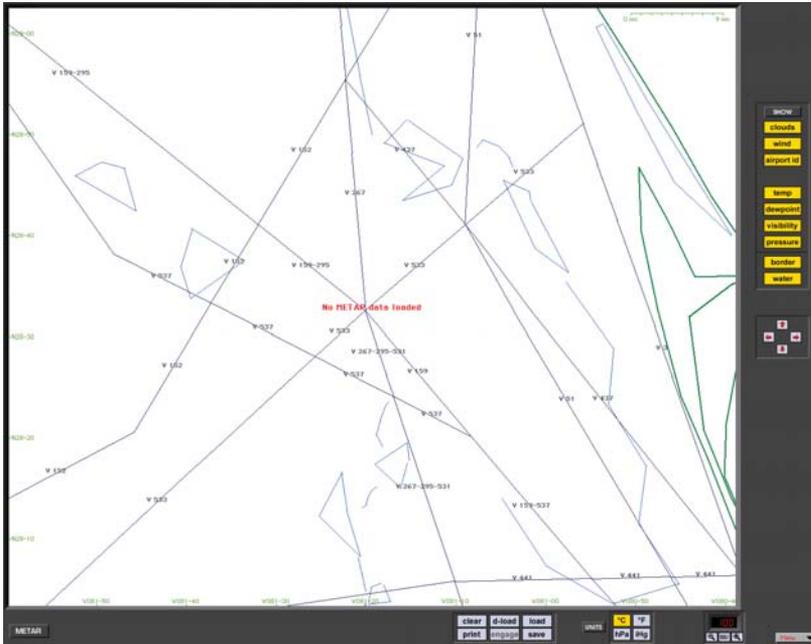

The METAR Page is used to download real-time weather reports from METAR reporting stations for use in ELITE GenView. When METAR weather is “engaged” (activated) to function in ELITE, the weather dynamically changes when flying between METAR reporting stations and METAR time.


MODIFICATION PAGE

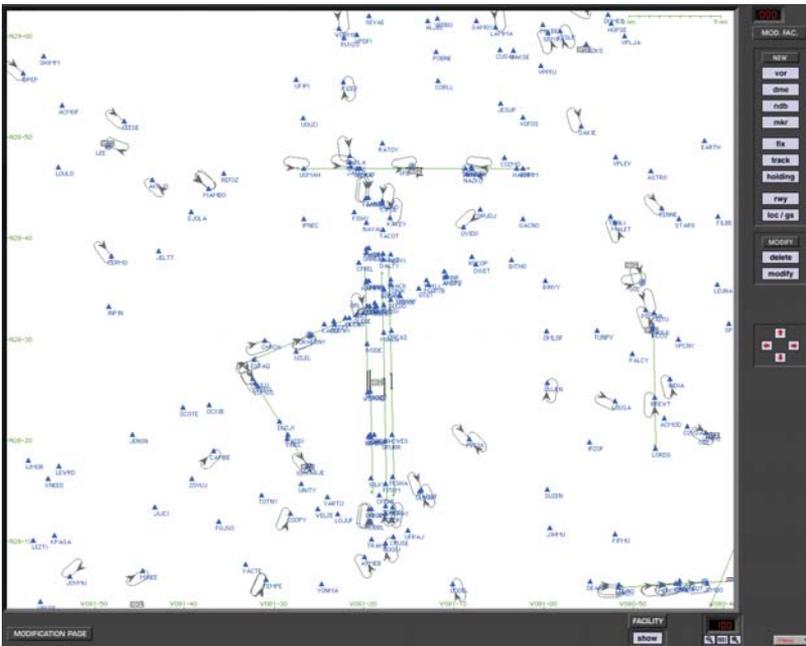

The MODIFICATION Page is used to add, delete or modify navigation data base facilities.

Fifty modifications/additions are possible for each navigation data base. The US is divided into nine areas or databases.

CONFIGURATION PAGE

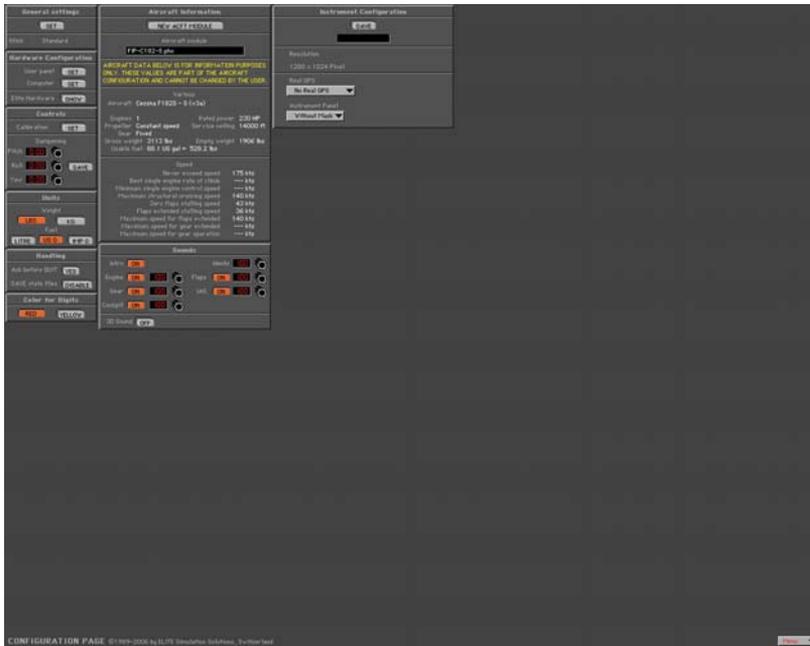


The CONFIGURATION Page is used to:

- set ELITE start up preferences
- adjust control sensitivity
- change units of measurement for fuel and weight
- turn sounds on/off; adjust volume levels
- calibrate flight control devices
- load new aircraft modules
- save instrument configurations where applicable.


Aircraft operational characteristics and limitations are also shown (but cannot be modified).

MAP PAGE

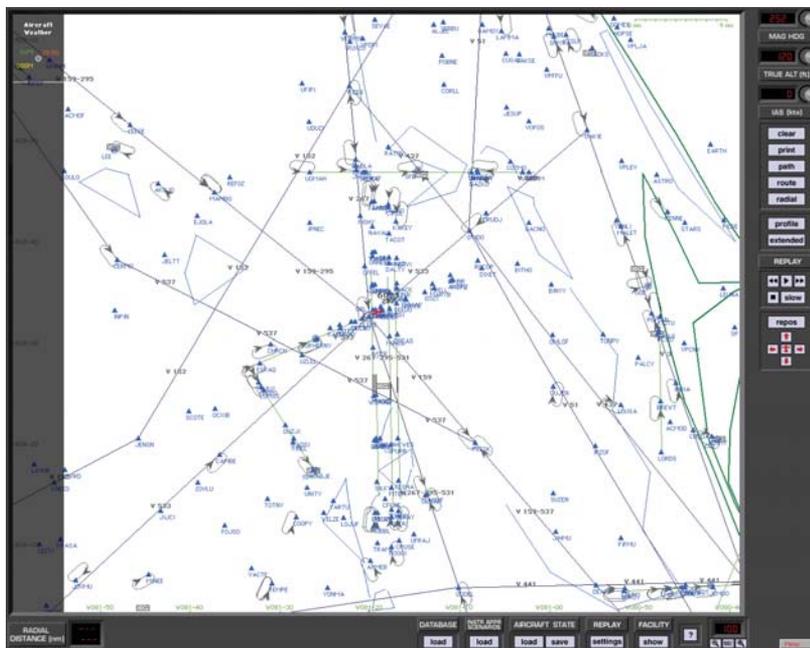

The MAP Page is a graphical representation of the flying area showing navigation facilities, frequencies, lat/long, runways, boundaries and much more. An aircraft symbol shows the flight path in real time (both horizontal and vertical profile views) that can be replayed, saved and printed for evaluation. Over 15 map features can be displayed at 8 separate zoom levels. The aircraft flight parameters (magnetic heading, altitude and IAS) can be set from the map page. In addition, you can also save and load training states or load Instrument Approach Scenarios (IAS).

CONTROL PAGE

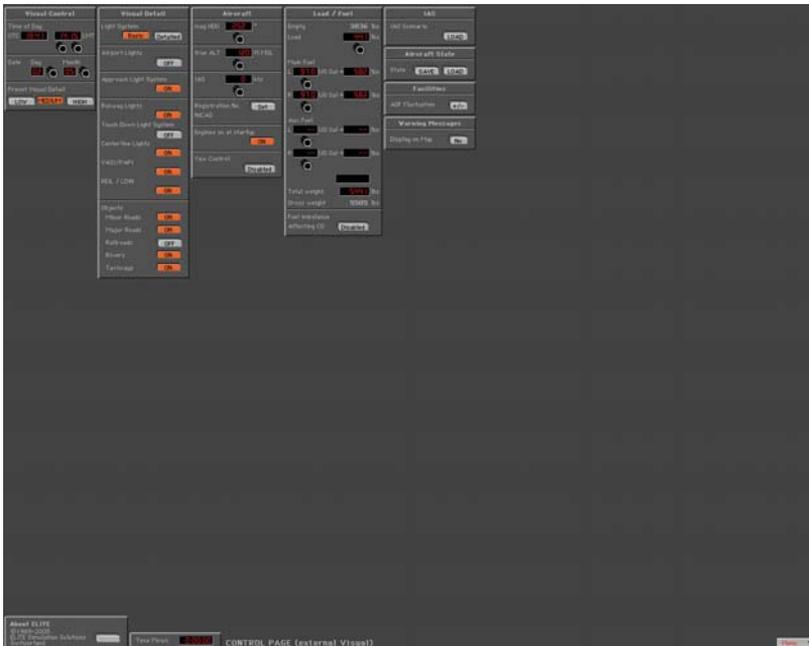

The CONTROL Page allows you to set date and time of day, airport lighting features and runway markings. Activate yaw control (for using rudder pedals), adjust fuel loading and aircraft weight configuration and call sign. Save and load training situations you created (training states) or load optional Instrument Approach Scenarios (IAS).

INSTRUMENT



Selecting INSTRUMENT brings you back to the chosen aircraft's instrument panel (cockpit).

FREEZE

The FREEZE selection suspends the simulation. Aircraft parameters (i.e. power settings, frequency changes, OBS selections, etc.) can still be changed and the Hobbs meter continues to run. When first entering ELITE, the program is in the FREEZE mode as indicated by a red MENU bar in the lower right corner of the screen. When FREEZE mode is released, the aircraft engine(s) will be ON.

QUIT

Selecting QUIT ends the program and returns you to the operating system.

PROGRAM FEATURES

MAP PAGE



MAP Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon, help is available for that item. Simply click on the item to display related help tips.

The MAP page is ELITE’s command center. Its use is primarily to setup the aircraft’s initial position for a given flight or procedure, monitor the flight path and to review the flight once you have finished flying. The MAP page allows the instructor to monitor the progress of a flight in real time.

Similar in appearance to an IFR Low En route chart, and laid out in approach plate-like format, the MAP page is familiar and easy to navigate. The main part of the MAP page displays the active (loaded) navigation region(s) and corresponding facility elements in plan (bird’s-eye)

view. Airports, runways, VORs, NDBs, airways, fixes, markers, DMEs, localizers, glideslopes, Flight Information Region (FIR) boundaries, country borders, comments and communication frequencies are all graphically and/or textually represented. Pressing the Profile button brings up a profile view (similar to the profile view on an approach plate). Other knobs, buttons, and data windows located around the periphery of the main map display are used to control the following items, discussed in detail later in this section.

- Aircraft HEADING
- Aircraft ALTITUDE
- Aircraft AIRSPEED
- Flight path CLEAR
- MAP Page PRINT
- Flight PATH save/load
- ROUTE save/load
- RADIAL (compass rose) display
- PROFILE view display
- Flight path REPLAY
- Aircraft REPOSition
- DATABASE (Nav region) load
- IAS (Instrument Approach Scenario) load
- AIRCRAFT STATE save/load
- REPLAY settings
- FACILITY display
- ZOOM

AIRCRAFT POSITION

The red aircraft symbol shows the actual aircraft position.



Geographical coordinates of the current view area appear in green and are located on the left side and bottom of the map for reference.



MAP SCALE

The actual scale of the Map is indicated on the top right of the screen. The scale appears in green.



The scale indication changes according to the actual MAP view level, which can be changed with the **ZOOM** function.

NAV DATA SYMBOLS

The following **Nav Data Symbols** are visible on the Map page.

-  FIX (with identification)
-  NDB (with identification)
-  VOR (with identification)
-  VOR DME (with identification)
-  DME (with identification)
-  Holding (with direction arrow)
-  Glide Path Track
-  Marker

-  Localizer (yellow) transmitter
-  Glideslope (red) transmitter
-  Runway with displaced threshold
-  Airport Symbol
-  Communication frequencies

MAP CURSORS

The **cursor** changes for different functions on the MAP page:


-  Normal cursor (fingertip)
-  Zoom in cursor (Alt Key)
-  Zoom out cursor (Shift-Alt)
-  Zoom limit (either enlarging or reducing)
-  Heading/Distance (Shift key)
-  Add point (Route planner) (Control key)
-  Remove point (Route planner) (Control-Alt)
-  Change/Move Point (Route planner)
(Shift-Control keys)
-  Active Runway

Click on the  box for other shortcuts.

MAP INFORMATION

All elements displayed on the MAP page contain information applicable to that specific element such as variation, frequency, runway length, width, lighting, etc. To access information regarding a specific MAP element, click and hold on it with the mouse. For runway information, click on the runway's threshold.

| | |
|----------------------------------|--------------|
| VOR DME <WIL> | 116.9 |
| Location: N47 10.783 E007 54.417 | |
| Variation: W01 | |
| Elevation: 2412ft | |

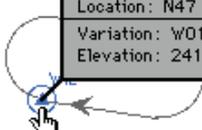

In the example above, several facilities nearly occupy the same location or are colocated. Information on these facilities is layered. Clicking the same spot repeatedly cycles through these layers to reveal information about each specific facility.

MAP BORDERS

Border types:


- Flight Information Region (FIR) borders appear in brown.
- Country borders appear in green.
- Waterways and lake boundaries appear in blue.
- States appear in gray.



REPOSITION

To easily reposition the aircraft to a specific airport and runway, click on the REPOS button located toward the bottom-right of the MAP page. A list of every airport in all


currently loaded NAV databases will be listed alphabetically by ICAO airport location identifier (LOCID).

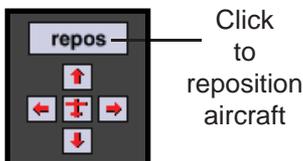

Choose:

If necessary, scroll until the desired airport identifier is visible. Select an airport and runway by clicking its identifier/runway combination. Notice that the airport/runway lat. lon. is now highlighted and the airport's name is indicated just below the scrollable viewing area. The example above shows Portland International (PDX) runway 10L selected. Click on **CHOOSE** to position the aircraft at the threshold of the selected runway.


Cancel repositioning by clicking on **CANCEL**. You will return to the previous display.

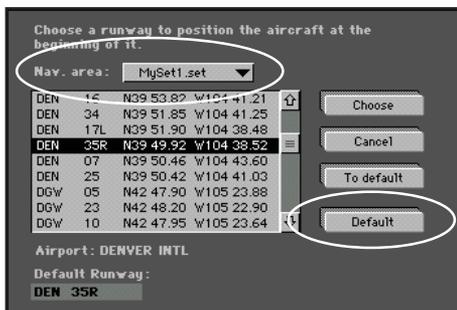

Default Runway:

If you have a preferred airport/runway that you would like to be positioned at each time ELITE is started, you can designate a “default” airport/runway combination as described here.

It's first necessary to select the specific NAV database (or NAVset) that the desired default airport/runway is located in. Click and hold the small black arrow on the right side of the panel next to “Nav area” to open a drop-down menu of loaded databases and NAVsets. Move the finger cursor over the desired selection and release the mouse button to select it. In the example on the previous page, we have chosen to use “MySet1” (see “Creating NAV Sets” on page 216.) Click on the airport/runway you would like to make the default, then click **DEFAULT**. Notice the airport identifier and runway selected (**DEN 35R**) now appear in the “Default Runway” box at the bottom-left. To actually go to the default runway now (or at any time in the future) simply click on **TO DEFAULT**. With a default airport/runway now saved, ELITE will automatically position the aircraft there on each subsequent startup (assuming the same NAVdatabase/NAVset used to select the default airport/runway is utilized).

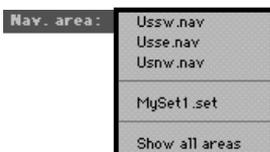

NOTE: You may choose one preferred (default) runway for each and every individual NAV database or NAVset. The default runway always remains associated with the NAV database or NAVset from where it was chosen. Since “MySet1” contained the USSW, USSE, & USNW databases, we could have chosen a default airport/runway for each individual database, in addition to the one created for the entire NAVset.

Manual Reposition:



It is also possible to reposition the aircraft manually by **dragging the aircraft symbol** to a new location.


Do this by clicking on the aircraft symbol and moving the mouse while holding the mouse button.

If the desired new location is *outside* the current visible MAP area, the MAP will start scrolling when the aircraft symbol is brought toward the edge of the screen using the method described above.

MULTIPLE ILS / DESELECTION


Many airports in the US have the same ILS frequency for both ends of the runway. For example, Runway 27 and runway 9 at XYZ airport may have 109.90 as the ILS frequency. If runway 27 is used for approaches, the tower will turn off the ILS transmitter for runway 9 to prevent any false ILS indications.

As within the real world, you must deactivate or deselect the unused ILS should there be an ILS frequency conflict. If you are flying the trainer in the vicinity of XYZ airport, tune the ILS and do not hear identifiers, this is due to the ELITE software not knowing which ILS on which end of the runway you want. Therefore you must deactivate the unused ILS by just a few clicks of the mouse.

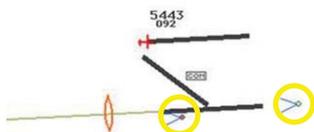


Notice TWO ILS antennas
as illustrated

To Deactivate the ILS

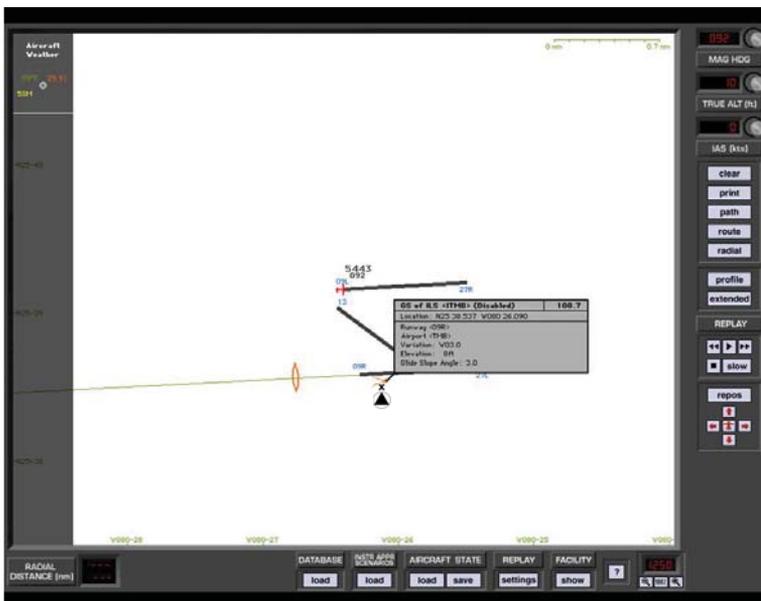

1. Select <ALT> and <J> simultaneously.
2. The “finger” pointer will change to the “select/deselect” icon. 
3. Using your mouse place the “x” over the apex of the ILS you wish to deselect and push the left mouse button. The ILS antenna icon will change color from blue to amber.
4. The navaid databox will display showing the ILS is disabled.

To Reactivate the ILS

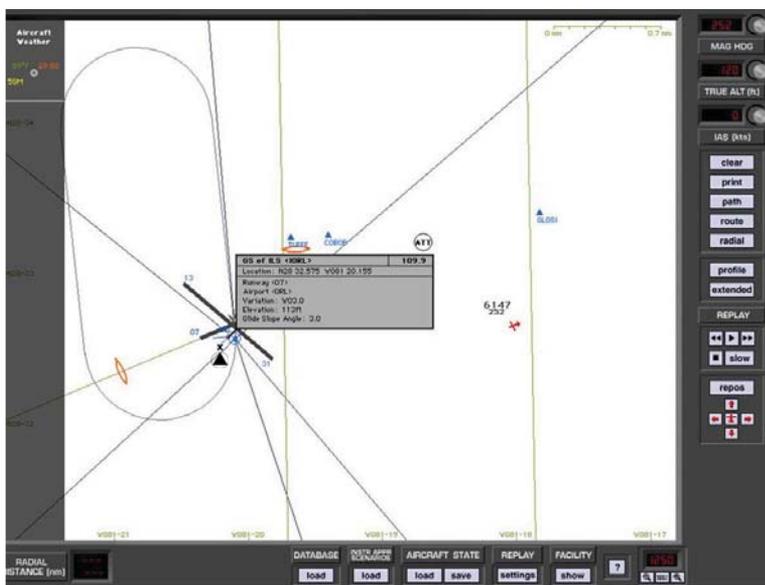

1. Select <ALT> and <J> simultaneously.
2. The “finger” pointer will change to the “select/deselect” icon. 
3. Using your mouse place the “x” over the apex of the ILS you wish to reactivate and push the left mouse button. The ILS antenna icon will change color from amber back to blue.


4. The navaid databox will display showing the ILS is now enabled.


AIRCRAFT SNAPPING

Bring the aircraft symbol near any runway threshold to “snap” to it. This will instantly place the aircraft on the runway threshold (at field elevation) of the runway “snapped” to. This is especially useful for quick repositioning from any location, altitude, heading, airspeed etc., to any specific airport runway. Although available at all ZOOM levels, this feature is much easier to use at HIGH (close-in) ZOOM levels, where the runway layout is clearly visible.

Map Scrolling:

Similar to the MAP scrolling described above while dragging the aircraft symbol, it's also possible to scroll the MAP view without dragging the aircraft symbol. This is accomplished by clicking anywhere on the **MAP page** NOT occupied by a facility or MAP element, and dragging the cursor (fingertip) toward the edge of the visible display. Scroll speed is controlled by varying the distance of the cursor to the edge of the screen and is dependent on the amount of data to be moved. The four “arrow buttons” (**UP, DOWN, LEFT, RIGHT**) located at the bottom-right of the display, and the cursor keys on the keyboard can also be used to scroll the visible MAP view. If your scrolling takes you away from the current aircraft position (i.e. to explore the surrounding area) and the aircraft is no longer visible, you can quickly locate the aircraft and re-center the MAP to it by clicking the red aircraft symbol surrounded by the four arrow buttons or pressing the “c” key on the keyboard.

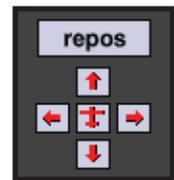

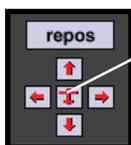Centering:

Click to
locate
aircraft



CTRL - click
to bring
aircraft to
MAP center

Conversely, it is possible to move the aircraft to where you have scrolled. Hold down the **CTRL** (control) key on the keyboard and click the red aircraft symbol or just use the key combination (**CTRL-C**) by itself. The aircraft will be brought to the center of the present map view. Following aircraft repositioning, Heading, Altitude, and Airspeed can all be adjusted.

MAP ZOOM LEVELS

Displays current ZOOM level controlled by I (in), O (out), and N (normal) keys respectively or “magnifying glass” buttons. When you first enter the MAP page, the display will be in normal zoom level, defined as the 100% view. Click on the **ZOOM IN** (🔍) or **ZOOM OUT** (🔍) buttons to increase or decrease the zoom level. The zoom percentage is indicated on the display relative to the 100% view level.

Custom ZOOM

You may zoom directly to an area of your choice (custom ZOOM) by tracing a rectangle around the perimeter of the area to be ZOOMed. Hold the ALT key then click-and-drag to create an outline around the desired area. Release the mouse button for the new ZOOMed view.

Storing custom ZOOM Level:

You can store one custom ZOOM Level in addition to the preset ZOOM Levels (1, 5, 25, 50, 100, 250, 800, 1250). To store a custom ZOOM Level:

1. Select the area you would like to ZOOM on by holding down the ALT key and drawing a marquee around the desired area.
2. CTRL-Click in the ZOOM level window to store the custom ZOOM level created in previous step.
3. To ZOOM to this stored level again simply click in the ZOOM Level display window.

This custom ZOOM Level can be changed anytime by simply following the procedure above to overwrite with a new value.

NOTE: ZOOM level cannot be increased beyond 1250% maximum. With ZOOM level at maximum you will NOT be able to marquee a selection area to ZOOM in further. Marquee selection and ZOOM IN are disabled when maximum ZOOM level is reached. The ZOOM function is screen centered, NOT aircraft centered. If the aircraft is not in the center of the MAP page and you ZOOM IN, the aircraft may be temporarily "lost." To "find" the aircraft and re-center the MAP page to it, click on the red aircraft symbol located near the bottom-right of the display.



SHOW FACILITIES



Click on the **SHOW** button for the "Show Facilities" dialog box. Specific map details are displayed dependent

upon ZOOM level. At high ZOOM levels for example, markers are visible and runways labeled with their magnetic direction. At lower ZOOM levels, certain map elements (facilities) are not displayed to prevent clutter and maintain map readability.

| SHOW FACILITIES | | | | | | | | |
|------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| | 1 | 5 | 25 | 50 | 100 | 250 | 800 | 1250 |
| ZOOM LEVEL IN % | | | | | | | | |
| VOR | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| DME | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| NDB | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| MARKER | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| FIX | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| TRACK | <input type="checkbox"/> |
| AIRPORT | <input checked="" type="checkbox"/> |
| RUNWAY | <input checked="" type="checkbox"/> |
| LOC/GS | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| COMMUNICATION | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| HOLDING | <input type="checkbox"/> |
| V-AIRWAYS | <input checked="" type="checkbox"/> |
| V-AIRWAY IDS | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| J-AIRWAYS | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| J-AIRWAY IDS | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| COUNTRY BORDER | <input checked="" type="checkbox"/> |
| EXT. COUNTRY BRD | <input checked="" type="checkbox"/> |
| WATER | <input checked="" type="checkbox"/> |
| COMMENTS | <input checked="" type="checkbox"/> |
| METAR | <input checked="" type="checkbox"/> |

| MISC | |
|---|--|
| TRANSPONDER ID | <input checked="" type="checkbox"/> SHOW |
| Aircraft Info | <input checked="" type="checkbox"/> SHOW |
| <input type="button" value="STANDARD"/> <input type="button" value="CANCEL"/> <input type="button" value="OK"/> | |

NOTE: You may determine which MAP elements (facilities) are displayed for corresponding ZOOM levels.

Click on the appropriate buttons to activate or deactivate the information to be shown in each ZOOM level. Yellow buttons indicate an active button.

- Click OK and your selections will take effect.
- Click CANCEL to return to the Map with no changes.
- Click STANDARD for a preset of active facilities.

TRANSPONDER TAG



In addition to the standard MAP elements (NAV facilities, airports, land borders, etc.) ELITE has the ability to display an information data block (transponder tag) that moves with the aircraft symbol. This tag is similar in appearance and function to one that might be found on an ATC radar scope. To enable this feature click on the TRANSPONDER ID **SHOW** button (it should turn yellow) located at the bottom of the **SHOW FACILITIES** dialog box. Although this tag will be visible anytime the MAP Page is called up, users with an instructor's station (multi-monitor system) can observe it updating in real time as would an air traffic controller. Instructors can use this feature to aid in monitoring a student's flight progress by verifying the correct transponder code, heading, and altitude assignments.

The tag itself will appear dark-gray in color when the transponder switch is in the OFF or SBY (standby) position. With the switch in the ON position the tag will turn green (after sufficient time has elapsed for warm up). The tag will turn red when the **IDENT** button has been pressed.

The data block consists of two lines with a total of three fields. The upper line is the 4-digit transponder squawk code. The lower line displays the aircraft *magnetic* heading and *indicated* altitude fields respectively. Note that the altitude will NOT appear unless the transponder switch is in the ALT (Mode-C) position.

MAP PAGE “SPOT WEATHER” FEATURE

The spot weather feature allows you to view the current WX conditions that exist at the aircraft's present position. The spot weather feature is especially handy when an

instructor's station is being used as it allows the "instructor" to quickly ascertain the WX at any given moment without having to change screens and thus maintain uninterrupted monitoring of the student's flight. Outside air temperature (OAT), visibility, pressure, and wind will be displayed in a format similar to the "station model" symbology found on Surface Analysis charts. Please note that the reported pressure is the actual ambient pressure (not altimeter setting) at the aircraft's current altitude. Wind speed and direction are displayed graphically using a barb and flag system (see figure on page 119) connected to a "pole" that points in the direction FROM which the wind is blowing relative to True North. In the following example, the aircraft is at 3500 feet, wind is from the southeast at 15 knots, OAT is 47° Fahrenheit, ambient pressure is 26.34 inches, and visibility is 25 statute miles. Note that unlike the station model used on Surface Analysis charts, no sky cover information is provided.



To turn ON/OFF aircraft spot weather simply click the FACILITY "show" button at the bottom of the MAP Page. On the "Show Facilities" dialog box click on the Aircraft Info "SHOW" button. This button is an ON/OFF toggle that will turn yellow when pushed in (ON). The spot weather data appears at the upper-left corner of the MAP Page at the top of the shaded information display region.


NAVIGATION DATABASES

All airports, airport lighting, fixes, NDBs, VORs, localizers, glideslopes, communications data etc. are contained in

regional navigation databases. This data must be loaded for use in the program.

To understand the structure of the NAV databases, press the ZOOM out (🔍) button several times until an entire continent is visible. Using North America (shown below) for example, notice there are boxes visible across the U.S. that define the regional boundaries of each NAV database. From this same view you can also determine if a specific NAV database (region) is loaded. Gray boxes indicate data is available but not loaded. Red boxes indicate the data within its boundary is loaded and ready for use.

*Note: Each NAV database (region) is labeled for identification. The label (USNW) shown below is for the **United States North West**.*

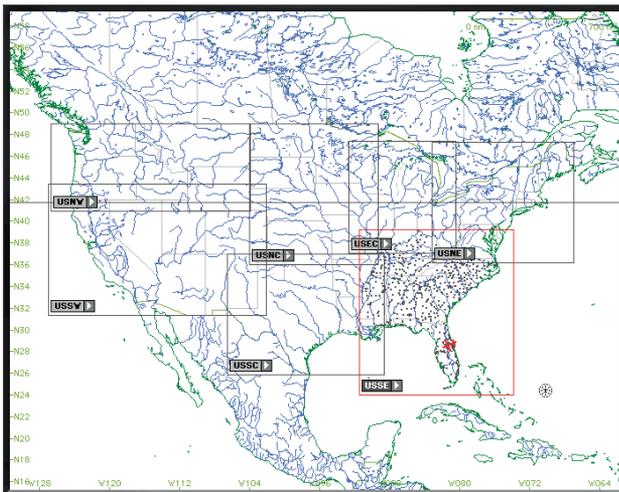

NAV DATA Disclaimer: We do our best to ensure the accuracy of the NAV data in the software. Unfortunately, inaccuracies originating from the data source are beyond our control and may be encountered at some point over time in the normal course of using the product. If you do encounter data that you feel is in error please make a note and let us know. The more information you can gather about the specifics of your experience, the better.

Make note of data that is suspected missing, inaccurate, erroneous, or otherwise anomalous and notify us with the details. Thanks!

Click and hold for info  Click and hold for database options

Click and hold the mouse on **USNW** part of label for detailed information on that database.



Loading NAV Data:

Click and hold on the arrow symbol part of the label. Move the cursor to Load Database and release the mouse button. When data has successfully loaded, the gray boundary box will turn to red. Click on arrow symbol once again and notice that **Load Database** is now grayed out and no longer available for selection but you can choose to release it (to free memory) or unlock it for modification (to be covered later).




NOTE: Multiple NAV databases (regions) can be loaded simultaneously as desired. To load multiple databases, repeat the process described previously for each additional database.

Changing NAV Data:


Navigation databases can also be added or changed quickly by clicking the **DATABASE LOAD** button



at the bottom of the MAP page. Choose a NAV database from those listed by double-clicking on its name, OR by clicking on its name then clicking **OPEN** to load. Databases NOT listed, which are located in other directories/folders, may also be used by navigating the correct path to locate them.

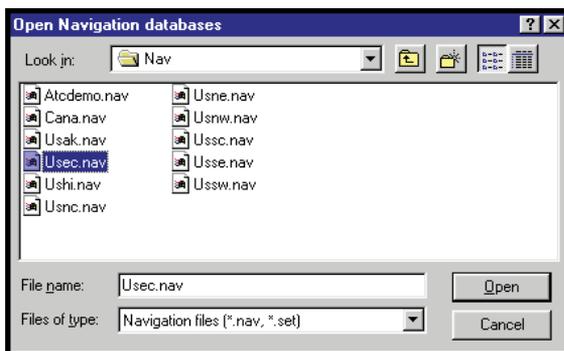

Following the **Open Navigation Databases** window, another smaller pop-up window will appear giving you the option to choose either add or replace. To Add the selected database to those already loaded, click on **ADD**. To replace a currently loaded database with the selected one, click on **REPLACE**. Click **OK** to complete the operation.

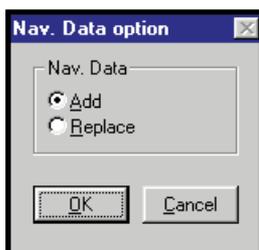


*NOTE: The last database loaded with the **Load** function is kept in memory and also used at the next startup.*


Creating NAVsets:

As stated earlier, multiple NAV databases (regions) can be loaded simultaneously. These databases can then be

saved collectively as one custom NAVset. You can save as many custom NAVsets as disk space will allow. Hold down the **CTRL** (Control) key on the keyboard and click on the **DATABASE LOAD** button to display the following window:

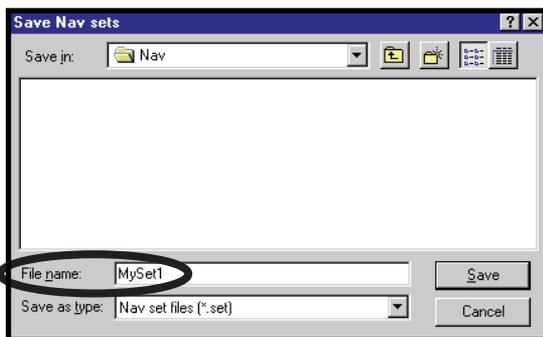

You now may save all currently loaded databases as a NAVset. Type in a name for the NAVset and click **SAVE**. In the example above, we first loaded the USNW, USSE, & USSW database regions, then saved them as one custom NAVset named "MySet1." This NAVset will now appear with the other available databases and NAVsets at program startup. It will also be available for loading from the **Open Navigation Databases** window described earlier.

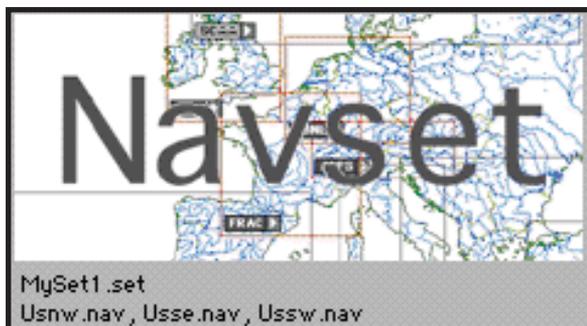

INSTRUMENT APPROACH SCENARIOS (IAS)

The Instrument Approach Scenarios (several add-on regions available) are scripted approach exercises flown in a simulated ATC environment. Each scenario begins

with the aircraft at a predetermined altitude and generally positioned 15-20 miles from the IAF (Initial Approach Fix) of the selected approach.

One sample scenario is included with each ELITE package (an ILS approach into Champaign-Urbana, Illinois). The approach plate for this demo scenario can be found in the supplements section at the back of this manual or in the ELITE "Manuals" folder on your computer.

To load an Instrument Approach Scenario simply click on the "INSTR APPR SCENARIOS" load button at the bottom of the MAP Page.



If necessary, open the appropriate IAS folder (EC3, SE3, etc.) for the region you would like to fly in. Select and open the desired Instrument Approach Scenario from those listed. NOTE: A description of each scenario can be viewed (before it is opened) by highlighting any scenario file name with a SINGLE MOUSE CLICK. Follow on-screen dialog box instructions to start scenario.

Important IAS notes:

Make sure to load and/or verify that the appropriate Navigation Database (IASSEC3, IASSE3, etc.) is active before using the Instrument Approach Scenarios. For example, to fly a scenario in the EC3 (Illinois/Wisconsin) IAS package, make sure to load the IASEC3 database.

The autopilot is ON by default at the start of each scenario. Keep the autopilot ON briefly to let the aircraft stabilize. After the aircraft stabilizes you can continue to fly the scenario utilizing the autopilot or you can disengage the autopilot and fly the aircraft manually.

Approach plates for the Instrument Approach Scenarios can be accessed by clicking on the appropriate approach plate icon on your desktop. The plates are in Adobe Acrobat® format (.pdf) and can be printed for more convenient use.

Whenever the program requires your attention you will hear a series of alert tones. When these tones are heard, direct your attention to the information display area along the top of the screen for more information.

CTRL-R

Press CTRL-R to repeat the last ATC transmission directed at your aircraft. Your aircraft identification throughout the scenarios will always be N054EG. Listen carefully for this call sign and follow ATC's instructions to properly execute the approach.

CTRL-K

Press CTRL-K to acknowledge and/or answer a request from the program. One example of this might be if a controller asks you to "report field in sight." Since there is no way to actually converse with the virtual controllers, CTRL-K is used by the program as a communication trigger. This is similar to a quick double-click of a push-to-talk switch in a real aircraft (sometimes requested by ATC to verify communication).

CTRL-S

Press CTRL-S to **disable** the automatic setting of radios by the virtual instructor (see next section).

Instructor Help:

At the beginning of the each scenario the program will ask if you would like to have the help of an instructor. By answering "yes" to this option you will be inviting a virtual instructor into the cockpit. The virtual instructor will act more like the copilot or PNF (pilot not flying) in these scenarios,

setting up essential radios and thus taking some of the workload. The virtual instructor will also provide tips along the way when appropriate which, will be displayed at the top of the screen in the information display area. Always make sure to stay in the loop and check the inputs of the virtual instructor!

STATE PANEL



The state panel makes it possible to save and load aircraft "state" files. You can think of state files as a way to take a "snapshot" of the aircraft's state at any given moment in time. When you save a state file the aircraft's position, altitude, heading, airspeed, etc. are stored along with current avionics settings (frequencies, auto pilot configuration, etc.). In addition, you have the option of storing Navigation, Meteo (weather), and Malfunction data as well. The saved state file can then be loaded at anytime in the future and instantly position the aircraft where it was (with the same settings) when the file was saved. State files are very useful when you want to practice the same approach, procedure, flight, or situation repeatedly. Individual pilots and instructors often create a library of state files, which allow them to conveniently return to a desired "lesson" without having to setup the aircraft again manually.

State files can be saved at any time. Before saving a state file make sure that the aircraft is set up just the way you want it. Once everything is to your liking be sure to name the state file something that will be meaningful now and in the future. A good naming convention is to include an airport identifier or nearby Navaid and brief description such as "ORL ILS RWY 7 Low Ceilings." Even if you haven't

loaded this file in a while it will be easily identified as the ILS approach into Orlando Executive's runway 7 (with low ceilings). This is much better than "My first ILS."

HEADING PANEL

Click in
window for
reciprocal
heading



Aircraft **Heading** can easily be changed with the **MAG HDG** panel. Magnetic heading in degrees is displayed in the window next to the heading adjust knob. To change it, click and drag on the heading adjust knob until the desired value is indicated. Notice the red aircraft symbol on the **MAP** page turns as heading is changed to reflect the actual indicated value. Click in the **Heading** window to instantly get the reciprocal of the displayed value.

ALTITUDE PANEL

Aircraft **Altitude** can easily be changed with the **TRUE ALT** panel. Altitude in feet (MSL) is displayed in the window next to the altitude adjust knob. To change altitude in 10 foot increments, click-and-drag on the altitude adjust knob until the desired value is indicated.



Single-click
for 500 foot
increments


To change altitude in 500 foot increments, first single-click on the altitude adjust knob. The knob will push in. Click and drag on the altitude adjust knob for changes in 500 foot increments. The knob will reset in 5 seconds if there is no activity, or you can click on it a second time to reset it. Upon reset, the knob will pull out to its normal position and revert back to 10 foot increment adjustment.

AIRSPPEED PANEL



Aircraft **Airspeed** can easily be changed with the **IAS** panel. Indicated airspeed in knots is displayed in the window next to the airspeed adjust knob. To change it, click and drag on the airspeed adjust knob until the desired value is indicated. Airspeed changes usually require some re-trimming of the aircraft upon switching back to the instrument panel. Set airspeed with attention to the particular aircraft's V-speeds. Speeds appropriate to the desired flight condition should be selected. Keep in mind that it is possible to dial in speeds near or below stall.

PROFILE BUTTON

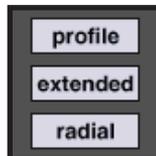

Clicking the **PROFILE** button brings up the MAP profile. Similar to the profile view on an instrument approach plate, the MAP profile is a side view plot of aircraft altitude and flight path over time. The **PROFILE** button functions as a toggle switch turning the display ON/OFF. The display also contains distance marks corresponding to the DME station selected (when applicable) and shows the nominal glidepath when an ILS station is tuned in.

Profile View Options:



The **MAP profile view** provides several options for varying display presentation. These options let you tailor the appearance of the profile display allowing for improved flight analysis. The four buttons located at the bottom-right of the MAP profile display control these options.

Glideslope Limits:

The “**G**” (**glideslope limits**) button toggles the glideslope limits overlay ON/OFF. This overlay graphically represents the electronic glideslope signal limits of the specific approach flown. The “**G**” button and glideslope overlay only become available after the proper ILS frequency has been tuned in and the approach begun. Color coding is used to represent course deviation as follows:

Yellow lines = half-scale, Red lines = full-scale

Altitude Grid:

The “**A**” (**altitude grid**) button toggles the altitude grid lines. These lines are used in conjunction with (and are extensions of) the altitude scale markings on the right side of the profile display.


Profile Scroll:

The two **arrow** buttons are used to scroll the profile view left and right respectively, and operate independent of the main MAP view.


In combination with the four buttons pictured above, use the ZOOM functions (previously explained) to get more detailed MAP profile views. While LOW (distant) ZOOM levels are better for viewing the big picture, HIGH (close in) ZOOM levels are good for showing minute flight path and airspeed deviations.

Profile View Examples:

The following example profiles demonstrate several of the different view options described in the previous section. The profile was created flying the ILS RWY 7 approach into Orlando Executive (ORL) airport. For illustration purposes, the glideslope was tracked to the non-precision Minimum Descent Altitude (MDA) and NOT to Decision Height (DH). A level-off at MDA and subsequent missed approach was started shortly thereafter.

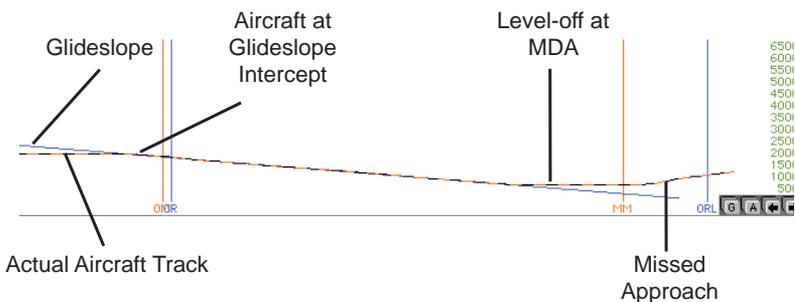


Profile view of ILS RWY 7 approach into Orlando Executive airport.

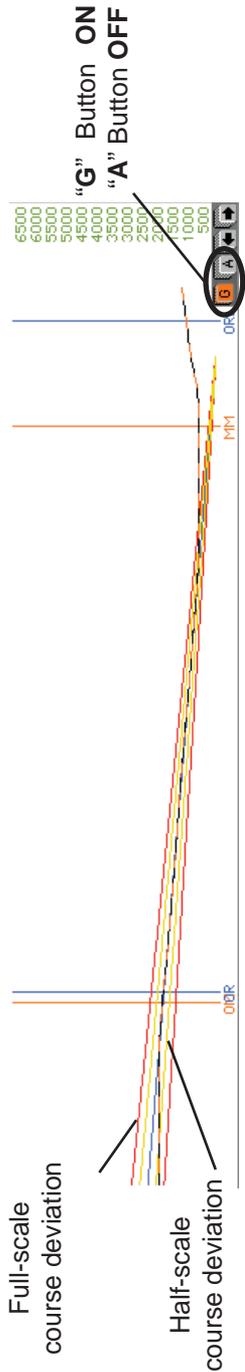


Two more profile views of the ILS RWY 7 approach into Orlando Executive airport.

Top: Profile view with glide slope limits overlay turned ON.

Bottom: Profile view with altitude grid lines turned ON.

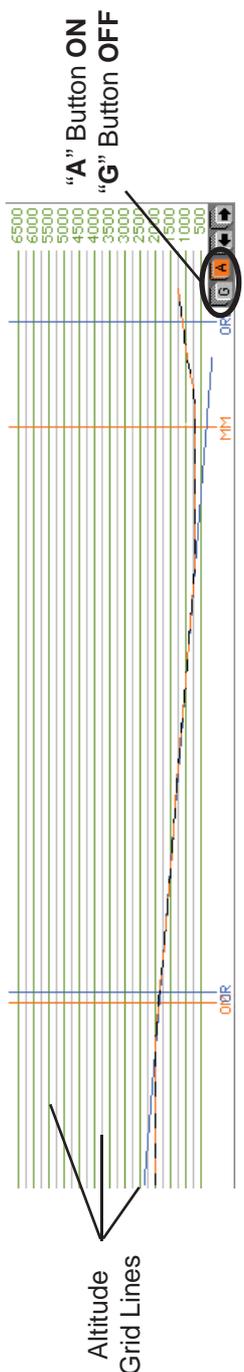

(on the main MAP screen) to the place on the aircraft track corresponding to the selected profile location clicked on. Accompanying the red aircraft symbol is the **ACFT Information** box with data on location, altitude, heading, airspeed, vertical speed, gear and flap positions.

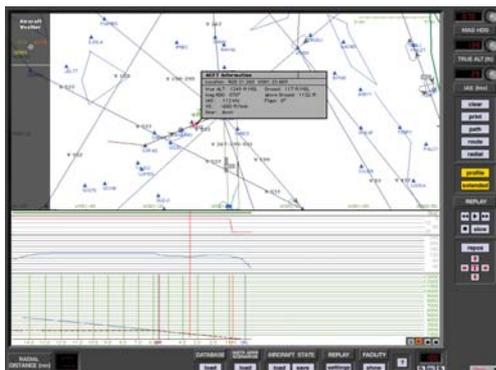



The red aircraft symbol and **ACFT Information** box are displayed as long as the mouse button is held inside the MAP profile.

NOTE: The "ACFT Information" box is not available during flight path replay.



Radial Button

The **Radial** feature allows you to place a compass rose around any FIX or NAVaid facility in the database. Before clicking the **RADIAL** button look at the BEARING TO or RADIAL and DISTANCE windows near the bottom-left of the MAP screen. They should both have dashes in them. Now click the **RADIAL** button then click on any FIX or NAVaid in view on the MAP. ELITE instantly draws a compass rose around the selected FIX or NAVaid. Notice at the same time that the dashes located next to BEARING TO or RADIAL and DISTANCE have been replaced by actual values. Click and drag the red aircraft symbol to different positions and watch the values change in these windows to reflect the actual BEARING TO or RADIAL (from) and DISTANCE

relative to the selected FIX or NAVaid. This feature displays the exact aircraft location relative to the selected FIX or NAVaid and is helpful for quick, easy, and precise aircraft positioning. In addition, simple aircraft orientation can be demonstrated without “flying” or leaving the MAP page. To toggle BEARING TO or RADIAL indication, just click on the value displayed inside the adjacent window. In the example below, the compass rose is visible around the selected (UBG) VOR.

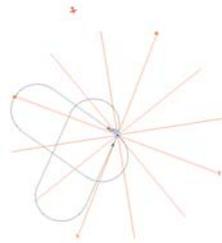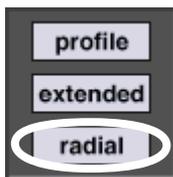

Click inside window to toggle BEARING TO / RADIAL

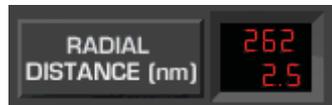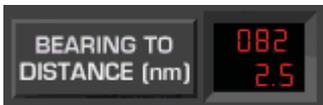

Virtual Flight Data Recorder



VCR style buttons control playback of the Virtual Flight Data Recorder (VFDR).

Replay:

As you fly, ELITE continuously records your progress with an integrated virtual flight data recorder (VFDR). All recorded flight parameters are accessed via the MAP

page. Flight path and profile, gear/flap position, airspeed, altitude and heading are all shown and available during the course of your flight. This same data can then be used to replay the last 60 minutes of the flight or saved as a “path” file for replay at any point in the future.

Play/Pause Button:

CLICK to START replay. **CLICK** again to PAUSE replay. Replay can begin at any point in the recorded flight path. Select a different Replay start point by moving the red aircraft symbol using the Rewind and Fast-Forward buttons.

Rewind Button:

CLICK-AND-HOLD to move BACKWARD through recorded flight path. **DOUBLE-CLICK** to jump to BEGINNING of recorded flight path.

NOTE: Profile and extended profile data traces will still be plotted from left-to-right even when rewinding.

Fast-Forward Button:

CLICK-AND-HOLD to move FORWARD through recorded flight path. **DOUBLE-CLICK** to jump to END of recorded flight path.

Slow Button:

CLICK to SLOW replay speed.

Stop Button:

CLICK to STOP Replay.

NOTE: The “ACFT Information” box is not available during flight path replay.

Flight With Instruments On Map


Cockpit instruments can be displayed on the MAP page for real time reference and/or flight path replay and review. Real time instrument display is especially useful

for systems with a “remote” Instructor’s Station that is not in close proximity to the main system. Systems such as those with an enclosure often have the Instructor’s Station physically located outside of the cockpit environment entirely. Installations with a remote Instructor’s Station are common and often purposely designed to prevent the student from “peeking” at the Instructor’s Station monitor (otherwise known as the Instant Situational Awareness Indicator). Such systems require an instructor to have to look some distance over-the-shoulder of the student if he/she wants to observe the instrument presentations. By having the instruments displayed on the MAP page this problem is eliminated. The instructor no longer has to worry about the proximity of the Instructor’s Station to the main system and can easily monitor the flight by concentrating solely on the MAP page.


In addition, both student and instructor can review a recorded flight on the MAP page with an enhanced total picture having the MAP and instrument presentations displayed as the flight is replayed back.

REPLAY feature / REPLAY options button:

The first time the REPLAY feature is used an “Initial settings for Replay functions” dialog box will appear. This box specifically relates to, and is used to define, how the instruments will be displayed on the MAP page.

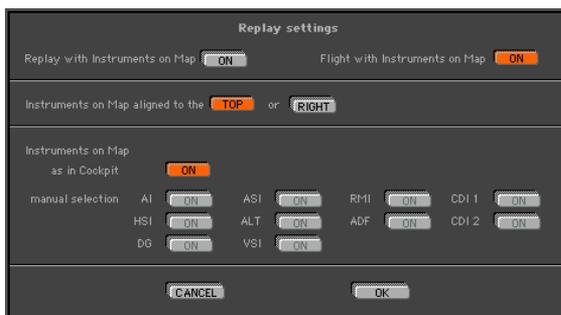


Path Button

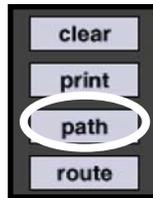

Flight path and associated data recorded by ELITE's VFDR can also be saved in a path file. The number of path files stored is limited only by available disk space. These stored path files can be loaded at any time in the future and then displayed and/or replayed on the MAP page for analysis.

Click the **PATH** button to bring up the following box:

Save:

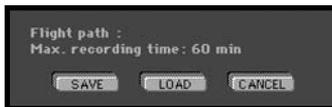

To **save** the flight path just flown, click the **SAVE** button to bring up the **Save Path files** window. Type a name in the "File name:" box ("BCRWY25" in the example) for the flight path file then click **Save** to complete the operation.



Load:

To **load** a flight path, click the **LOAD** button and select a path from the previously saved paths listed.

Clear:

The **CLEAR** button clears the flight path from the **MAP** page and deletes all associated flight path data from memory.

ROUTE BUTTON



Similar to the flight path files discussed in the preceding section, you may also save a self-created route into a Route file by using the **ROUTE** button. Routes are explained further on in this chapter.

PRINT BUTTON



Clicking the **PRINT** button captures an image of the **MAP** page. Once captured, you can then print the image or save it to disk for viewing later. Set **MAP ZOOM** level and select **PROFILE** as desired to “customize” the **MAP** to your taste before clicking the **PRINT** button.

Print:

To print the **MAP page** click **PRINT** and follow the print dialog boxes specific to your operating system.

Save:

To save the **MAP page** image, click **SAVE** and type a name for the graphic file. The graphic will be saved as a **bitmap** (.bmp) file

HEADING / DISTANCE CURSOR

E6B-style calculations can be displayed using the **TIME / SPEED / DISTANCE** feature. To display magnetic track, heading, distance and time from the red aircraft symbol, to any point in the selected NAV database:


Hold down the **SHIFT** key on the keyboard.

The **TIME / SPEED / DISTANCE** cursor appears

Click and hold anywhere on the Map page. An orange course line representing the desired track from the aircraft symbol to the selected point will appear. In addition, the **TIME / SPEED / DISTANCE** information box appears as shown on the next page.

The upper portion of the **TIME / SPEED / DISTANCE** information box contains the actual location of the aircraft and selected point (mouse position) displayed as coordinates in degrees lat/lon.

The lower portion of the **TIME / SPEED / DISTANCE** information box contains magnetic track, aircraft heading, wind speed/direction, distance, ETA, and groundspeed.

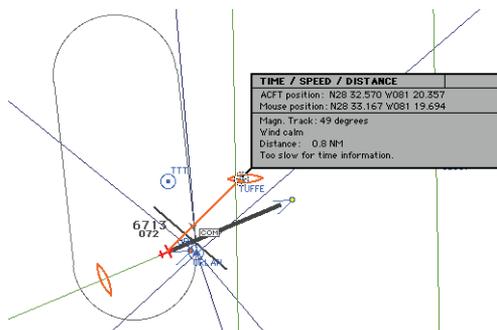


NOTE: Heading shown (course corrected for wind) incorporates wind correction angle (WCA). This is NOT necessarily the aircraft's current heading, but rather the heading required to maintain the desired track across the ground.

Time (ETA) shown is calculated from the aircraft position to the selected point based on groundspeed.

NOTE: Change wind settings on the METEO page to see the effects of different winds on ETA, heading, and groundspeed. You can also observe the effects of differing aircraft speed and/or altitude in a similar manner. Simply change values in the IAS (kts) and True ALT (ft) panels respectively to have the TIME / SPEED / DISTANCE information box figures recalculated.

ROUTE PLANNER

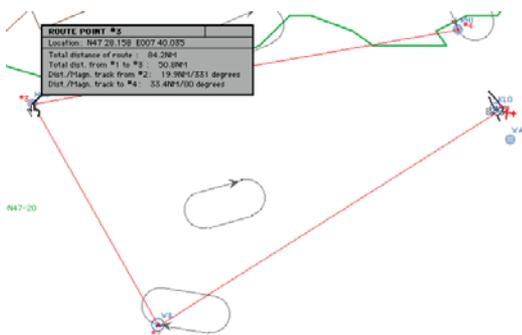

The route planner is a special tool for quick flight planning. Use the keyboard commands described on the next page to design a route.

Add Point:

Push the **CTRL** (control) key on the keyboard and the cursor changes to “add point.” Click on any location from which you will start your route and you get the first route point #1. The next click displays route point #2 and so on, until you release the **CTRL** key. To add a point between existing points, click on the route line itself.

Remove Point:

Push the **CTRL & ALT** keys on the keyboard and the cursor changes to “delete point.” Click on any route point

you want to remove from your route and it disappears while the other route points renumber.

Move Point:

Push the **CTRL & SHIFT** keys on the keyboard and the cursor changes to “move point.” Click on any route point you want to move and drag it with the mouse to another location. Release the mouse button and changes take effect.

Route Info:

Click and hold on individual route points to get route and leg information. Point coordinates, as well as track and distance information are displayed in an accompanying window as long as the mouse button is held down.

SHORTCUTS

To display the **Shortcuts Information** window, click on the “?” button. The **Shortcuts** window will open and display all shortcuts (key combinations that enable certain functions).



| SHORTCUTS | | |
|---|--|--|
| MAP SCREEN : | | |
| Zoom | | |
| I | In | |
| O | Out | |
| N | Normal view | |
| ALT + Click/Drag | Zoom In | |
| ALT + Shift + Click | Zoom Out | |
| Scroll | | |
| Left arrow | Left | |
| Right arrow | Right | |
| Up arrow | Up | |
| Down arrow | Down | |
| Custom Zoom | | |
| Control + Click in 'Zoom level window' | Store actual zoom level | |
| Click in 'Zoom level window' | Set stored zoom level | |
| Runway | | |
| ALT + 'A' and click on runway | Manually select active runway | |
| ALT + 'A' and click off runway | Deselect manually selected active runway | |
| Taxiway | | |
| Click and hold on aircraft / press 'ALT' and drop on runway end | Reposition aircraft on taxiway parallel to runway | |
| Click and hold on aircraft / press 'Shift' and drop on runway end | Reposition aircraft on taxiway perpendicular to runway | |
| GENERAL : | | |
| Visual | | |
| T | Look down | |
| G | Look center | |
| B | Look up | |
| Shift + Left arrow | Look to left | |
| Shift + Up arrow | Look to front | |
| Shift + Right arrow | Look to right | |
| Control | | |
| ALT + F | Freeze | |
| ALT + Q | Quit | |
| ALT + H | Help | |
| Simulation speed | | |
| S | Slower | |
| F | Faster | |
| Engine sound | | |
| E | On/Off | |
| Click the mouse button to continue. | | |

GenView Specific Shortcuts

Placing aircraft abeam the runway threshold on parallel taxiway:

Click-and-hold on aircraft symbol / press ALT and “drop” aircraft on runway threshold.

Placing aircraft perpendicular to runway threshold in a “hold short” position on taxiway:

Click-and-hold on aircraft symbol / press SHIFT and “drop” aircraft on runway threshold.

Manual selection of “active” runway toggle:

An active runway is normally selected automatically by the software based on aircraft orientation and distance from a given runway. Once the active runway has been determined, runway lights are turned ON for that runway. You can however override this automatic selection by manually selecting the active runway following the procedure below.

Press ALT-A to engage or disengage mode. Once engaged, enables you to manually select ELITE's “active” runway by clicking on the threshold of desired runway (runway color changes to green to identify that it is active). You can change your selection as many times as you like while the manual selection mode is engaged. Manual selection mode will stay engaged until ALT-A is pressed again. Only one runway at a time can be “active.” To deselect a manually selected active runway press ALT-A (if not already in manual selection mode) and click anywhere on the MAP page NOT occupied by a runway.

Summary:


1. ALT-A to engage manual selection mode
2. Click on runway threshold as desired to make "active"
3. Change runway selection as desired
4. Deselect by clicking anywhere off the selected runway
5. ALT-A to disengage manual selection mode

Airport Frequency Information

COMM (communication) & NAV (navigation) frequencies for associated airports and NAV facilities are in the database. As described earlier in the chapter, the **MAP page** also functions as a virtual A/FD (airport/facility directory). Click and hold on the **COM** symbol in the center of the runway complex. A **Communication** box will come up displaying information and number of frequencies available at this airport.

Frequency Column:

While holding down the mouse button, move the cursor to the SHOW corner located at the top-right of the **Communication** box. All frequency information available for the airport will be displayed as shown below.

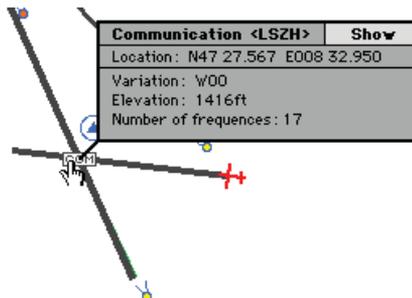

Following is some of the information that may appear in the Frequency Information display.

| | |
|-----|--|
| ACC | Area Control Center |
| ACP | Airlift Command Post |
| APP | Approach Control |
| ARR | Arrival Control |
| ATI | Automatic Terminal Info. Service (ATIS) |
| AWO | Automatic Weather Observing Station (AWOS) |
| CLD | Clearance Delivery |
| CPT | Clearance Pre-Taxi |
| CTL | Control |
| DEP | Departure Control |
| DIR | Director (Approach Control/Radar) |
| EMR | Emergency |
| FSS | Flight Service Station |
| GND | Ground Control |
| GTE | Gate Control |
| HEL | Helicopter Frequency |
| INF | Information |
| MUL | Multicom |
| ODP | Parametres (French Radio) |
| OPS | Operations |
| RDO | Radio |
| RDR | Radar Only Frequency |
| RFS | Remote Flight Service Station (RFSS) |
| RMP | Ramp / Taxi Control |

- RSA Airport Radar Service Area (ARSA)
- TCA Terminal Control Area
- TRS Terminal Radar Service Area (TRSA)
- TWE Transcribed Weather Broadcast (TWEB)
- TWR Air Traffic Control Tower
- UAC Upper Area Control Center
- UNI Unicom
- VOL VOLMET

| FREQ | 12GRH | CALLSIGN |
|------------|-------|---------------------|
| APP 125.32 | | R N ZURICH FINAL |
| APP 127.75 | | R Y ZURICH TERMINAL |
| ARR 118.00 | | R Y ZURICH |
| ARR 119.70 | | R Y ZURICH |
| ARR 120.75 | | R Y ZURICH |
| ARR 127.75 | | R Y ZURICH |
| ATI 128.52 | T N | |
| CPT 121.80 | | Y ZURICH DELIVERY |
| DEP 125.95 | | R Y ZURICH |
| DEP 127.75 | | R Y ZURICH |
| GND 118.10 | | Y ZURICH |
| GND 119.70 | | Y ZURICH |
| GND 121.90 | | Y ZURICH |
| RMP 121.75 | | N ZURICH APRON |
| TWR 118.10 | | Y ZURICH |
| TWR 119.70 | | Y ZURICH |
| TWR 127.75 | | Y ZURICH |

Column 1:

The following characters may appear in Column 1.

- A Airport Advisory Service
- C Community Aerodrome Radio Station (CARS)
- D Departure Service
- F Flight Information Service (FIS)
- I Initial Contact (IC)
- L Arrival Service
- S Aerodrome Flight Information Service (AFIS)
- T Terminal Control Area

Column 2:

The following characters may appear in Column 2.

| | |
|---|--|
| A | Air / Ground |
| G | Remote Communications Air to Ground (RCAG) |
| L | Language other than English |
| M | Military Frequency |
| P | Pilot Controlled Lighting (Air / Ground) |
| R | Remote Communications Outlet (RCO) |

Column G:

The following characters may appear in Column G.

| | |
|-----|--------------|
| G | Guard |
| T | Transmit |
| < > | Both (blank) |

Column R:

This column indicates if radar service is available:

| | |
|---|-----|
| R | Yes |
| N | No |

Column H:

Indicates if 24 hours service is available.


| | |
|---|-----|
| Y | Yes |
| N | No |

HOTPLATES

HotPlates™ is a handy feature that allows you to view an approach plate any time you are in the INSTRUMENT (cockpit) Screen.

Press the “P” (plates) key on your keyboard to bring up the HotPlates viewer. The first thing you will notice is the

large main window on the left. This viewing window can be ZOOMed using the +/- buttons located at the top of the viewer or scrolled using the horizontal and vertical scroll bars to focus in on a specific area of a chart. For faster (and easier) chart repositioning, click-and-drag anywhere in the main window. You will see the finger cursor change to a closed hand that grabs the chart for easy moving.

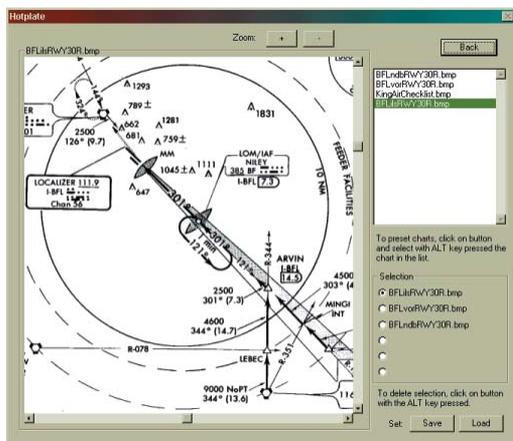

The window to the upper-right displays the contents of the "Plates" folder. Approach plates must be stored in this folder to be viewed with the HotPlates viewer. In addition to approach plates, other items such as check-lists can be placed in this folder for viewing. Three approach plates are included with ELITE. These are the plates for the three "sample" Instrument Approach Scenarios at Bakersfield, California. To select a plate for viewing choose one from those listed and click on it.

As you build your approach plate library you may find it difficult to keep your charts organized due to the number of files in the Plates folder. The HotPlates viewer has a simple way to reorganize your plates into logical "sets." A set is a grouping of six files (maximum) that can be loaded for use as needed. Once loaded, the files are placed in the

Selection box for convenient access. To create a plate set click on one of the six “radio” buttons located at the bottom-right of the HotPlates viewer. Hold down the **ALT** key on your keyboard and select a file from those listed above. The selection will appear next to the selected radio button. Repeat these steps to add files (plates) to the set as desired. Files can be assigned to the radio buttons in any order. To remove a selection from a radio button at any time just hold down the **ALT** key again and click on the desired radio button.


When you have created a set and are happy with it click on the Set **Save** button. In the **Save plate set** dialog box, type in a unique name for the set next to **File name:** such as “Bakersfield” and click **Save**. Now any time you want to bring up that (or any other) set click on the Set **Load** button. Select a set from those listed in the **Load plate set** dialog box and click **Open**.

Any file formatted as described below and placed in the **Plates** folder will be available for display in the HotPlates viewer. Files must be in bitmap (.bmp) format to be viewed by the HotPlates viewer. In general, files with a resolution of 144dpi (dots per inch) tend to look good in the HotPlates viewer although some experimentation may be necessary to achieve best results.


Remember, in addition to approach charts, you can place items such as checklists in the **Plates** folder. Create your own on-demand quick reference cards, lesson plans, performance spec data, or simply notes that you would like to be able to access at any point in a flight.

Although we strongly recommend having the actual (paper) charts available when flying ELITE (just as you would in the aircraft), HotPlates provides an additional means of quickly referencing and organizing your charts for easy access.

METEO PAGE

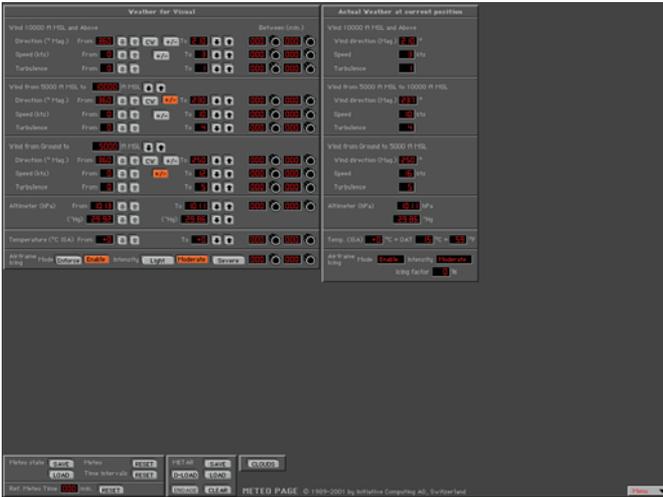

METEO Wind Page

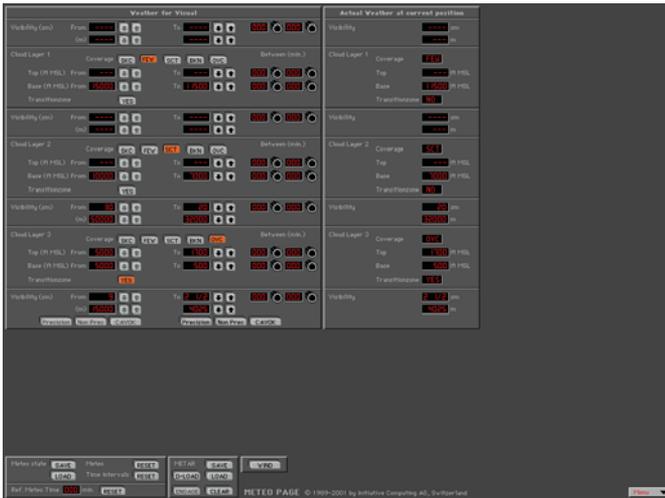

METEO Clouds Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon help is available for that item. Simply click on the item to display related help tips.

The **METEO** (meteorological) **page** is used to create the weather environment in ELITE. Parameters such as visibility, ceiling, wind, turbulence, pressure and temperature can be set and changed as desired to tailor the weather to meet your specific training requirements.

It's advisable to practice procedures *without* "weather" initially so as to gain a degree of proficiency in their execution. Then, progressively increase the level of difficulty by adding weather to these same procedures. One example might be to practice holding without wind at first, then add winds and turbulence as you begin feeling more comfortable. This way it's easier to visualize the big picture first (without wind) and grasp the essence of the procedure. After a while you'll be shooting approaches to minimums and practicing holds in strong winds and turbulence without a problem.

The **METEO page** is extremely flexible and provides an opportunity for an almost infinite amount of weather possibilities. Please feel free to experiment.


GENERAL LAYOUT (GENVIEW)

The METEO page is rather comprehensive and might look a bit intimidating at first glance. Actually, it is set up quite logically and is easy to use once you understand its layout. The METEO Page is actually two separate pages, the "CLOUDS" Page, and the "WIND" Page. Both pages are set up in the same format left-to-right with "From" weather, "To" weather, and "Actual" weather respectively. The CLOUDS Page is set up top-to-bottom as Layer 1 (top layer) Cloud and Visibility, Layer 2 (mid layer) Cloud and Visibility, and Layer 3 (bottom layer) Cloud and Visibility respectively. The WIND page is set up top-to-bottom as Wind (top layer), Wind (mid layer), Wind (bottom layer), Altimeter setting, Temperature, and Structural Icing respectively. We will examine each of these elements in greater detail in upcoming sections. To get from one page

to the other simply click on CLOUDS or WIND as applicable near the bottom of the current page.

Dynamic WX

In addition to setting static (unchanging) weather conditions, the METEO page also allows you to create dynamic (changing) weather conditions. Dynamic weather is set up by first specifying a time period within which these changes will occur by dialing in values (minutes) in each of the windows under the corresponding "Between" column. This is the dynamic weather time interval and determines both when and over what period of time the weather conditions will change. Next, define the conditions that will exist at the beginning (the "From" weather) and end (the "To" weather) of the specified period of time. To set the initial "From" weather simply click on the appropriate UP and DOWN arrow buttons to adjust the value of the desired weather parameter(s). Repeat this in the same way to set the "To" parameters. It is important to remember that the intensity or rate-of-change of the weather is also controlled by the procedure described in the previous section. For example, large parameter variances in relatively short time intervals produce rapidly changing weather as opposed to small parameter variances over longer time intervals.

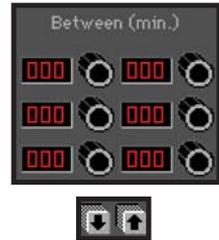


NOTE: "From" column UP/DOWN buttons will remain grayed-out (not active) until a dynamic weather time interval is entered.

Actual Weather Column

The "Actual" weather column at the far-right of the METEO page displays the current actual weather parameter values and cannot be adjusted. Think of it as a "snapshot" of the weather conditions at the current location and time. This is especially useful if dynamic weather has been set

up and you would like to see the exact current conditions change over the time period specified. In addition, this column can be referenced when Active METAR data is engaged, as it will reflect weather changes over time and location. As both dynamic and static weather are reflected, it is easy to get a quick picture of the weather with just a glance.

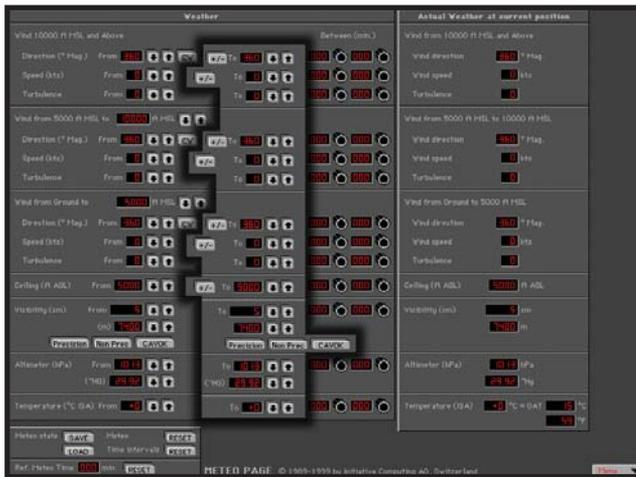

Static Weather

To set **static** (unchanging) weather use the “To” weather column **ONLY** and do NOT set in a time interval. If a time interval is set then the “From” weather automatically becomes the current weather.

NOTE: Remember, it is possible to use any combination of static and dynamic weather settings.

Wind



There are three wind layers in the ELITE weather environment. Each wind layer can have its own characteristics and are all configured in the same way on the **METEO page** utilizing identical control panels. Wind layers can NOT be less than 200 feet thick. The thickness of each layer is defined by the values entered on the panels. Note that the top of the bottom wind layer is also the base of the mid wind layer. The top of the mid wind layer is also the base of the top wind layer.

TRANSITION ZONES

GenView

Transition Zones are available for each of the three Cloud Layers and can only be selected when overcast (OVC) coverage is in use. A Transition Zone creates a gradual visual transition to and from the cloud conditions existing above or below the layer where it is used and is noticeable only when climbing or descending into, or out of, the overcast layer it is associated with.



Standard View

There are two inherent “transition zones” each 100 feet thick between the top/mid layers and the mid/bottom layers respectively. These transition zones comprise the last 50 feet of each layer (the lowest part of the higher layer and the highest part of the lower layer). Depending on the parameters set in each of the wind layers you may experience some turbulence and changing conditions when transitioning through these shear zones.



WIND DIRECTION

Wind direction is always **MAGNETIC** and can be set in 10° increments by clicking the UP and DOWN arrow buttons. To make the wind direction variable (with respect to the selected direction) simply press the +/- button. When setting up dynamic (changing) winds it is possible to have the winds change in a clockwise or counter clockwise manner. The CW (clockwise) button is a toggle switch that when depressed will change to CCW (counter clockwise). Simply leave this button up (unselected) for clockwise rotation of the changing winds or down (selected) for counter clockwise rotation.



WIND SPEED

Wind speed in knots (0-60) is set by clicking the UP and DOWN arrow buttons. To make the wind speed variable simply press the +/- button.

TURBULENCE

Turbulence level 1(light) through 12(extreme) is set by clicking the UP and DOWN arrow buttons. Separate turbulence levels can be set for each of the three corresponding Wind Layers.

CEILING (STANDARD VIEW)



Ceiling in feet **Above Ground Level** is set by clicking the UP and DOWN arrow buttons. To make the ceiling variable (with respect to the selected height) simply press the +/- button.

VISIBILITY (GENVIEW)



Above Cloud Layer 1:

Select visibility using UP/DOWN arrows as desired.

NOTE: Visibility can only be adjusted if cloud layer 1 coverage is set to OVERCAST.

With an OVERCAST layer programmed, selected visibility will become the controlling visibility above the TOP of the OVERCAST up to FL400 (40,000ft). If no layer 1 OVERCAST is programmed, visibility adjustment is disabled and the visibility setting associated with next lowest OVERCAST layer will control visibility. If no lower OVERCAST layer is programmed, then "surface" visibility will be the controlling visibility for all altitudes from the surface up to FL400 (40,000ft).

Cloud Layers 2 and 3:

Select visibility using UP/DOWN arrows as desired.

NOTE: Visibility can only be adjusted if cloud coverage is set to OVERCAST.

With an OVERCAST layer programmed, selected visibility will become the controlling visibility above the TOP of the OVERCAST up to the next highest OVERCAST layer programmed. This then becomes the visibility between the OVERCAST layers. If no higher OVERCAST layer is programmed, then the selected visibility will become the controlling visibility for all altitudes from the TOP of the OVERCAST up to FL400 (40,000ft).

If no OVERCAST is programmed at the current layer, visibility adjustment is disabled and the visibility setting associated with the next lowest OVERCAST layer will control visibility. If no lower OVERCAST layer is programmed, then "surface" visibility will be the controlling visibility for all altitudes from the surface up to the next highest OVERCAST layer programmed. If no higher OVERCAST layer is programmed, this will be the controlling visibility for all altitudes from the surface up to FL400 (40,000ft).

Surface:

Select visibility using UP/DOWN arrows or preset buttons as desired. Preset buttons have the following corresponding visibility values:

Precision = 1/2 statute mile

Non Precision = 1 statute mile

CAVOK (Ceiling/Visibility OK) = 30 statute miles

*NOTE: CAVOK by definition also indicates (in part) that no clouds or precipitation exist below 5,000ft. Pressing the CAVOK button in **ELITE** with Cloud Layer 3 Base set to \leq (less than or equal to) 5100ft MSL will also set cloud coverage to Sky Clear (SKC) in addition to changing visibility to 30 statute miles.*

Preset buttons can be used to “jump” quickly to 1/2, 1, and 30 statute mile values respectively and then further adjusted as desired.

Visibility value selected will become the visibility from the surface up to the next highest OVERCAST (OVC) cloud layer programmed. If no OVERCAST layer is programmed, this will be the controlling visibility for all altitudes from the surface up to FL400 (40,000ft).

CLOUDS (GENVIEW)

The CLOUDS Page has three Cloud/Visibility layers. Layer 1 (top), Layer 2 (mid), and Layer 3 (bottom) respectively. Select cloud coverage for each layer as desired by pressing any one of the buttons corresponding to the following :

| | |
|-----|---------------------------|
| SKC | Sky Clear |
| FEW | 1/8 cloud coverage |
| SCT | 2/8 to 4/8 cloud coverage |
| BKN | 5/8 to 7/8 cloud coverage |
| OVC | 8/8 cloud coverage |

Cloud bases can also be defined by pressing the corresponding UP/DOWN buttons. Tops can only be specified for an overcast (OVC) layer.

VISIBILITY (STANDARD VIEW)



Visibility in **Statute Miles** and/or **Meters** can be set by clicking the appropriate UP and DOWN arrow buttons. In addition, there are three combination visibility/ceiling presets that allow you to quickly choose Precision, Non-Precision, or CAVOK minimums respectively. Once selected, these preset values can then be further adjusted as necessary. These preset minimums are as follows:

Precision:



- 200ft. (ceiling),
- 1/2 Mile (visibility)

Non-Precision:

- 500ft. (ceiling),
- 1 Mile (visibility)

CAVOK:

- 5000ft. (ceiling),
- 5 Miles (visibility)

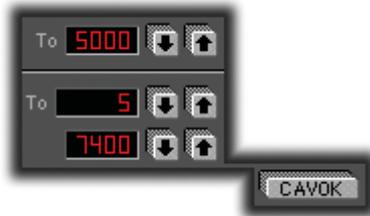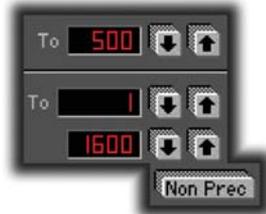

ALTIMETER

Altimeter setting in hectoPascals (same as millibars) and/or inches of mercury can be set by clicking the appropriate UP and DOWN arrow buttons.



NOTE: By creating a dynamic (changing) pressure over time scenario it is easy to demonstrate the “Going from a HIGH to a LOW lookout below” adage. This is great for instructors who want to make sure their students always perform a thorough approach briefing (checking the ATIS etc.). Simply set your “To” Altimeter value lower than your “From” Altimeter value, then set in a time interval for the pressure change to take place. As the pressure drops, the student will have to descend to maintain indicated altitude. If the student doesn’t ask you for the local altimeter setting or tune in the ATIS, he/she will get a big surprise on the approach.

TEMPERATURE



Temperature in degrees Celsius can be adjusted by clicking the UP and DOWN arrow buttons. Note that this is NOT setting the temperature directly but is actually adding to or subtracting from the ISA (International Standard Atmosphere) values. If your performance tables call for an ISA + or - (X°) day simply dial in X° to increase or decrease the OAT temperature by X° amount.

At the lower-left of the **METEEO Page** you will find a grouping of functions that are applicable to the entire **METEEO Page** as opposed to the control of *individual* weather parameters described previously. These functions are described in further detail starting with the section on “Saving and Loading METEEO Files.”

STRUCTURAL ICING

All instrument pilots are familiar with the dangers of icing and the coincident degradation of aircraft performance associated with the accretion of ice on an aircraft. Various insidious aspects of icing can creep into an otherwise “normal” flight and make for a really bad day. Increased

weight, alteration of airfoil shape and disruption of airflow to name just a few, can often yield unpredictable flight characteristics at best. At worst, these elements can conspire to become catastrophic.

Like most things in life, preparation is probably the most important part of success. Aviation is no different. Proper training, pre-flight planning (you did check the icing forecasts and PIREPs right?) and overall forethought are your best course for a successful, non-eventful trip. Preparation also refers to the act of being prepared for something that may occur during a flight. This is where “staying ahead of the airplane” comes in. As Rod Machado says, “the two most important things in aviation are the next two.” If conditions are ripe for icing then be on alert for subtle performance changes and/or indications that may be symptomatic of icing.

The goal of any simulation is to sharpen your “situational” awareness. This is not only geographic (positional) awareness but “how are things going” awareness. ELITE’s intent is not to prepare you for how to exactly react to an icing “encounter” (that is best learned from the POH, aircraft manufacturer, & experience) but rather to enhance your ability to recognize that “something is not quite right” feeling and thus get you thinking. Your ability to properly analyze and successfully resolve a problem is greatly improved by quick recognition in the first place. Time and altitude are precious. In other words, don’t be caught cruising along “fat, dumb, and happy.” With a good scan, and knowledge of what indications should be normal/abnormal, the degradation of aircraft performance associated with icing should be readily apparent. Always stay ahead of the airplane and maintain a constant self-dialogue. If you notice an abnormality or something doesn’t feel quite right then try and maintain focus.

* Recognize...

* Analyze...

* Solve...

Always be aware of the “symptoms” of icing.

Icing can be implemented in two different ways.



1. Press “Enforce” and choose an intensity level (Light, Moderate, Severe) to activate icing regardless of OAT or visible moisture present. This can be used by an instructor for example to demonstrate the affects of icing on aircraft performance at any time.
2. Press “Enable” and choose an intensity level (Light, Moderate, Severe) to activate temperature/moisture dependent icing. Ice will begin forming at the intensity chosen anytime the aircraft is in visible moisture and at a temperature of approximately 32 degrees Fahrenheit and lower. For the purposes of the simulation, visible moisture is defined as 1/4 statute mile visibility and less, or flying in an overcast (OVC) layer.

With either icing implementation, intensity levels affect “icing factor” in the following ways:



Light: icing factor goes up to 50% in 60 minutes

Moderate: icing factor goes up to 100% in 20 minutes

Severe: icing factor goes up to 100% in 10 minutes

Icing factor is defined as a decrease in lift, an increase in drag, and an increase in weight.

Icing factor: 100% = 50% less lift / 40% more drag / 20% more weight

Notice that Pitot Tube icing is NOT part of the icing factor equation. Pitot Tube icing is actually controlled separately on the MALFUNCTIONS Page. This separation of control is intentional. Although Pitot Tube icing is often coincident with structural icing, structural icing can be subtler to reveal itself (initially). In most instances the onset of Pitot Tube icing is more apparent and thus more easily recognizable. One form of Pitot Tube icing is readily identified by a rather quick loss of airspeed indication. Airframe icing MAY be a bit harder to detect initially depending on accretion rate, icing type, etc.

NOTE: Active METAR does NOT modify the chosen Icing Settings. You still have to ENABLE or ENFORCE Icing manually.


SAVING & LOADING METEO FILES

The **SAVE** and **LOAD** buttons next to **Meteo state** are extremely powerful. Let's say you have set up a weather scenario on the **METEO Page**. You get it just exactly the way you want it with all the parameters set, but you would also like to save this Meteo "state" for future use. Simply click on the **SAVE** button to open the **Save Meteo files** dialog box.




Type a name in the "File name:" box then click **Save** to complete the operation. To load this Meteo state (or any other) in the future, just click on the **LOAD** button to open the **Open Meteo files** dialog box. Select a Meteo state

from those listed (previously saved) and click **O**pen. This feature allows you to create an unlimited library of Meteo states that can be recalled almost instantly.

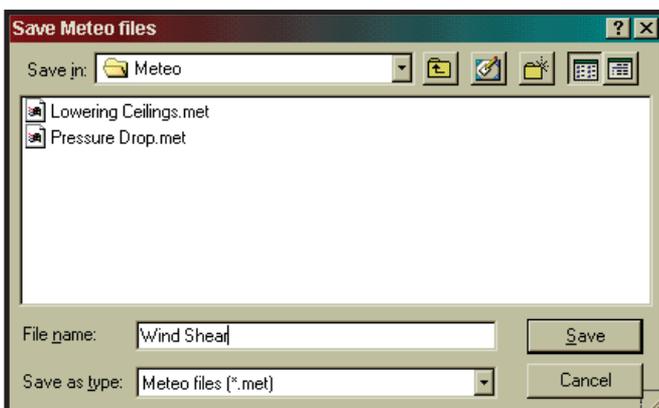

The two **RESET** buttons provide a quick way to “zero-out” the **METEOR** Page. The **Meteo** RESET returns

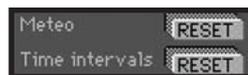

all parameter settings to zero where applicable, sets the Ceiling/Visibility to CAVOK, and sets the Altimeter/Temperature to standard. The **Time Intervals** RESET clears all the time interval settings used for dynamic weather. The **Ref. Meteo Time** RESET button sets the Reference Meteo Time back to zero minutes. This is used in conjunction with the interval settings to control dynamic weather as explained next.

REFERENCE METEO TIME


The **Reference Meteo Time** is simply an elapsed time counter that runs as the aircraft is flown. The dynamic weather time intervals discussed previously use this time to determine when to begin changing the weather as set up by the “From” and “To” parameters. If for example you set the bottom layer winds to increase between 005 and 015 minutes and the ceiling to lower between 010 and 020 minutes, these changes will not begin to take affect until the Reference Meteo Time reaches 005 minutes. At

005 minutes the bottom layer winds will begin increasing (and continue increasing) until 015 minutes where the “To” parameter values will have been reached. Five minutes after the bottom layer winds begin to increase (010 minutes) the ceiling begins to lower and will continue to lower until 020 minutes. Weather parameters that do NOT have a time interval set (static weather) remain constant.



The **Reference Meteo Time** can be **RESET** back to zero at any time in the flight. This will allow dynamic weather scenarios to be easily repeated. One important point to keep in mind is that if you have been flying a given sim session for an extended period of time, then set up some dynamic weather, make sure to either **RESET** the Reference Meteo Time or set time intervals in the future. If the time intervals set are before the Reference Meteo Time then the changes will never occur.

METAR PAGE

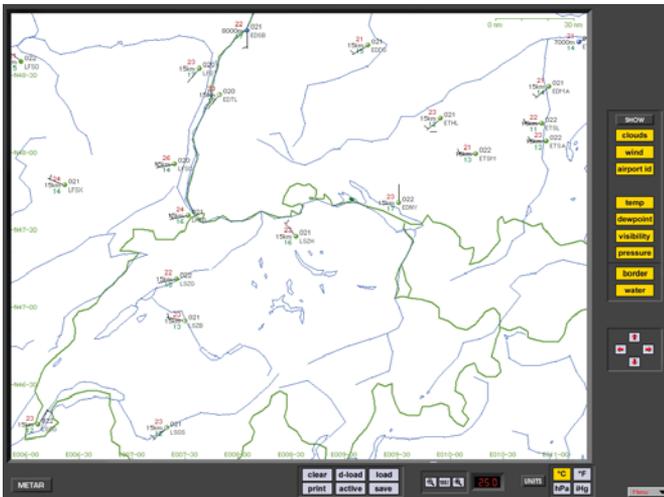

METAR Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon help is available for that item. Simply click on the item to display related help tips.

ACTIVE METAR

Active METAR means that you can download real-time weather conditions from METAR reporting stations for use in ELITE. When METAR weather is “engaged” (activated) the weather dynamically changes when flying between METAR reporting stations and over the time span covered by the METAR reports. Sky conditions, visibility, wind speed, wind direction and turbulence are accurately integrated into the simulation from these reports.

METAR weather conditions represent the actual weather derived from the local airport stations. Although ELITE calculates precise cloud coverage, ELITE can not represent a specific cloud type such as Cumulus or Nimbostratus. If the downloaded METAR readout of a visibility is ‘9999’, ELITE will set a

value between 10 km and 30 km, otherwise it will take the reported value such as i.e. 24 km or 15 sm.

WIND AND GUSTS

ELITE calculates the weather between the METAR conditions received by the Aircraft. If the wind is 270° and the next available METAR station reads 260°, ELITE will constantly update the wind from 270° to 269, 268, 267 etc. until reaching 260°. The same appears for all other values such as wind speed, cloud coverage, temperature, dew point, visibility and QNH/ALT. The symbols used in the METAR page are ICAO standard. When gusts are reported, ELITE will set the appropriate wind speed and turbulence to level 2 for a short period.

USING THE METAR PAGE

Open the METAR page through the menu bar in the lower right corner or type 'alt & R' on your keyboard.

NOTE: Active METAR is only available with GenView™ visual databases.

Once in the METAR page, you have the choice of selecting existing METAR conditions which have been previously downloaded from the Internet or you can download current METAR conditions online through the use of the **D-LOAD** function.

USING EXISTING METAR DATA


1. Press the **LOAD** button on the METAR page to open existing METAR files previously saved to your hard drive.



2. From the directory list select the METAR file. (i.e. 05Z.TXT) 05Z means zulu time, 434.5Kb is the size of the file and May 29

08:07 represents the date and time the file was downloaded. To select a different path from the directory list, use the **UP** button to browse to a higher directory level.

3. To select the file, highlight the time and click **OPEN** or double click the file.

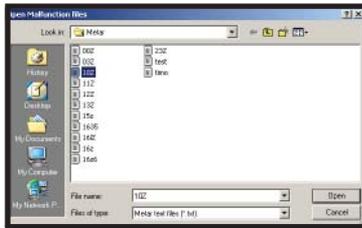

4. As METARs are updated very frequently and have only the zulu time, you have to 'link' your selection to a specific date. Click the **OK** button to continue.



5. To activate the METAR conditions, click the **ENGAGE** button in the METAR Page.



6. When you are flying, you can check the actual Weather at current position on the METEO page.
7. Once the METAR is active, all other weather conditions previously selected on the METEO page are inactive. To de-activate the METAR conditions, press **ENGAGE** and it will turn from yellow to gray.

| Actual Weather at current position | |
|---------------------------------------|-------------|
| Wind 10000 ft MSL and Above | |
| Wind direction (Mag.) | 360 ° |
| Speed | 0 kts |
| Turbulence | 0 |
| Wind from 5000 ft MSL to 10000 ft MSL | |
| Wind direction (Mag.) | 360 ° |
| Speed | 0 kts |
| Turbulence | 0 |
| Wind from Ground to 5000 ft MSL | |
| Wind direction (Mag.) | 360 ° |
| Speed | 0 kts |
| Turbulence | 0 |
| QNH (hPa) | 10.13 hPa |
| | 29.92 "Hg |
| Temperature (ISA) | +0 °C = 0AT |
| | 12 °F |
| | 54 °F |


DOWNLOADING METAR FILES

Basic Method (Recommended):

1. Press the **D-LOAD** button on the METAR or METEO page.




2. Press **Download** button on the METAR dialog box to begin download. METAR reports will be downloaded and engaged automatically.

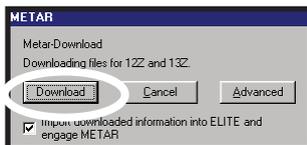


Advanced Method:

Press **Advanced** button and follow the procedure below for manual selection of METAR files as desired.

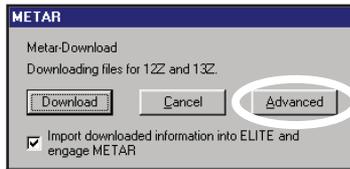

1. Press the **SHOW** button for the Directory listing. The METAR-Download page has a default internet addresses ready. This will connect you to the Internet.

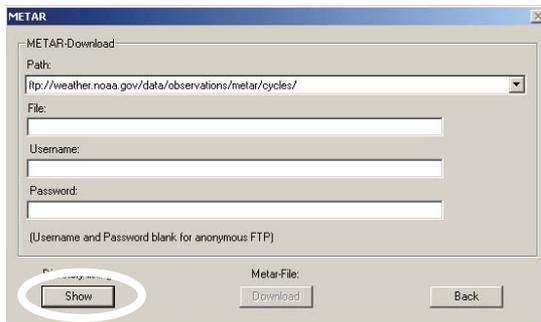


2. Select a file you wish to download, i.e. 1300Z (1300Z represents the UTC time of the report)


NOTE: Downloading METAR data from the Internet requires a currently active Internet connection.

NOTE: METAR files cover the entire world.

3. Click the METAR-File **Download** button to start the download process. Click **SAVE** to put the file into your METAR folder.

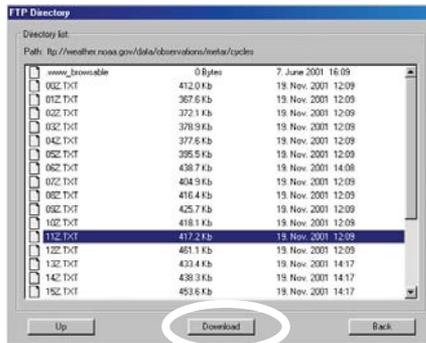

- Once the download process has finished, click the **BACK** button to leave this menu.
- In the METAR or METEO Page, press the **LOAD** button to select the file from the directory list you downloaded.

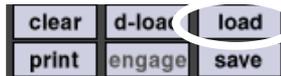

NOTE: *ELITE* will only open the METAR files corresponding to your installed GenView Navigation data.


- Once the file is selected, click the **BACK** button to leave the directory list.
- METAR reports are updated frequently and correspond to specific UTC times and dates. These reports however can be linked to any specific date. To 'link' your selection to a specific date choose the date and click the **OK** button to continue.



- To activate the METAR conditions, click the **ENGAGE** button on the METAR page. To view the current weather, change to the METEO Page while unfreezing the simulation.



All METAR stations are graphically depicted on a map overlay on the METAR page. Symbols in red indicate METAR stations under IFR conditions with a ceiling below 1,000 ft and/or visibility less than 3 miles. Blue indicates stations under MVFR conditions with a ceiling 1,000 to 3,000 ft and/or visibility 3 to 5 miles. Green indicates stations under VFR conditions with ceiling greater than 3,000 ft and visibility greater than 5 miles.

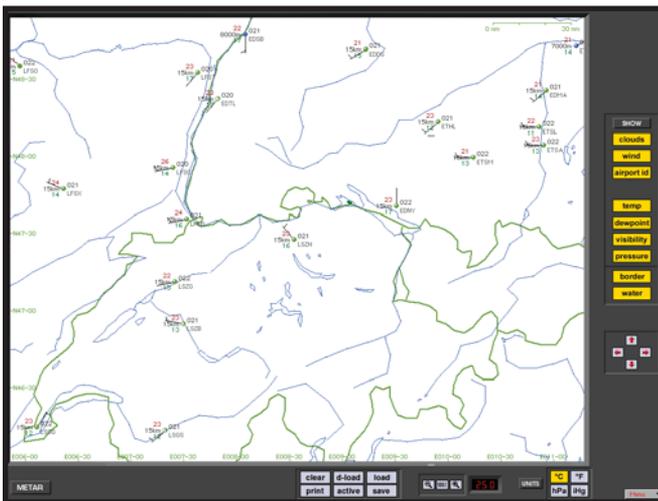


On the MAP page, METAR stations are marked with a red circle. Clicking on the red symbol opens an information window that shows the METAR data. Selecting the SHOW button gives you all reports loaded for that station sorted by date and time.




NOTE: Several clicks may be necessary in order to access the METAR information.

STATION PLOT

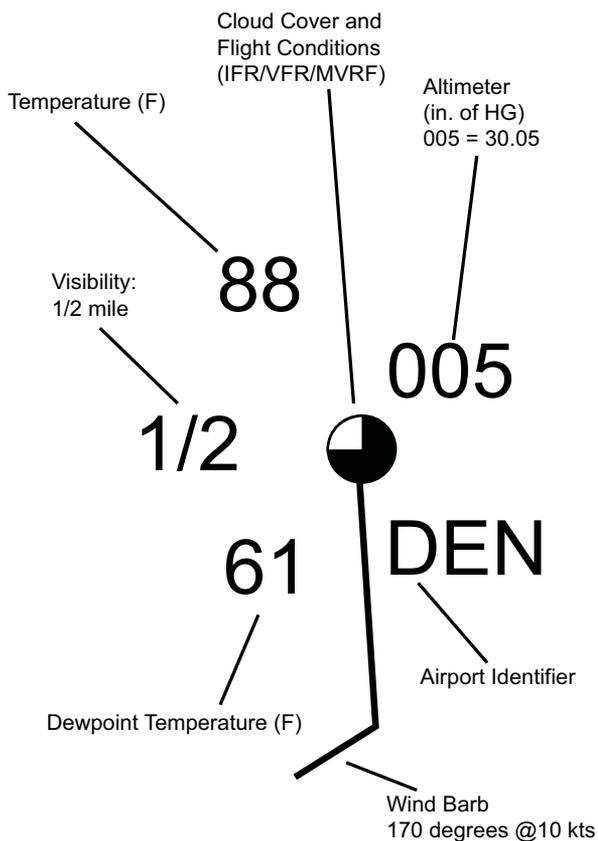

NOTE: Temperatures are in C° or F°. Altimeter settings are either hPa or iHg.

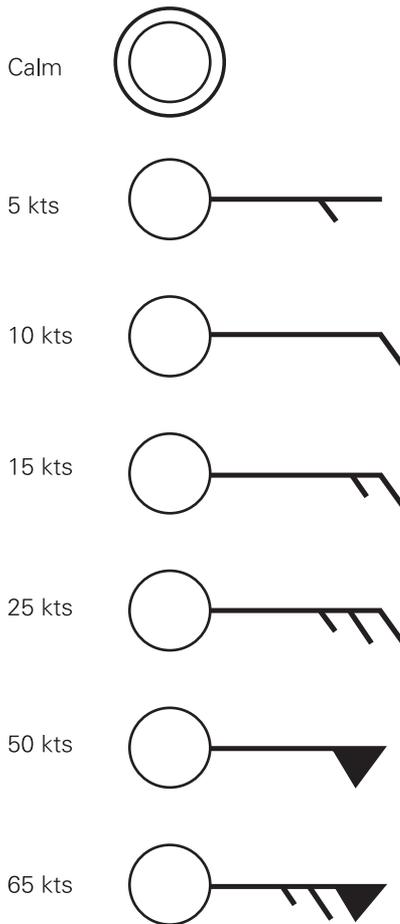WIND BARB DESCRIPTION IN THE NORTHERN HEMISPHERE


AERODROME ACTUAL WEATHER METAR AND SPECI DECODE

| | | |
|--------------------|---|--|
| Pressure | Q P P P P _H P _H H | QNH in whole hectopascals or inches, tenths and hundredths of an inch depending on indicator |
| | | Indicator of QNH in hectopascals If Q = A then QNH is in inches |
| Temp and Dew Point | T ¹ T ¹ / T ¹ T ¹ T _d T _d | Dew-point temperature in whole degrees Celsius (if below 0° C preceded by M) |
| | | Temperature in whole degrees Celsius (if below 0° C preceded by M) |
| CAVOK | | Cloud And Visibility OK. Replaces visibility RVR, present weather and cloud if: 1. Visibility is 10 km or more 2. No cumulonimbus cloud and no cloud below 1500 meters (5000 ft) or below the highest minimum sector altitude whichever is greater, and 3. No precipitation, thunderstorm, sandstorm, shallow fog or low drifting dust, sand or snow |
| Visibility | WW | Minimum horizontal visibility in meters 9999 = 10 km or more |
| Identification | G G g g Z | Indicator (Z) of UTC |
| | | In individual messages, time of observation in hours (GG) and minutes (gg) UTC |
| | CCCC | ICAO four -letter location indicator |

| Surface Wind | | | | Clouds | | | | | |
|---|---|---|---|--|---|-------|---------------------|--|---|
| d | d | d | f | G | f | m_m | KMH or KT or MPS | $N_c N_s N_b h_c h_s$ | |
| Mean wing direction in degrees true rounded off to nearest ten degrees (VRB = VARIABLE) | | | | Mean wing speed (ten minute mean or since discontinuity) | | | | Wind speed units used | Height of base ($h_c h_s$) of clouds in units of 30 meters or 100 ft" |
| Indicator of gust (G) - if necessary | | | | Maximum wind speed "gust" (f_{m_m}) - if necessary | | | | | |
| 0000 = calm | | | | Followed when there is a variation in wind direction of 60° or more and wind speed >3 kt by: | | | | Replaced when there are no clouds and CAVOK is not appropriate by: | |
| | | | | | | | | SKC | |
| | | | | | | | | Sky Clear | |
| Extreme direction of wind ($d_n d_i d_s$) | | | | Indicator of Variability (V) | | | | Other extreme direction of wind (measured clockwise) | |



MALFUNCTIONS PAGE

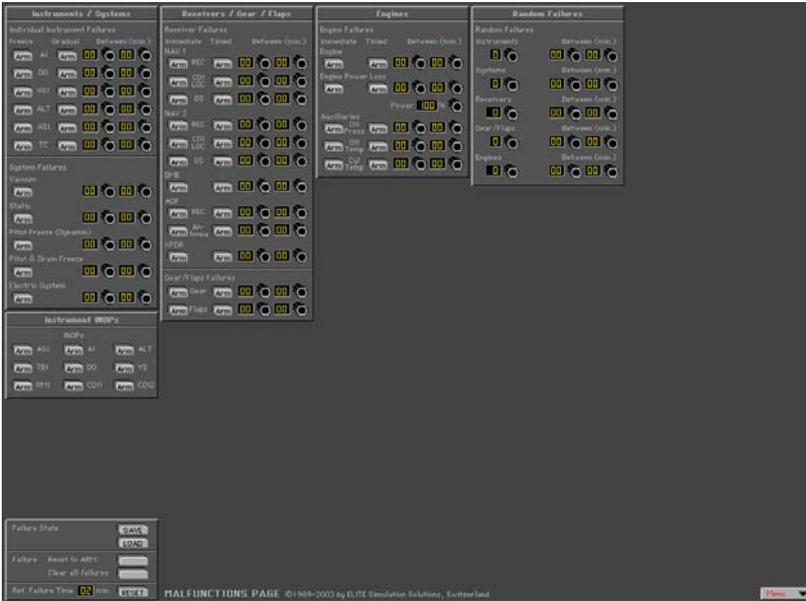

Malfunctions Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon help is available for that item. Simply click on the item to display related help tips.

The **MALFUNCTIONS Page** is used to create failure scenarios. The ability to set up and practice realistic failures is one of the most powerful features in any simulation. Many of these failures would be impractical, impossible, or unsafe to recreate in an actual aircraft. Yet, exposure to these same situations in a simulated environment can give you invaluable experience (the airlines and military have proved this for decades).

As we all know, the two most important things in aviation are the next two. With cognizant self-dialogue and previous experience dealing with similar events, it should be easier to visualize the next two actions with limited distress. What was the last thing I touched? How far off the airway was that airport I just passed? Is that drop in oil pressure just a bad gauge (better keep an eye on the temps). What is the most conservative action I could take if things just don't seem to be going right? Simulation is a tremendous tool that lets you get used to seeing, evaluating, and reacting to various failure "scenarios" *before* getting in an actual aircraft.

Although the **MALFUNCTIONS Page** might appear complex at first glance, similar to the METEO Page it is actually quite easy to use and is one of the most comprehensive available. You have the opportunity to selectively or randomly fail individual instruments, systems, avionics, engines, gear, flaps, and much more. Elements of the **MALFUNCTIONS page** will be covered in greater detail in the following paragraphs, but to get started...

Setting up failures requires three simple steps:

1. Decide on the failure(s) that you would like to invoke.
2. Determine when you would like the failure(s) to occur. Failures can be set to occur immediately, at a specified time, or at some point within a defined "failure time window."
3. Arm the failure(s) by pressing the associated **ARM** button(s).

Note that the **ARM** button will change to **FAIL** when that particular item has actually failed. Click on the **FAIL** button once to RESET the item to **ARM**. Click again to CLEAR the failure.

INSTRUMENTS AND SYSTEMS FAILURES

Individual instruments can be failed in two different ways:

1. Freeze (instrument maintains indications that exist at time of failure)
2. Gradual


To “Freeze” an instrument, click on its associated **ARM** button under the “Freeze” column. To have an instrument fail gradually, click on its associated **ARM** button under the “Gradual” column. A gradual failure of this type is sometimes referred to as an “insidious” failure as it is not as readily apparent and



thus could potentially be more dangerous. Fixating on the Attitude Indicator and flying the aircraft to maintain “wings level” as it (the AI) slowly tumbles, is one example of the consequences of this type of failure.

FAILURE TIME WINDOW

The “Between” column is used to set the “failure time window” interval. The values entered in minutes (00-99) are compared to the Ref. Failure Time and determine when or during what time period (window) the corresponding ARMed failure will occur. If for example we want the Attitude Indicator to gradually fail at some point between seven and fifteen minutes from

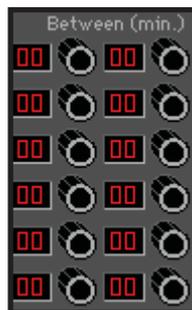

now, we would simply enter 07 and 15 respectively in the “Between” column and press the ARM button in the “Gradual” column next to “AI.” If this were done at the start of our flight the Ref. Failure Time would already be set to zero. But, if we had been flying for some time and wanted the failure to occur between seven and fifteen minutes

from now we could just RESET the Ref. Failure Time. As the Ref. Failure Time counts up from zero as we fly, the Attitude Indicator will begin its gradual failure at some time between seven and fifteen minutes.

IMMEDIATE FAILURE

To invoke an **immediate** failure, enter the **SAME** values (minutes) in each window that correspond to the current Ref. (reference) Failure Time displayed at the lower-left. If for example the Ref. Failure Time displayed is 07 (7 minutes), enter 07 in BOTH "Between" windows next to the desired ARMED failure. An easier way to invoke an immediate failure is to leave both "Between" values at 00 and simply RESET the Ref. Failure Time by pressing the RESET button next to the Ref. Failure Time display window. Keep in mind though that all failure time window intervals use the Ref. Failure Time and as such will be affected.


SPECIFIC TIME FAILURE

To invoke a failure at a **specific** (future) time, enter the **SAME** values (minutes) in BOTH "Between" windows. If we had been flying for fifteen minutes and wanted the Pitot Tube to freeze over with an accumulation of ice three minutes from now, we would simply enter 18 and 18 respectively in the "Between" column. When the Ref. Failure Time reached 18 minutes, the Pitot Tube would freeze over and we would observe a subsequent erroneous indication on the Airspeed Indicator (a good time to turn ON Pitot heat).

Note that if a **System** failure is invoked its associated **ARM** button will change to **FAIL** when that particular System actually fails. Affected items within the failed system will be flagged (turn orange) for easy identification. The ARM buttons of these items will NOT change to FAIL. If for example we FAILED the Static System, the ARM button under "Static" would change to FAIL at the time of the failure

and the VSI (Vertical Speed Indicator), ALT (Altimeter), and ASI (Airspeed Indicator) labels respectively would change to orange in color.

RECEIVERS, GEAR, AND FLAPS FAILURES

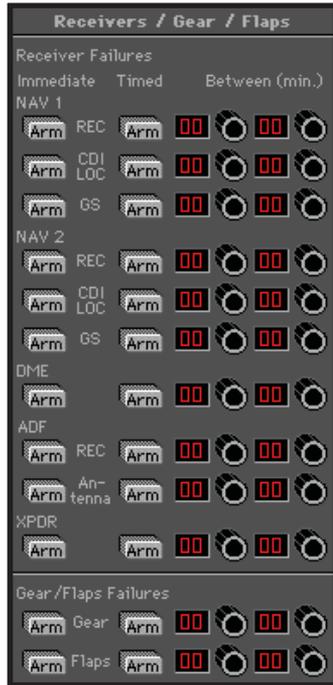

Failures in this panel are set up in much the same way as previously discussed *except* that **immediate** failures are invoked by using the ARM buttons in the “immediate” column. To set a **specific** failure time or a failure **time window** interval you must use the ARM buttons in the “Timed” column.

ENGINE FAILURES

Failures in this panel are set up exactly the same as the previous (Receivers / Gear / Flaps) panel. Note that it is not only possible to fail an engine, but to also simulate a power loss (leaving partial power). Combine this with various “auxiliary” failures and you have the opportunity to create some interesting failure scenarios.




A good way to see if a student is including engine instruments in his/her scan is to invoke an Oil Pressure failure and see if the student notices the pressure dropping. To really bring the point home set up a scenario in which the Oil Pressure drops followed by an increase in Oil Temperature and subsequent power loss.

NOTE: The Power Loss window shows the power available, NOT the percentage of power loss. If for example the power loss window were set to 40%, this would indicate a 60% loss of power.

NOTE: Once an engine failure or power loss has been invoked, the failure must be CLEARED to allow for engine restart or power restoration.

RANDOM FAILURES

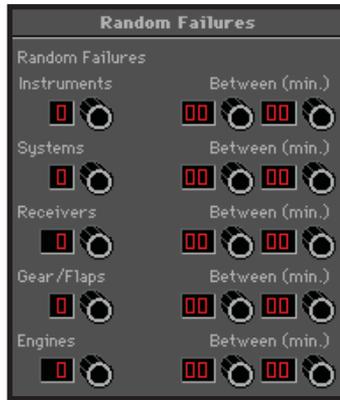

The Random Failures panel allows you to experience what it is like to expect the unexpected. To set up a random failure simply enter the failure time window interval(s). As previously described, you can use these intervals to invoke failures immediately, at specified times, or within a defined failure time window. Then dial in the number of failures you would like to occur. If for example we entered in a failure time window of between 3 and 12 minutes, then entered 2 in the Instruments window, **ELITE** would randomly fail two of the six instruments (each at some random time between 3 and 12 minutes).

NOTE: "Engines" does NOT refer to the number of engines but rather to the number of possible engine failures. Depending on the aircraft there might be as many as 5 failure types (power loss, oil pressure, oil temperature, etc.) as shown on the engine failure panel.

INSTRUMENT INOPS



The Instrument INOP feature allows you to place a virtual instrument cover on a selected instrument or instruments. The covers are similar in appearance to the rubber suction cup covers used in instrument training for partial panel practice. The covers can be used independent of, or in conjunction with, specific malfunctions as follows:

Invoke a malfunction by itself (without the cover).

Cover the instrument (without invoking a malfunction).

Invoke a malfunction AND cover the instrument.

The third option allows the instructor to cover an instrument at his discretion once he is comfortable that the student has recognized and acknowledged the failure.


To place an instrument cover on one or more instruments, simply click on the desired instrument's ARM button. The button will turn orange and subsequently display "Fail" to indicate the instrument has been covered. Note that the Instrument INOP feature is activated almost immediately after ARM has been pressed. The Instrument INOP feature is therefore not "timed" nor does its use depend on the Ref. Failure Time. The graphic above shows that the attitude indicator and directional gyro have been selected and have INOP covers on them.

At the lower-left of the **MALFUNCTIONS** page you will find several buttons that are applicable to the entire **MALFUNCTIONS** page as opposed to the control of *individual* failures described previously.

FAILURE STATES




Similar to saving and loading METEO States, the SAVE and LOAD buttons next to “Failure State” enable you to Save and Load Failure States.

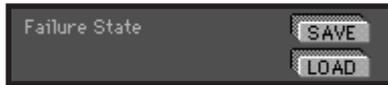

You can literally develop a library of these states that can be instantly recalled for use anytime. Create a failure scenario (state) and tweak it until you are satisfied, then click the SAVE button to open the **Save Malfunction files** dialog box. Type a unique name in the “File name:” box such as “OilPressLoss” then click **Save** to complete the operation. To load this failure state (or any other) in the future, just click on the **LOAD** button to open the **Open Malfunction files** dialog box. Select a failure state from those listed (previously saved) and click **Open**.

Reset to ARM

The “**Reset to ARM**” and “**Clear all failures**” buttons provide a quick way to RESET the **MALFUNCTIONS** page as required.

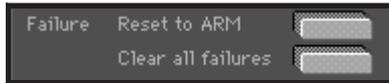

Use the “Reset to ARM” button when a completed failure scenario sequence needs to be repeated. Pressing this button will leave the entire failure “state” intact, but RESET all FAIL buttons back to ARM (much easier than having to reset each individual Fail button).

Use the “Clear all failures” button to RESET the entire **MALFUNCTIONS** page (including failure time intervals).


Ref. Failure Time

The **Ref. Failure Time** RESET button sets the Reference Failure Time back to zero minutes. This is used in conjunction with the **failure time window** interval settings as described previously.



The **MALFUNCTIONS** page is extremely flexible and provides an opportunity for an almost infinite amount of failure scenario possibilities. Please feel free to experiment.

CONTROL PAGE

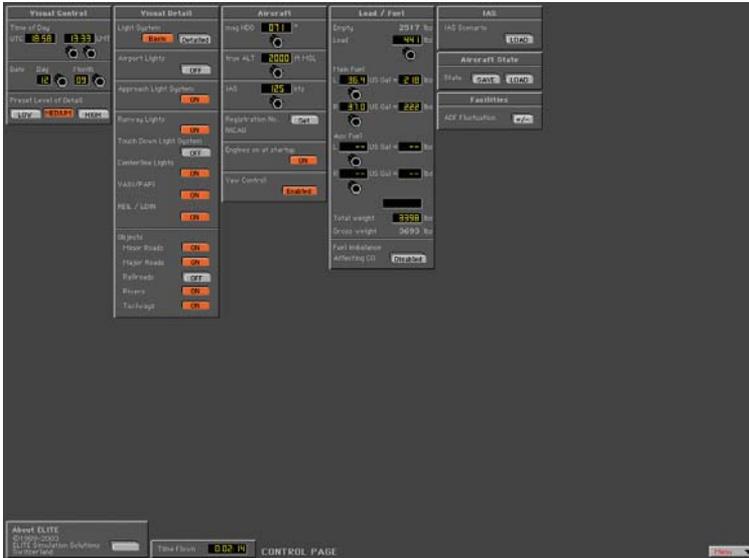

Control Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon help is available for that item. Simply click on the item to display related help tips.

Use the **CONTROL** page to configure aircraft load and fuel, control visual settings, load Instrument Approach Scenarios, save/load “STATE” files, and more.

VISUAL PANEL



Use the **Visual** panel to configure ELITE's visual display settings. Everything from Time-of-Day to the amount of runway environment detail displayed can be changed.

Set Date and Time:

Set the **Time of Day** and **Date**. Daylight is accurately reflected based upon navigation data loaded and time set.

At program start, ELITE references your computer's internal clock, then applies the **(LT)/(UTC)** offset from the General settings dialog box on the **Configuration**. The calculated current UTC (Universal Time Coordinated) time is then used for all cockpit clocks and appears on the **Time of Day** panel in the UTC window. The time displayed in the LMT (Local Mean Time) window will probably **NOT** reflect the current local watch time of the area flown in. **THIS IS NORMAL!** LMT is used to calculate accurate sunrise and sunset times. Depending on **aircraft location** within the specific Time Zone flown in, and Daylight Saving Time, LMT may be "off" by as much as 2 Hrs. Use this time only as a reference for setting day/night flying conditions. To change time of day, click and drag on hours/minutes adjust knobs located below LMT display window.

PRESET LEVEL OF DETAIL (GENVIEW)

Software "performance" is directly related to the computer hardware and associated capabilities used to run it. Many factors such as processor speed, memory, video card and drivers, come together to formulate what the end user perceives as computer "power." Some performance gain may be achieved however through the software by fine-tuning GenView's visual settings.

Based on the processing power of your computer, you may want to adjust the Level of Detail (LOD) setting by pressing one of the LOW, MEDIUM, or HIGH buttons.



These buttons control various parameters used to create the view of the outside world and determine the resulting “Level of Detail” implemented by these parameters. “Fast” computers can normally use a HIGH setting, while relatively “slower” computers may require a LOW or MEDIUM LOD setting. In addition, these same buttons can be used to select one of three Visual Detail presets.

Unlike the LOD parameter settings, which are broader in nature, the Visual Detail settings are related to specific lighting and scenery object elements. The processing power required to display these elements might cause the simulation to run sluggish on relatively slower computers. The Visual Detail panel allows you to tweak these settings to get the best performance possible from a given system.

Simply CTRL-click on any one of the LOW, MEDIUM, or HIGH buttons (turns orange) and its corresponding Visual Detail preset will become activated. Presets can then be modified manually as desired by selectively turning ON/OFF items in the Visual Detail panel. The selected LOW, MEDIUM, or HIGH button will remain orange as long as the Visual Detail buttons corresponding to that preset match. If the Visual Detail buttons are modified after selecting a preset, the selected LOW, MEDIUM, or HIGH button will return to gray to signify the preset has been modified. Experiment to determine what configuration yields the best combination of performance and visual detail.



SCENERY/RUNWAY LIGHTING (STANDARD VIEW)


As mentioned in the previous section, software “performance” is directly related to the computer hardware used to run it. Based on the processing power of your computer, you may want to turn OFF various scenery elements, as these tend to increase computer workload and possibly cause the simulation to be less than smooth. Pressing the Detailed button under Scenery simply adds a grid of “city lights” for enhanced surface visual reference. To fly without this grid simply press the Basic button.



Engine Startup

The engine(s) start automatically at initial program startup when the **ON** button is active.

Aircraft Panel

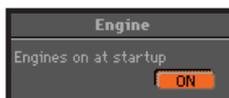

The heading, altitude, and airspeed panels found on the MAP page are duplicated here for convenient aircraft setup while using the **Control** page. These panels function exactly the same as those on the MAP page discussed earlier in the chapter.

Fuel / Load Panel




Set aircraft magnetic heading

Set MSL altitude. To increment by 500 ft., click in the number window. The knob will show an orange dot. When you use the knob, increments will be by 500 ft. Click again in the window to deactivate. Feature will deactivate itself in 5 seconds if there is no activity.

Set indicated airspeed (knots)

Fuel Imbalance

When ENABLED, allows for flight characteristics to be affected by lateral asymmetric fuel loading.

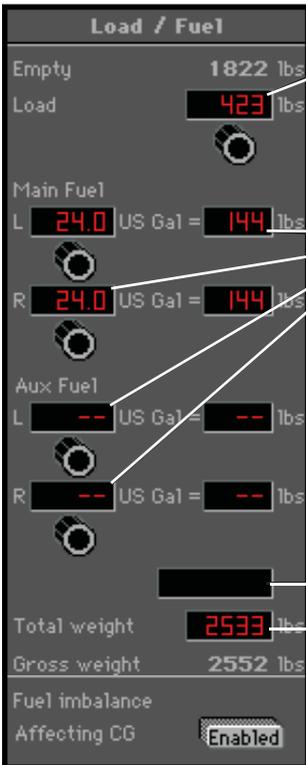

Set aircraft load weight (change from KGs to LBS. on CONFIGURATION page, under UNITS.

Variable fuel loading

Overload indicator

Total aircraft weight

Yaw Control.


YAW Control enabled when lit (for use with rudder pedals). If not lit, aircraft stays in coordinated flight and tracks runway centerline on take-off.



Aircraft Identification

You can customize the aircraft identification "placard." Click on the **SET** button in the **Identification** panel.

Another dialog box will appear

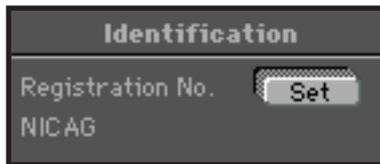

Enter the aircraft "Registration number" to be displayed on the instrument panel in the cockpit.



NOTE: This identification number is NOT reflected in the Instrument Approach Scenario call sign.


RUNNING THE INSTRUMENT APPROACH SCENARIOS (IAS)

The **Instrument Approach Scenarios** are scripted instrument approach exercises flown in a simulated ATC environment. During these exercises, you must listen for your call sign “on frequency” amidst the chatter of other aircraft and controllers to hear your instructions. Follow clearances and vectors closely or you will be reminded to get back to your assigned altitude or heading.


The scenarios generally begin with the aircraft at a predetermined altitude and positioned 15-20 miles from the IAF (initial approach fix) of the selected approach scenario.

There is 1 **IAS** sampler approach included in each ELITE package – an **ILS** approach into Champaign, Illinois. The Approach chart can be found in the “Supplements” section of this manual or viewed with HotPlates.

To load an IAS, click on the **IAS “LOAD”** button located at the bottom of the **MAP** page or use the LOAD button on the **CONTROL** page.

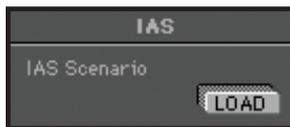

Highlight the IAS you wish to fly from those listed, then click **OPEN**.

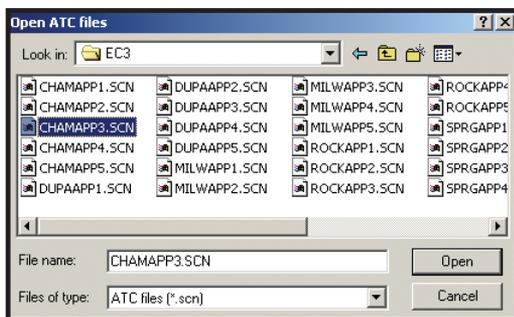

NOTE: Ensure that the appropriate NAV database (region) is loaded for flying the IAS.

When you select OPEN, you will hear a succession of beeps followed by information and option dialog boxes. Make your selections and follow on-screen instructions.

After the last selections are made, you are ready to fly the approach. Return to the **Instrument** screen and release the **FREEZE** button.

NOTE: When you release the FREEZE button, the autopilot will engage and stabilize the aircraft. When the heading and altitude have stabilized, you can continue to use the autopilot or disengage it to manually fly the approach.


*NOTE: If you miss an ATC instruction, you can have it repeated by pressing **CTRL R** (R for repeat) on the keyboard.*

If you elect to have the copilot change frequencies, it's always a good idea to verify them anyway. Some copilots are better than others!

Loading and Playing Scenario Flight Paths:

1. Click on the **PATH** button on the MAP page and choose **LOAD**.
2. Choose the IAS path that you would like to see.
3. Click on **REPLAY** to review the flight path. Use the **PROFILE** and **EXTENDED** buttons on the MAP page as desired to display all associated aircraft data.

STATE PANEL

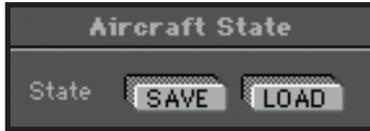

The **State** panel makes it possible to save and load aircraft “state” files. You can think of state files as a way to take a “snapshot” of the aircraft’s state at any given moment in time. When you save a state file the aircraft’s position, altitude, heading, airspeed, etc. are stored along with current avionics settings (frequencies, auto pilot configuration, etc.). In addition, you have the option of storing Navigation, Meteo (weather), and Malfunction data as well. The saved state file can then be loaded at anytime in the future and instantly position the aircraft where it was (with the same settings) when the file was saved. State files are very useful when you want to practice the same approach, procedure, flight, or situation repeatedly. Individual pilots and instructors often create a library of state files, which allow them to conveniently return to a desired “lesson” without having to setup the aircraft again manually.

State files can be saved at any time. Before saving a state file make sure that the aircraft is set up just the way you want it. Once everything is to your liking be sure to name the state file something that will be meaningful now and in the future. A good naming convention is to include an airport identifier or nearby Navaid and brief description such as “ORL ILS RWY 7 Low Ceilings.” Even if you haven’t loaded this file in a while it will be easily identified as the ILS approach into Orlando Executive’s runway 7 (with low ceilings). This is much better than “My first ILS.”


Saving States

To save the current aircraft state, click the **SAVE** button to bring up the **Save State file** window.



Type in a name for the “state” file and click **Save**.

Select “state” file options as desired, then click **OK**.

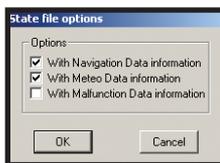

Loading States

To load an aircraft state files file, click the **LOAD** button to bring up the **Open State files** window.




Highlight the “state” file you wish to load from those listed, then click **OPEN**.

TIME FLOWN PANEL



The **Time Flown** panel always indicates the elapsed time ELITE has been flown. Time automatically stops when the flight is frozen or while not flying on the **Instrument** panel.

CONFIGURATION PAGE

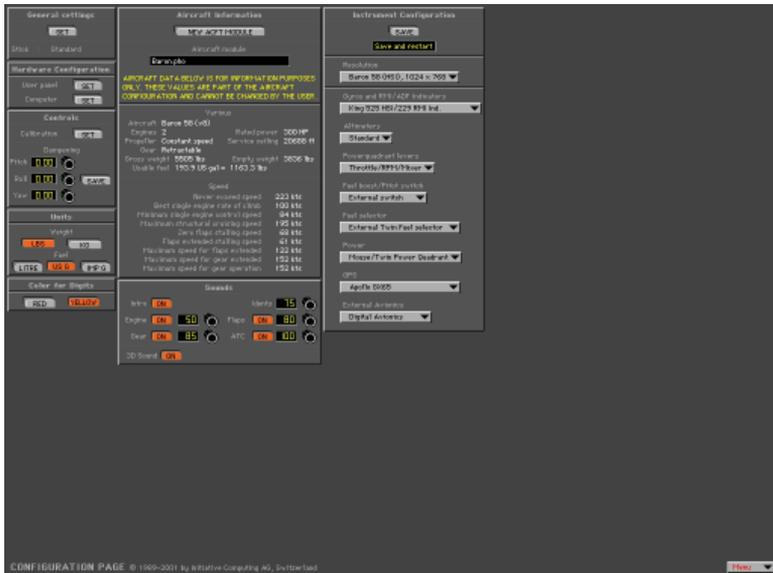

Configuration Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon, help is available for that item. Simply click on the item to display related help tips.

Use this page to configure flight controls, hardware, instrumentation, and sound. Some of these have already been covered during the Startup procedures in Chapter One.

STATE FILES

When the “Ask for **State File** at Program Start” button is **ON**, ELITE will display a dialog box (on every startup) allowing you to choose any training “State File” previously saved. You will be positioned with the same aircraft in that specific state (including Nav data and Meteo State selected!).

VISUAL SETTINGS

When the “**Visual Settings** always store in Preference File” button is **ON**, all visual settings selected on the Control page are stored.

PASSWORD PROTECTION



You may protect the **Configuration** and **Modification** pages with a password. Click on the **SET** button, type a password and follow remove instructions on the screen. Click **OK** to save the settings. To delete the password, click the **SET** button and enter the password. When asked for a new password, select **OK** with the password field blank.

TIME DIFFERENCE LT TO UTC

For ELITE to properly calculate daylight (sunrise and sunset) times, you must set the difference between your local time (LT) and UTC (Zulu) time. First verify that your computer's clock is set correctly. Click on the **SET** button. Calculate your local time using 12:00UTC as a reference. For example in Orlando, Florida (UTC-5) you would set the local time value to 07:00, i.e. 12:00UTC - 5Hrs = 07:00. For periods of Daylight Saving Time (UTC-4) in Orlando, this value would be set to 08:00. To have ELITE perform this calculation automatically (recommended) simply click the “Take Local Time from Computer” SET button.



ATD DETECTION REPORT

With **ATD Detection Report** button **ON** (ATD version only), ELITE will verify (on every startup) connection and proper communication with the required hardware necessary for use as an approved ATD (**A**viation **T**raining **D**evice). If a required device(s) is not present or proper communication can not be established, a warning message will appear during program start advising the system may **NOT** be used for flying credit allowed by the FAA.

ACTIVATING FAILURES WITH KEYBOARD

Failures Activating with Keyboard ON allows the user to fail specific instruments and systems via the keyboard completely independent of the simulation. This is especially useful for system configurations not incorporating a separate graphical instructor's station (2nd monitor). The instructor can control failures without interruption of the simulation or the student's flight. Keyboard commands are as follows:

| INSTRUMENT FAILURE | ACTIVATE INSTANT FAILURE | ACTIVATE GRADUAL FAILURE | DEACTIVATE FAILURE |
|---------------------|--------------------------|--------------------------|--------------------|
| Attitude Indicator | 1 | 7 | SHIFT 1 or 7 |
| Directional Gyro | 2 | 8 | SHIFT 2 or 8 |
| Vertical Speed Ind. | 3 | 9 | SHIFT 3 or 9 |
| Altimeter | 4 | 0 | SHIFT 4 or 0 |
| Airspeed Indicator | 5 | Q | SHIFT 5 or Q |
| Turn Coordinator | 6 | W | SHIFT 6 or W |

SYSTEM FAILURES


| | | | |
|------------------------|-------|-----|-------------|
| Vacuum | ALT 1 | N/A | SHIFT&ALT 1 |
| Static | ALT 2 | N/A | SHIFT&ALT 2 |
| Pitot Freeze | ALT 3 | N/A | SHIFT&ALT 3 |
| Pitot & Drain | ALT 4 | N/A | SHIFT&ALT 4 |
| Electrical | ALT 5 | N/A | SHIFT&ALT 5 |
| Left Engine(or single) | ALT 6 | N/A | SHIFT&ALT 6 |
| Right Engine | ALT 7 | N/A | SHIFT&ALT 7 |

MEASUREMENT FOR WEIGHT & FUEL

You can choose what units of measurement are displayed for weight and fuel values as desired.



- Weight in pounds or kilos
- Fuel in liters, U.S. gallons or Imperial gallons

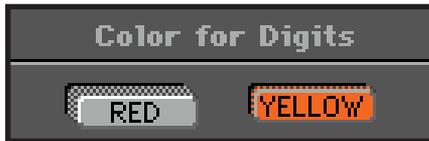CHANGING HANGING COLOR OF NUMBERS

For readability, you can change the color of numbers shown on all pages (except the instrument panels.) Click on **RED** or **YELLOW** as desired.

SOUND AND VOLUME CONTROL



ELITE's **Advanced True Integrated Sound (ATIS)** smoothly mixes multiple-channel aircraft and ATC sounds providing a realistic, uninterrupted, high quality, ((stereo)) audio environment (stereo sound card and speakers required). The **Sounds** control panel illustrated on previous page lets you tailor, or mix individual sound elements, giving you complete control of your ELITE sound experience.

Engine sound can also be switched **ON** or **OFF** with the "E" key on the keyboard.

3D SOUND



When enabled, allows for an enhanced audio experience on 3D compatible sound systems.

AIRCRAFT INFORMATION

The **Aircraft Information** panel shows actual configuration details of the aircraft.

Figures cannot be changed and are for information purposes only.

| Aircraft Information | | | |
|--|-------------------------|-----------------|----------|
| NEW ACFT MODULE | | | |
| Aircraft module | | | |
| Bonanza.pho | | | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | | | |
| Various | | | |
| Aircraft | Bonanza A36 (v8) | | |
| Engines | 1 | Rated power | 300 HP |
| Propeller | Constant speed | Service ceiling | 18500 ft |
| Gear | Retractable | | |
| Gross weight | 3693 lbs | Empty weight | 2517 lbs |
| Usable fuel | 74.0 US gal = 443.7 lbs | | |
| Speed | | | |
| Never exceed speed | 205 kts | | |
| Best single engine rate of climb | --- | | |
| Minimum single engine control speed | --- | | |
| Maximum structural cruising speed | 167 kts | | |
| Zero flaps stalling speed | 68 kts | | |
| Flaps extended stalling speed | 61 kts | | |
| Maximum speed for flaps extended | 124 kts | | |
| Maximum speed for gear extended | 154 kts | | |
| Maximum speed for gear operation | 154 kts | | |

Example

MODIFICATION PAGE



Modification Page

“HELP Tips” are available anytime by pressing ALT-H. Move the help cursor (?) over any on-screen item that you would like more information about. When the help cursor reveals its document icon help is available for that item. Simply click on the item to display related help tips.

The **Modification Page** allows you to create or modify up to 200 facilities, fixes, NAVaids or holding patterns in each navigation database worldwide.

CREATING FACILITIES

The desired facility can be created by clicking on the appropriate button. When a button is clicked, a window will appear showing the detailed data fields required to create the facility.



MODIFYING FACILITIES

Any facility can be modified by using the **MODIFY** button, shown on the **Modify** panel.



Click on the **MODIFY** button and then the desired facility to be changed. A window will appear with the specific data of the facility. Data can be changed and the change will take effect after clicking on the **OK** button.

DELETING FACILITIES

Facilities can be deleted as well as created and modified. Click on the **DELETE** button first and then on the facility you want to delete.

A pop-up window will ask for verification before the deletion takes place.

NOTE: A deletion or modification does not modify the original database file on your hard disk, but only a copy of the data.

If you choose to delete an original facility that has already been modified, a pop-up window asks for verification to delete the modification.

If you choose to delete a self-created facility, the pop-up window will ask you if you really want to irrevocably delete your self-created facility.

After creating, modifying or deleting a facility, click on the **OK** button to confirm the changes.


If you click on the **CANCEL** button, all previous instructions are cancelled and you return to the **Modification** page.

All self-created and modified facilities are displayed in red on the **Modification** page. When changing to the Map page, your modifications have the same appearance and

color as all original data. When changing back to the MOD page, however, your changes will again appear in red.

UNDO CHANGES

To return to the original status of facilities, you can undo modifications or deletions. Hold the **ALT** key while clicking on the **MODIFY** button. The following pop-up window will appear on the screen.

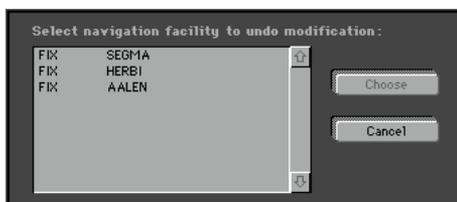

Now, select and choose to undo changes.

To restore an original facility that had been deleted, hold the **ALT** key while clicking on the **DELETE** button. The following pop-up window will appear on the screen.



You can now undo a previous facility deletion and it will once again be displayed on the Map.


Deleting an existing (original) facility counts as one change. Deleting a self-created or modified facility releases one for further use. Undeleting a previous deletion of an original facility will also release a change for further use.

When 200 modifications have been made the following message appears:




FACILITY INFO

Click and hold the mouse on any facility to display detailed information about that facility. For runway information, click on the runway threshold.

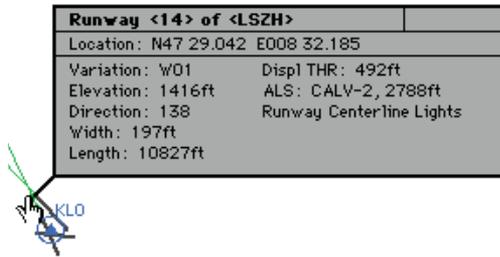

When facilities are in the same location or covered by other ones, click on the same spot once more and information about the next facility will appear.

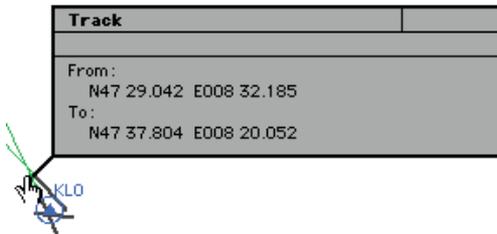

In the example above, several facilities nearly occupy the same location or are co-located. Information on these facilities is layered. Clicking the same spot repeatedly cycles through these layers to reveal information about each specific facility.

VOR

Identification code:

Location: **N47 28.633** **E008 32.2 17** **DME EQUIPPED**

Variation: **W00.0** ° Station elevation: **1000** ft

Frequency: **108.00** MHz DME bias: **0.0** nm

CANCEL **OK**

DME

Identification code:

Location: **N47 28.633** **E008 32.2 17**

Variation: **W00.0** ° Station elevation: **1000** ft

Frequency: **108.00** MHz DME bias: **0.0** nm

CANCEL **OK**

NDB

Identification code:

Location:

Variation: ° Station elevation: ft

Frequency: KHz

MARKER

Type:

Identification code (Awy /Term):

Location:

Variation: ° Station elevation: ft

Orientation: °

FIX

Identification code:

Location:

Variation: °

LOC/GS

LOC:
 Identification code: Location:

Variation: ° Station elevation: ft Front Crse W.: °

Frequency: MHz Magn. Loc. Bearing: °

GS:

Location: GS Angle: °

or HDG: ° Distance: nm

DME equipped: DME bias: nm

HOLDING

Identification code:

Location:

Variation: ° Inbound course: °

Turn direction:

Leg length: nm Turn radius: nm

CHAPTER 3

EXTERNAL VISUAL DISPLAY - GENVIEW™

GENVIEW VISUAL DISPLAY

GenView™ is an add-on visual display database that will allow you to fly in the virtual world with accurate digital elevation models (DEM) and vector data accurately depicting rivers, lakes, highways, railroads and built up areas. In addition, every airport environment is highly rendered with runway designators, appropriate runway lighting, approach light systems and properly lighted generic taxiways. Inherent to the DEM is a fully programmable dynamic weather system that further enhances the realism of flight by providing 3-D obstructions to visibility, cloud coverages, and several transition zones or layers for IFR, MVFR, SVFR or VFR on top. Utilizing actual downloadable METAR reports, you can create a real-time flight experience and save the most challenging weather scenarios for recurrent training.

GENVIEW VECTOR DATA

Elements in the digital elevation model depicts rivers, lakes, highways, railroads and built up areas such as cities, towns, villages, etc.

GENVIEW RUNWAY DEFINITIONS

1. Runways will have number designators such as 08 (8 for USA) or 26.
2. Centerline lights if appropriate. Space between lights is 50m.
3. Runway edge lights if appropriate. Space between lights is 50m.
4. Approach lighting system. Distance in accordance with ICAO/FAA standard.

TAXIING IN GENVIEW

1. Generic taxiways have been implemented in GenView to allow the pilot to more closely follow the checklist sequence if used (conducting run ups, for example). Though the location of the runway and NAVaids are always accurate, the layout and orientation of taxi ways may not represent the exact layout at that airfield.
2. When ELITE is first loaded, the default position of the aircraft is on the end of the runway. You can reposition the aircraft relative to the taxiway in three ways:
 - a. Taxi the aircraft to the position you want to start (least recommended, especially if you are in a hurry)
 - b. Go to the **MAP Page**. Click on the aircraft symbol and hold the mouse button. Press the **ALT** key and drop the aircraft at the runway end and it will reposition to the taxiway parallel to the active runway.
 - c. Go to the **MAP Page**. Click on the aircraft symbol and hold the mouse button. Press the **SHIFT** key and drop the aircraft at the runway end and it will reposition perpendicular to the active runway.
3. The length of the runway determines the width of the taxiways (longer runways equal wider taxi ways). Wide taxiways have blue edge lights spaced at every 50m/164ft. Smaller taxiways have green centerline lights spaced at 50m/164ft. Runways with a width of 16m/52ft or less have no taxi way lights.

4. The length of the runway defines the amount of taxiway exits:

| | |
|--|---------|
| Runway length smaller 2500 ft | 2 exits |
| Runway length smaller 4500 ft | 3 exits |
| Runway length smaller 6500 ft | 4 exits |
| Runway length equal or longer 6500 ft | 5 exits |

Intentionally
Left
Blank

CHAPTER 4

OPERATIONAL CONCEPTS

Before we begin flying, it is important to cover the basic operational concepts regarding control, instruments, and avionics manipulation.

The relationship between the pilot and ELITE is basically the same as between the pilot and the aircraft — the pilot's left hand moves a control device to control pitch and bank of the aircraft while his right hand is free for operations in the cockpit.



Mooney M20J

The avionics and instrumentation in the ELITE Photo Realistic aircraft modules are extremely accurate in every operational detail to give you the best procedural training possible on a PC-based simulator. As with every ELITE version, it is assumed that the operator is a pilot and familiar with operating aircraft avionics and controls. Our intent is to show you how to operate the equipment only as it relates to this software and your computer. Detailed description and operations of the King Flight Control Integrated Systems will require a Pilot's Guide or manufacturer's Operations Manual.

BASIC OPERATIONAL CONCEPTS

“Virtual” operations in the cockpit consist of using the mouse cursor shaped like a “hand” to push buttons, twist knobs, move handles, trim wheels, etc. With the use of optional external peripherals such as avionics panels and/or power quadrants, the use of the mouse for most cockpit operations can be avoided. Controls to fly the aircraft (yokes or flight sticks) are necessary. Rudder pedals are optional, but are highly recommended for single-engine operations in the twin-engine aircraft.

KEYBOARD CONTROL

The **keyboard** is not used to fly the aircraft, but rather only to provide shortcut key commands to assist the user in general operations and map functions. These functions can be found on the **MAIN MENU** dialog box, scrolling to **MAP** screen and pressing the “?” at the bottom of the screen.

MAP SCREEN SHORTCUTS:

Zoom

| | |
|---------------------|-------------|
| I | In |
| O | Out |
| N | Normal View |
| Alt + Click/Drag | Zoom In |
| Alt + Shift + Click | Zoom Out |

Scroll

| | |
|-------------|-------|
| Left Arrow | Left |
| Right Arrow | Right |
| Up Arrow | Up |
| Down Arrow | Down |

Route

| | |
|----------------------|------------|
| Ctrl + Click | New Point |
| Ctrl + Shift + Click | Move Point |

Ctrl + Alt + Click

Delete Points

Ctrl + "CLEAR"

Delete all Points

HDG/Dist

Shift + Click

Show heading and distance

Position

C

Center map to ACFT

Ctrl + C

Move ACFT to Map center

Custom Zoom

Ctrl + Click in

"Zoom level Window"

Store Actual zoom level

Click in

"Zoom level Window"

Set stored zoom level

GENERAL SHORTCUTS:

Visual

T

Look Down

G

Look Center

B

Look Up

Shift + Left Arrow

Look to left

Shift + Up Arrow

Looks to Front

Shift + Right Arrow

Look to Right

Simulation Speed

S

Slower

F

Faster

Control

V

Toggle Visual

Alt + F

Freeze

Alt + Q

Quit

Alt + H

Help

Engine Sound

E

On/Off

MOUSE CONTROL

Manipulation of ELITE controls are simple but may require practice. The mouse cursor is a hand.

Press buttons, or turn knobs by placing the virtual “fingertip” on the button, knob or switch on the instrument panel and pressing the left mouse button and moving the mouse left or right (called click and drag). Operation is the same for stacked knobs or bezel rings. The fingertip is used as you would use your finger in the cockpit.

To move an actuator such as flaps or gear handle, move the fingertip over it, press and hold the mouse button (as if seizing the actuator in the cockpit), drag it to the desired position and then release the mouse button.

Always hold the mouse perpendicular to the computer display. This is best accomplished by sitting in front of the screen and holding the mouse at about the position where the power controls are mounted, relative to the cockpit seat. If you hold the mouse at the wrong angle, the hand does not move in a natural way.

PUSHING BUTTONS:

Push Buttons control many cockpit functions, and in ELITE, they appear three dimensional.



A **Push Button** is activated by moving the fingertip over it and pressing the mouse button. Any button that is in its *down* or *on* position appears “*pushed-in*,” a button in its *up* or *off* position appears “*popped-out*.” Some push buttons are *toggle buttons*. They remain *down* or *on* once they have been pushed. To release a toggle button just push it again. Some buttons also light up when pushed in and

others are labeled with text or a symbol, indicating their operation.

KNOBS AND ROTARY DIALS:

Knobs and rotary dials are common types of devices in a cockpit. They are used, for example, to set the heading bug and the Course Deviation Indicator (CDI) on the HSI, or to set radio frequencies. Where rotary dials are used in the real cockpit, there are knobs or push buttons to simulate them in ELITE.



Rotary Dials are activated by positioning the finger tip cursor on the edge of the dial, holding the mouse button down, and then moving the mouse diagonally. Right movement turns the dial to the right (clock wise) and increases numbers, movement to the left has the opposite effect. In order to continue turning, a rotary dial changes to “auto scroll” when the fingertip is held at the edge of the screen and can’t be moved further. The button keeps turning as long as the fingertip stays at the edge area or as long as the mouse button is held.

NOTE: An alternative to changing avionics frequencies is to click on the numbers themselves. Clicking on the right side of the number decreases and clicking on the left side increases the numerical count.

SWITCHES:

Switches work similarly to push buttons. Click on them to operate like a typical rocker switch.



POWER LEVERS:


In the ELITE cockpit, power levers are graphically modeled and colored according to those in the aircraft, like throttle, propeller (RPM), mixture, flaps and gear.

Operate the levers by moving the fingertip cursor over the lever, press and hold the mouse button, then drag the lever up or down by moving the finger tip. Release the mouse button when the settings are as desired.



WHEELS:

Rudder and elevator trim wheels are operated like levers. Move the fingertip cursor over the wheel, press and hold the mouse button, rotate the wheel by moving the fingertip. Release the mouse button when the settings are as desired.

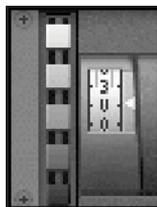

NOTE: The mouse “holds” the lever or wheel as long as the mouse button is held, even after the fingertip has left the lever or wheel symbol.

PROGRAM MENU

After starting the program, you will enter the simulation in the cockpit (in front of the Instrument panel).

The MENU button at the bottom right of your screen is your access to the many features.




Click and hold on the MENU button to open the menu. While holding your mouse button, move the cursor to the menu selection and release. As you move through each selection, the item to be opened will be highlighted.

Keyboard shortcuts are listed beside their corresponding menu item. For shortcuts, hold the keyboard **ALT** key and the designated letter. CAPS Lock should be OFF.

NOTE: The simulation is in the FREEZE mode if Menu or FREEZE is colored red.

The following is only an overview of the MENU layout. For detailed capabilities and operations, see Chapter 4, Program Features.

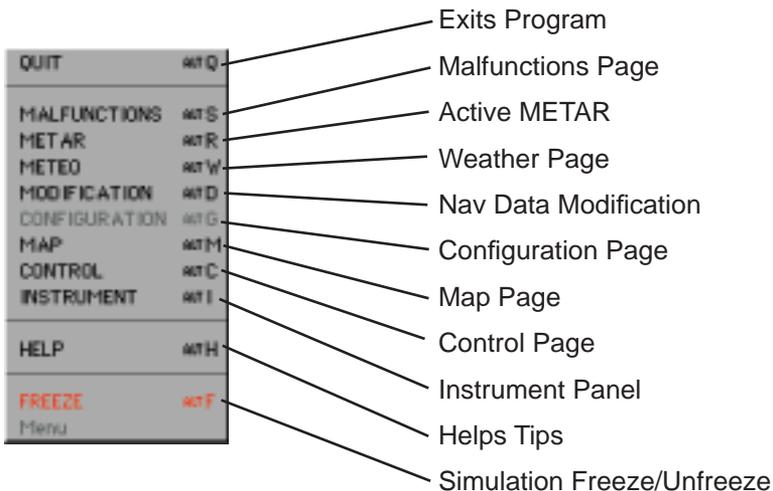

MALFUNCTIONS PAGE

The MALFUNCTIONS Page is used to create failure scenarios. You have the opportunity to selectively or randomly fail individual instruments, systems, avionics, engines, gear, flaps, and more.

METEO PAGE

The METEO (meteorological) Page is used to create the weather environment. Various parameters such as visibility, ceiling, wind, turbulence, pressure and temperature can be adjusted as desired.

METAR PAGE

The METAR Page is used to download real-time weather reports from METAR reporting stations for use in ELITE GenView. When METAR weather is “engaged” (activated) to function in ELITE, the weather dynamically changes when flying between METAR reporting stations and METAR time.

MODIFICATION PAGE

The MODIFICATION Page is used to add, delete or modify navigation data base facilities.

Fifty modifications/additions are possible for each navigation data base. The US is divided into 9 areas.

CONFIGURATION PAGE

The CONFIGURATION Page is used to:

- set ELITE start up preferences
- adjust control sensitivity
- change units of measurement for fuel and weight
- turn sounds on/off; adjust volume levels
- calibrate steering devices

- load new aircraft modules
- save instrument configurations where applicable.

Aircraft operational characteristics and limitations are also shown (but cannot be modified).

MAP PAGE

The MAP Page is a graphical representation of the flying area showing navigation facilities, frequencies, lat/long, runways, boundaries and much more. An aircraft symbol shows the flight path in real time (both horizontal and vertical profile views) that can be replayed, saved and printed for evaluation. Over 15 map features can be displayed at 8 separate zoom levels. The aircraft flight parameters (magnetic heading, altitude and IAS) can be set from the map page. In addition, you can also save and load training states or load Instrument Approach Scenarios (IAS).

CONTROL PAGE

The CONTROL Page allows you to set date and time of day, airport lighting features and run way markings. Activate yaw control (for using rudder pedals), adjust fuel loading and aircraft weight configuration and call sign. Save and load training situations you created (training states) or load IAS.

INSTRUMENT

Selecting INSTRUMENT brings you back to the chosen aircraft's instrument panel (cockpit).

FREEZE

The FREEZE selection suspends the simulation. Aircraft parameters (i.e. power settings, frequency changes, OBS selections, etc.) can still be changed. When first entering ELITE, the program is in the FREEZE mode as indicated by a red MENU bar in the lower right corner of the screen.

When FREEZE mode is released, the aircraft engine(s) will be ON.

QUIT

Selecting QUIT ends the program and returns you to the operating system.

INSTRUMENT SCREEN

The instrument screen incorporates all particular items needed to pilot an aircraft. A cockpit window in the upper left hand corner of the screen offers outside views such as runway environments, ground, and weather obstructions to visibility such as fog and low ceilings.

NOTE: The runway considered active by ELITE has its edge lights, centerline lights and approach lights on. ELITE determines the active runway based on the position of the aircraft and course relative to the runway, or in other words, the closest aligned run way with the aircraft. Depending on environmental settings, lighted runways can appear gradually out of fog.

As the aircraft descends below the programmable cloud base, the runway and ground become visible. When the aircraft is above the established ceiling, it is in the clouds, which show as a grey window.



This window shows a runway with a British CALVERT II high intensity approach light system in a night approach. The visibility is set such that the entire runway is visible.



This window shows the scene at decision height on an ILS approach with minimal visibility to a runway with an ALSF high intensity approach light system (HIALS) in daylight.

Relative motion of moving through the clouds is given by slight color changes in the “out-of-window” view. The effect is a distraction that adds realism to the flight. See Chapter 4, Program Features, for information on changing and customizing environmental conditions.

GENVIEW VISUAL DISPLAY

GenView™ is an add-on visual display database that will allow you to fly in the virtual world with accurate digital elevation models (DEM) and vector data accurately depicting rivers, lakes, highways, railroads and built up areas. In addition, every airport environment is highly rendered with runway designators, appropriate runway lighting, approach light systems and properly lighted generic taxiways. Inherent to the DEM is a fully programmable dynamic weather system that further enhances the realism of flight by providing 3-D obstructions to visibility, cloud coverages, and several transition zones or layers for IFR, MVFR, SVFR or VFR on top. Utilizing actual downloadable METAR reports, you can create a real-time flight experience and save the most challenging weather scenarios for recurrent training.

GENVIEW VECTOR DATA

Elements in the digital elevation model depicts rivers, lakes, highways, railroads and built up areas such as cities, towns, villages, etc.

GENVIEW RUNWAY DEFINITIONS

1. Runways will have number designators such as 08 (8 for USA) or 26.
2. Centerline lights if appropriate. Space between lights is 50m.
3. Runway edge lights if appropriate. Space between lights is 50m.
4. Approach lighting system. Distance in accordance with ICAO/FAA standard.

TAXIING IN GENVIEW

1. Generic taxiways have been implemented in GenView to allow the pilot to more closely follow the checklist sequence if used

(conducting run ups, for example). Though the location of the runway and NAVaids are always accurate, the layout and orientation of taxi ways may not represent the exact layout at that airfield.

2. When ELITE is first loaded, the default position of the aircraft is on the end of the runway. You can reposition the aircraft relative to the taxiway in three ways:
 - a. Taxi the aircraft to the position you want to start (least recommended...especially if you are in a hurry)
 - b. Go to the **MAP Page**. Click on the aircraft symbol and hold the mouse button. Press the **ALT** key and drop the aircraft at the runway end and it will reposition to the taxiway parallel to the active runway.
 - c. Go to the **MAP Page**. Click on the aircraft symbol and hold the mouse button. Press the **SHIFT** key and drop the aircraft at the runway end and it will reposition perpendicular to the active runway.
3. The length of the runway determines the width of the taxiways (longer runways equal wider taxi ways). Wide taxiways have blue edge lights spaced at every 50m/164ft. Smaller taxiways have green centerline lights spaced at 50m/164ft. Runways with a width of 16m/52ft or less have no taxi way lights.

4. The length of the runway defines the amount of taxiway exits:

| | |
|---------------------------------------|---------|
| Runway length smaller 2500 ft | 2 exits |
| Runway length smaller 4500 ft | 3 exits |
| Runway length smaller 6500 ft | 4 exits |
| Runway length equal or longer 6500 ft | 5 exits |

ADJUSTING THE INSTRUMENT PANEL

While flying in GenView, you can control the size of the visual display with a simple “click and drag” on the dashboard, scroll of a mouse wheel or keyboard for increased viewing area. The keyboard commands to lower and raise the instrument panel are Control & Page Up, Control & Page Down, Control & Home, Control & End.

Use Shift & left arrow and Shift & right arrow for a maximum of 150° side view to each side and Shift & up cursor for front view. Use the Shift & Ins for a left 90° degrees view or Shift & Del for a right 90° degrees view. “Click and Drag” on the dashboard to increase viewing area.



Piper Archer III

USING THE MENU INTERFACE

The menu selection box is located at the lower right side of the monitor. Click on the main menu button once and the menu box will remain on screen until a page is selected or you click the mouse outside of the menu box. When the instrument panel is lowered, the main menu tab will disappear. To access the menu selection box when the instrument panel is lowered, right mouse click at any location on the aircraft instrument panel. The menu selection box will disappear when a page is selected or a mouse click is made outside of the menu box.

| | |
|---------------|-------------|
| QUIT | WTQ |
| MALFUNCTIONS | WT S |
| METAR | WT R |
| METEO | WT W |
| MODIFICATION | WT D |
| CONFIGURATION | WT G |
| MAP | WT M |
| CONTROL | WT C |
| INSTRUMENT | WT I |
| HELP | WT H |
| FREEZE | WT F |
| Menu | |

Intentionally
Left
Blank

CHAPTER 5

AIRCRAFT

Many aircraft use the same instruments and avionics configuration. Basic features of this equipment will be listed here. Any variations specific to aircraft models will be explained in that aircraft's section.

GENERAL INSTRUMENTS

ARTIFICIAL HORIZON

The Artificial Horizon or attitude indicator is the most important instrument in the cockpit for instrument flying. It displays pitch and bank in the usual way. Pitch lines are spaced 5° apart.



AIRSPEED INDICATOR

The Airspeed Indicator (ASI) is indicated in knots on the ASI instrument. The white, green, and yellow arcs as well as the red line have the standard meaning. True airspeed may be calculated by applying the usual techniques assuming ISA temperature. Air speed indicator window adjustments for TAS function on all **ELITE** photo-realistic aircraft. If the air speed indication should decrease without speed reduction, the "Pitot" may be iced. In order to prevent "Pitot" icing, turn on the **PITOT HEAT**.



TURN INDICATOR

The Turn Indicator (Turn Coordinator) is actually a combination of two instruments. The aircraft symbol indicates rate of roll and rate of turn and is proportional to the roll rate. When the roll rate is reduced to zero, the instrument provides an indication of the rate-of-turn. The marks stand for a standard rate-of-turn (3° per second). The ball reacts to gravity and centrifugal force to indicate the need for rudder application.



ALTIMETER

The Altimeter is the conventional three-pointer type. The air pressure is indicated in inches Hg (on the right side) and millibar in hPa (on the left side). Be aware that the instrument only shows the true altitude when its pressure setting corresponds to the QNH setting in the Environment panel on the Meteo screen.



VERTICAL SPEED INDICATOR

The Vertical Speed Indicator (VSI) indicates the rate-of-climb or rate-of-descent. Vertical Speed is not instantaneous and will exhibit trend and lag effects.



GYRO COMPASS

The Gyro Compass indicates the actual heading. It has a turning compass card. The directional gyro (DG) is not

slaved with the compass and will precess. As in the actual aircraft, it must be adjusted.

The orange arrow (heading bug) can be set with the rotary dial at the bottom right.



The DG/ADF configuration can be changed to an HSI/RMI configuration in some ELITE aircraft such as the Piper Arrow IV. See the Aircraft Information section on how to do this.

HORIZONTAL SITUATION INDICATOR

The Horizontal Situation Indicator (HSI) is connected to the NAV1 receiver. It consists of a turning compass card, a yellow course pointer (CDI) turned by the left rotary dial, an orange heading bug moved by the right rotary dial and a yellow glide slope mark on both sides (when on ILS). The actual course is indicated by the white lubber line on the compass card. The HSI replaces the standard directional gyro in the aircraft's panel, combining slaved heading and VOR/LOC/Glideslope deviation information into one compact display.



This HSI is set to a VOR



This HSI is set to an ILS

NOTE: A red HDG or NAV flag indicates absence of station reception or malfunction of the receiver.

VOR/LOC/GLIDESLOPE INDICATOR

The VOR/LOC/Glideslope Indicator utilizes the conventional crosspointer layout. It is connected to the NAV receivers (NAV1 or NAV2). The compass card is rotated by the OBS knob in the conventional manner.



Receiver is set to a VOR



Receiver is set to an ILS

RADIO MAGNETIC INDICATOR

The Radio Magnetic Indicator (RMI) incorporates a slaved (self-rotating) compass card, a green single pointer, and a yellow double pointer. The green single pointer may be switched between NAV1 receiver and NAV2 receiver. The double-line pointer is pointing to




the ADF receiver. If any navigation set is not receiving a valid signal from a station, the corresponding needle is parked in the horizontal position.

MOVING DIAL INDICATOR

The Moving Dial Indicator (MDI) is connected to the ADF receiver. It is an improved Relative Bearing Indicator (RBI) which has a fixed 360° compass card, where as the compass card of the MDI can be turned by the rotary dial. **Bearing Pointer** indicates relative or magnetic bearing to station as selected by HDG knob. If the relative heading of north is manually selected under the lubber line by the pilot, then the bearing pointer indicates the relative bearing to the station. If the aircraft's magnetic heading is selected under the lubber line by the pilot, then the bearing pointer indicates the magnetic bearing to the station.



MOVING MAP

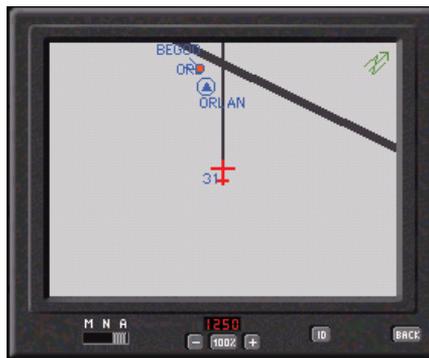

The **Moving map** feature is available in all ELITE photo-realistic cockpits and is activated by pressing the King Crown symbol on the DME instrument panel (ADF on the Baron & Bonanza models). The map can be displayed in three modes:

Mode M = MAP. This display presents the view that is also shown on the MAP page. The aircraft symbol moves across the map. When the aircraft reaches the edge of the map display, the aircraft and map are recentered. True north is always oriented to the top of the screen. A track representing the last two minutes of flight will be shown.

Mode N = NORTH. The aircraft remains centered on the map screen at all times. The aircraft heading reflects the actual magnetic heading of flight. True north is oriented to the top of the screen. A track representing the last two minutes of flight will be shown.

Mode A = AIRCRAFT. The aircraft symbol is at the fixed centered position and is always oriented to the top of the map screen. The aircraft symbol is oriented in the direction of heading. A track representing the last two minutes of flight will be shown.

ZOOM: The plus button zooms in and the minus button takes you out. The facilities shown on the instrument panel moving map screen are the same as on the MAP page. Unlike the map page however, only VOR, DME, NDB, fixes and LOC/GS antennas are available for viewing on the moving map. You can use the SHOW FACILITIES feature on the MAP page to customize the display on the moving map.

ID Button: This button will toggle the facilities identification on or off. When the ID button is pressed and lit, the navigation facilities identifiers will be displayed.

BACK: Turns the moving map display off.


RADIO NAVIGATION RECEIVERS

ELITE is equipped with up to five radio navigation equipment receivers and two communication receivers. The two “NAV” receivers are combined with the “COMM” receivers (COMM 1 / NAV 1), (COMM 2 / NAV 2).



NAV/COMM

Nav / Comm KX 165 TSO

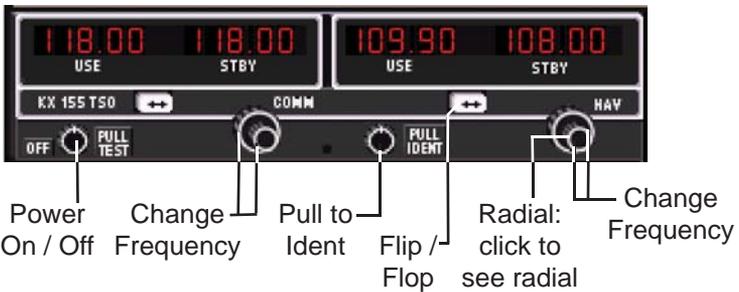


On the “COMM1/NAV1”, “COMM2/NAV2”, and the “ADF” receivers, the right window displays the stand by frequency and the left one displays the active frequency. Setting a frequency is done in the same way as on a real receiver. Use the rotary to count up or down the standby

frequency, or click on the numbers themselves (Clicking on the right side of the number decreases and clicking on the left side increases the numerical count). Pushing the double-arrow button will toggle (“flip-flop”) the frequencies. Each receiver may be switched on and off individually by dragging the **ON/OFF** button. The receivers are initially all on. The identification code of the currently selected “NAV” station will be audible over the computer’s built-in speaker, or external speakers, when the **ID** button is pressed.

When the **RAD** button (Radial) on the NAV1 or NAV2 receiver is activated, the actual radial from the VOR station is displayed in place of the standby frequency. While in the radial mode, direct tuning of the active frequency is available using the methods described above. There is, of course, no radial available when an ILS frequency is tuned.

DME RECEIVER

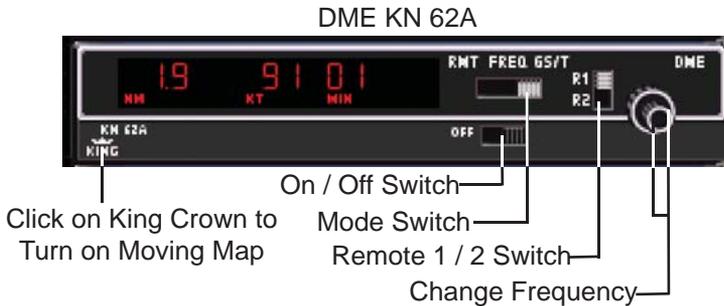

Frequency Mode:

Distance and selected frequency are displayed.

The DME receiver is in the frequency mode by default. It is then channeled internally with its own two concentric frequency selection knobs (rotary dials) which count up or down the active frequency. If a tuned station is DME equipped the relative distance to the station is indicated.

GS/T Mode:

Distance, Ground Speed and TTS are displayed.


Activating the **Ground Speed** (GS) button results in displaying the Ground Speed relative to the DME station (in knots) instead of the DME frequency. In addition, the **Time-to-Station** (TTS) is displayed. Rotating the frequency selector will have no effect on the display, because the DME is in “Frequency Hold.” This mode prevents accidental rechanneling of the DME when the frequency is not displayed.

RMT Mode:

Distance, Ground Speed and TTS of remote frequency are displayed.

By activating the **R1** or **R2** button, the corresponding frequency is automatically taken


from the NAV1 or the NAV2 receiver. Search time is about one second. When no ground station can be locked, “dashes” will be displayed. Distance, Ground Speed and TTS are only available if the station remotely tuned is DME equipped.

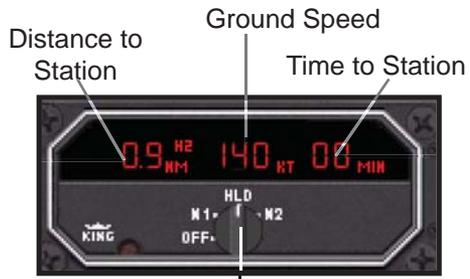

Nav Selection and Hold (Click and drag knob left or right)

ADF RECEIVER

ADF KR 27 TSO

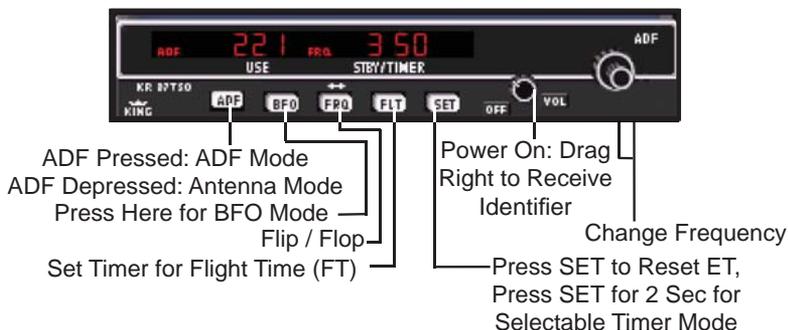


The Automatic Direction Finder Receiver (ADF) in ELITE selects a Non Directional Beacon (NDB) in the frequency range ± 600 Hz around the frequency set. This means that, for example, an NDB with a frequency of 371.5 kHz may be received with the ADF set to either 371 or 372.

NOTE: When a receiver is tuned to a frequency, the closest NAVaid with this frequency is received. When two facilities in the same area have identical frequencies, ELITE will show a dialog box to select the desired one.

MARKER RECEIVER


The Marker Receiver can be switched to LO, HI and TEST. The LO selection may be made to set marker reception to low sensitivity, i.e. markers will only receive data at a short distance, such as during the approach. The marker lamp panel consists of the conventional: **A** lamp (white when lit, airway marker, inner marker), **O** lamp (blue when lit, outer marker), **M** lamp (amber when lit, middle marker).

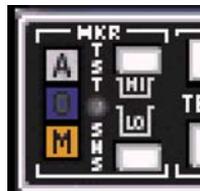

When passing a marker, the appropriate identification code is heard while the corresponding marker lamp flashes. The duration of the marker reception as well as the reception range depends on the type of marker.

TRANSPONDER

Transponder KN 67A

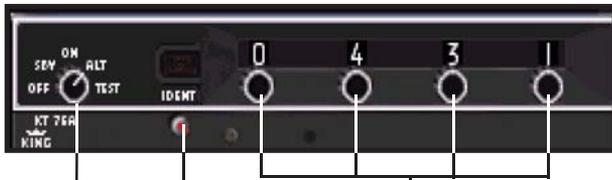

- Change transponder mode (Click mouse on knob and drag left or right to activate transponder features)
- Push button to IDENT
- Change transponder code (Click mouse on knob and drag left or right to change number)

The Transponder is a radio transmitter and receiver which operates on radar frequencies. Receiving ground radar interrogations at 1030 MHz, it returns a coded response of pulses to ground-based radar on frequency of 1090 MHz.

GPS RECEIVER

UPS Apollo GX Series GPS



The Apollo GX products are high performance GPS products with a high resolution moving map display. The Apollo GX's use a powerful, accurate 8-channel GPS engine designed specifically for high performance aviation use.

The GX50 and GX55 are GPS receivers. The GX60 and GX65 combines the GPS receiver with a VHF comm radio in a single package.

GX55

The Apollo GX55 is TSO-C129 Class A2 authorized for IFR en route and terminal operation.

GX50

The Apollo GX50 GPS receiver possesses all of the performance features of the GX55, plus more. The GX50 is TSO-C129a Class A1 authorized for IFR non-precision approach operation.

GX60

The Apollo GX60 combines the physical package of the GX50 GPS receiver with a revolutionary VHF Comm transceiver.

GX65

The Apollo GX65 possesses the same features as the GX60, except it is not certified for IFR approaches.


You can find the manuals for all GX models in the ELITE directory in the folder MANUALS.

Trimble 2000 Approach Plus GPS

The Trimble 2000 Approach Plus GPS receiver is a powerful navigation management system. GPS (Global Positioning System) is a navigation system based on satellite ranging from a constellation of 24 satellites orbiting the earth. The Trimble 2000 GPS receiver can be used for several functions including: direct navigation, flight planning, navigation, position finding, ETA/fuel consumption, emergency navigation, controlled air space identification, preflight planning, and many navigator information functions (com frequencies, run way lengths,

ground track, ground speed, winds aloft, TAS, and density altitude calculations).

Trimble 2000 Approach Plus GPS

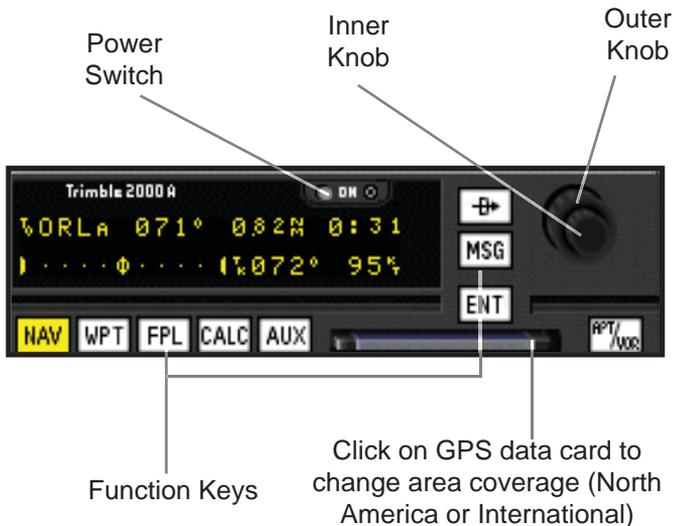

The Trimble GPS unit in ELITE functions exactly like the real Trimble 2000 Approach Plus GPS, because it uses the exact program code and navigational data that the real Trimble 2000 GPS uses. The navigational data supplied by Jeppesen is intentionally shipped expired (expires every 56 days). Even though the data has every detail that is used in the real GPS, we use the “Database Expired” message as a reminder that the data is not to be used for real world navigation.

Included in back of this manual is a quick reference guide that covers most of the functions of the Trimble 2000 GPS. You find the complete Trimble 2000 GPS manual in the ELITE directory in the folder MANUALS.

GPS ANNUNCIATOR

With Apollo GPS

NAV/GPS indicator shows which navigation mode is displayed on Number 1 CDI.

GPS Message (MSG) Alert

OBS/HLD Indicator

APPRCH enabled Indicator

APPRCH active Indicator



Push switch to select.

Parallel Track Indicator (PTK)

OBS/HLD Button

Annunciator lamp test switch

With Trimble GPS

NAV/GPS indicator shows which navigation mode is displayed on Number 1 CDI.

GPS Message (MSG) Alert

GPS Waypoint (WPT) alerts waypoint arrival



Push switch to select.

Hold (HLD) alerts active flight plan is suspended at the current waypoint

Annunciator lamp test switch

GPS approach mode (APR) is armed when lit

Silver Crown Plus Avionics System

The Bendix/King Silver Crown Plus avionics system is an advanced version of the venerable Silver Crown avionics system used by ELITE. The Silver Crown Plus avionics system incorporates all of the familiar usefulness and functionality found in the previous system while introducing new features to enhance an already popular product.

The Bendix/King Silver Crown Plus avionics system is available for use in all ELITE aircraft modules. To use the Silver Crown Plus avionics system simply go to the CONFIGURATION Page of that particular aircraft module and select the Bendix/King Silver Crown Plus option from the item labeled Avionics Stack in the Instrument Configuration column. ELITE must be restarted to activate the Silver Crown Plus avionics system for use. The Silver Crown Plus avionics system will automatically be the default avionics system upon program start until another system is chosen to replace it.

Please refer to the SUPPORT section of the ELITE website (www.flyelite.com/support.html) for information and specific operating instructions pertaining to the Bendix/King Silver Crown Plus avionics system.



EFS 40 - EADI/EHSI

The Bendix/King EFS 40 is an advanced Electronic Flight Instrumentation System (EFIS) designed to meet the demands of today's complex flight environment. The actual real-world EFS 40 has numerous installation options/configurations that can be tailored to an individual aircraft and owner's preferences. The ELITE EFS 40 installation consists of the ED 461 control/display unit, ED 462 display unit, & the CP 470 control panel. The ED 461 and ED 462 function as the EHSI (electronic horizontal situation indicator) and EADI (electronic attitude direction indicator) respectively while the CP 470 is a separate control panel for the EADI. The EFS 40 EFIS is selectable in the following aircraft:

- TB10
- TB20
- Baron 58
- Seneca III
- Bonanza A36
- Arrow IV
- Mooney M20J
- King Air B200

To select and add the EFS 40 EHSI by itself or the EHSI/EADI combination to any aircraft listed (above) simply go to the CONFIGURATION Page and select the corresponding option as desired under the Instrument Configuration column. Press and HOLD the mouse button over the small down-arrow under HSI/ADI to view available options. Move the mouse cursor over the desired selection and release the mouse button to select. Once the selection has been made, press and HOLD the SAVE button at the top of the Instrument Configuration column. Holding the SAVE button

will save the selection(s) and Quit ELITE in one step. Restart ELITE to use the new configuration changes.


The complete EFS 40 Pilot's Guide can be found in the ELITE "Manuals" folder and is also available at www.bendixking.com or www.flyelite.com. Refer to the Pilot's Guide for specific operational techniques. Some of the EFS 40 functions are briefly outlined in the following diagrams. Please note that although most of the actual EFS 40 features/functions have been implemented in the ELITE EFS 40 unit, due to the numerous real-world installation options/configurations possible, not all features/functions are available.

Bendix / King EFS 40


EADI



EHSI

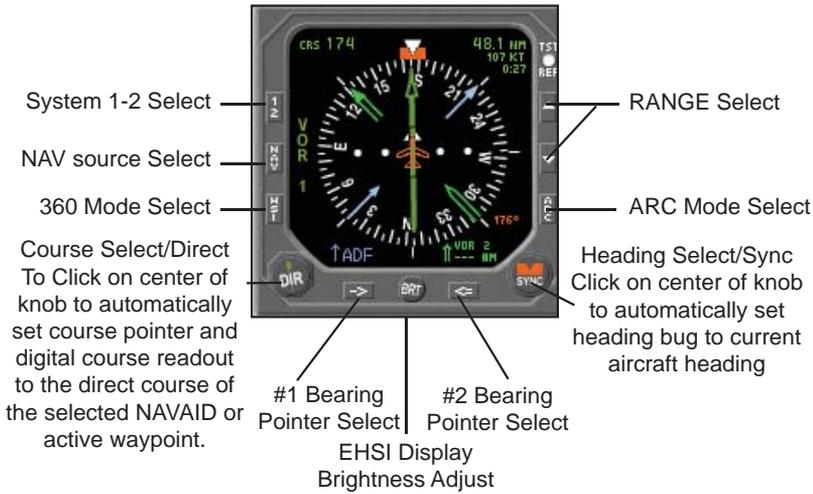

CP 470 EADI Control Panel

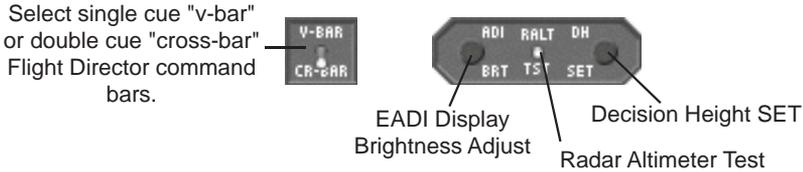

The EFS 40 EADI utilizes the CP 470 control panel pictured (below). Mode controls that are used with the EHSI are located on the periphery of the EHSI instrument itself.

AUTOPILOT

KAP 150 / KFC 150



The KFC 150 and KAP 150 are both two-axis automatic pilot systems that operate almost identically. These autopilots each provide pitch and roll stabilization and automatic trim as well as automatic response to all selected autopilot modes. The only difference being the KFC 150 also has a flight director (FD) function. Since the KAP 150 does not have a FD function it uses a standard attitude reference without V-bar commands.

To use the KAP 150 and KFC 150 autopilots please follow these simple instructions:

Before each use please press the TEST button and wait for the system to perform its self-test function.

AP ENG:

The most basic form of autopilot operation is to engage only the auto-pilot engage (AP ENG) mode button. In this mode, with no other modes selected, the aircraft will maintain the pitch attitude existing at the time of AP ENG engagement and will fly with the wings level. Use of the vertical trim (UP/DN) switch in this mode will affect an approximate 0.9 degree per second pitch change.

HDG:

In heading (HDG) mode the aircraft will maintain the heading selected by the heading 'bug'. Be sure to place the heading bug in the desired position before engaging the HDG button, as the aircraft will immediately begin turning in the shortest direction toward the 'bug'.

NAV:

In navigation (NAV) mode the autopilot will intercept and track VOR courses. To use the autopilot with a conventional CDI-type VOR indicator first make sure the autopilot is in HDG mode and then tune the desired navigation frequency. Set the OBS to the desired course and then depress the NAV button causing the NAV indicator to flash signifying the mode is armed. Within five seconds move the heading 'bug' to the same value as selected on the OBS. The autopilot will then fly a 45 degree intercept heading until course capture where up on the system will track the desired course.

NOTE: The NAV indicator will not flash if the NAV mode is selected while the aircraft is level within +/- 4 degrees and 2-3 dots of course deviation, but will rather go immediately into NAV mode directly.

To use the navigation feature of the autopilot with an HSI first tune the navigation frequency. Use the Course Set Knob to select the desired course line value. Set the intercept angle by placing the heading 'bug' on the desired heading and press the HDG button, if not already in HDG mode. Now press NAV button and fly the selected heading until course capture. The NAV light will flash until course interception to indicate that it is armed. (See the NOTE above.)

APR / GS / BC:

To use the autopilot in approach (APR) mode first make sure that the system is in HDG mode if using a conventional CDI-type VOR indicator. Tune the appropriate ILS, LOC or VOR frequency. Set the OBS to the final approach course. (NOTE: if intending to fly a back course be sure to use the front course setting. Press the BC button after pressing the APR button.) Press the APR button causing the APR light to flash indicating it is armed. Turn the heading 'bug' to the

inbound course within five seconds. The system will fly a 45 degree intercept heading until capturing the course. If flying an ILS the GS will be captured automatically causing the GS light to illuminate.

If using the APR mode with an HSI please tune the appropriate ILS, LOC or VOR frequency first. Use the Course Set Knob to set the desired final approach course. Turn the heading 'bug' and press the HDG button if not already in HDG mode. Press the APR button. The autopilot will fly the desired heading until course capture. The BC and GS features operate the same way as described above.

ALT:

To operate in altitude hold (ALT) mode first fly to and level off at the desired altitude and then press ALT. Altitude adjustments may be made in ALT mode by using the vertical trim (UP/DN) switch. Moving this switch in either direction while in ALT mode will cause the aircraft to climb or descend at approximately 500 fpm. When the switch is released the autopilot will maintain the new altitude.

CWS:

The control wheel steering (CWS) button located on the control yoke allows the pilot to maneuver the aircraft in pitch and roll without disengaging the autopilot. The autopilot resumes control when the button is released.


FD: (KFC 150 only)

The KFC 150 has a flight director (FD) function that the KAP 150 does not. ELITE aircraft modules using this autopilot have a V-bar that appears on the attitude indicator anytime the FD or AP ENG features are selected. If the FD function only is selected the V-bar will command the user to make control inputs to satisfy the system requirements by maneuvering the orange delta wing into the V-bar.

ALTITUDE/VERTICAL SPEED SELECTOR

This feature is available only with the Bonanza, Baron, Seneca III and King Air (King radio option) aircraft modules only. The KAS 297B offers the user the ability to pre-select altitudes and vertical speeds while using the autopilot.

Altitude Pre-Select - to pre-select an altitude the unit must first be indicating FT. If it is not then either push in the inner concentric knob if using a mouse or flip the toggle switch to ALT if using an ELITE avionics panel. Using the knob(s), choose the desired altitude and then press the ARM button to arm the altitude capture mode. This will cause ARM to appear on the indicator. Use pitch attitude hold or select a vertical speed to guide the aircraft to the desired altitude. As the aircraft nears the desired altitude the system computes a roundout and will indicate altitude capture (CAPT) as the aircraft levels off. Once the aircraft has leveled off the vertical speed mode disengages and the CAPT indication disappears.

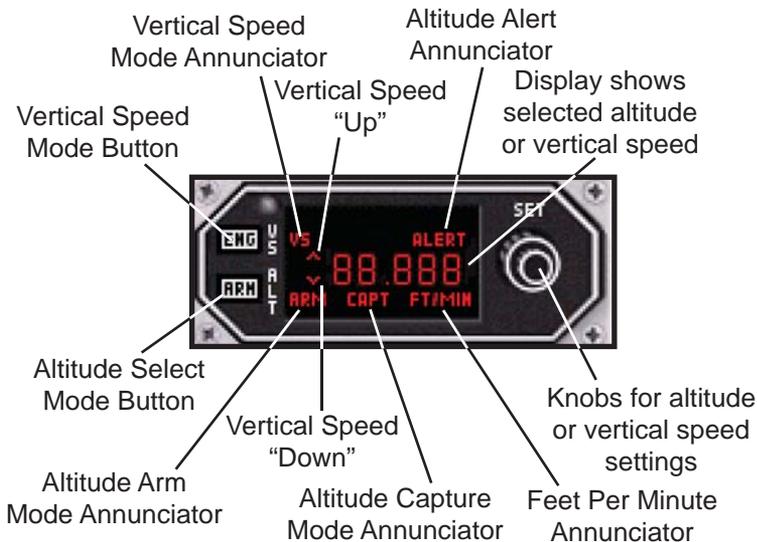

Altitude alerting is provided by the KAS 297B and alerts the user with a two second aural tone at +/- 1000 ft from the target altitude. An ALERT annunciation comes on with the tone and stays on until 300 ft from the target altitude. The aural tone also sounds again for two seconds when the aircraft reaches its selected altitude. The system also provides an aural warning any time the aircraft's altitude varies more than 300 feet from the selected altitude after level off.

Vertical Speed Pre-Select - to pre-select a vertical speed the unit must first be indicating FT/MIN. If not, pull the inner concentric knob when using a mouse or flip the toggle switch to V/S when using an ELITE avionics panel. Use the knob(s) to select the desired vertical speed. The indicated up/down arrows show whether a climb or descent has been selected. To engage the selected rate press ENG and VS will appear on the indicator. Engaging the vertical speed function will cancel the ALT mode if being used. There are several ways to change the rate of vertical speed once the function is engaged:

1. by rotating the knob while in V/S mode
2. by pressing the CWS button on the yoke and pitching to a new vertical speed value
3. by pressing the vertical trim switch on the autopilot. Using the vertical trim switch will affect a 100 feet per minute change in vertical speed for every second it is pressed

SINGLE ENGINE

CESSNA 172R



Cockpit Functions

Click on instrument knobs
and drag mouse to adjust
TAS, set aircraft symbol or
adjust altimeter.



EGT/Fuel flow gauge: indicator serves as a visual aid to help adjust mixture through monitoring of exhaust gas temperature. Click mouse on screw and drag to adjust peak EGT indicator.



Emergency Locator Transmitter, (ELT):

ON - Activates ELT immediately.

AUTO - Arms ELT for automatic activation if "G" switch senses a predetermined deceleration.

RESET- Deactivates ELT & rearms transmitter.




Model 3000-11

The ELT will activate with hard landings or crashes...reset to stop the alarm.

Clock / OAT Gauge:

Test Mode

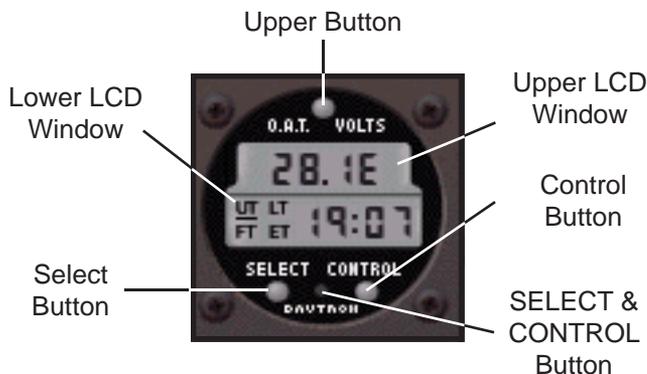

The unit may be tested by holding the SELECT button down for 3 seconds. Proper operation is indicated by the display 88:88 and activation of all four annunciators.

O.A.T./Voltmeter Operation

The upper portion of the LCD window is dedicated to O.A.T. and voltmeter operations. The voltmeter reading is preselected upon startup and is indicated by an "E" following the display reading. Pushing the upper control button will sequence the window from voltage to Fahrenheit ("F") to centigrade ("C"), and back again to voltage.

Clock Operations

The lower portion of the LCD window is dedicated to clock and timing operations. Pushing the **SELECT** button will sequence the window from universal time (UT) to local time (LT) to flight time (FT) to elapsed time (ET) and back again to universal time. Pushing the **CONTROL** button allows for timing functions with in the four **SELECT** menus. Setting procedures are as follows:

1. Setting Universal Times

Use the **SELECT** button to select universal time (UT). With the actual instrument, you would simultaneously press both the **SELECT** and **CONTROL** buttons to enter the set mode. With the ELITE model, press the **SELECT & CONTROL** button as shown in picture to enter the set mode with a single mouse click.

When ELITE is NOT in the **FREEZE** Mode, the tens of hours digit will start flashing. The **CONTROL** button has full control of the flashing digit, and each button push increments the digit. Once the tens of hours is set the **SELECT** button selects the next digit to be set. After the last digit has been selected and set with the **CONTROL** button, a final push of the **SELECT** button exits the set mode. The lighted annunciator will resume its normal flashing, indicating the clock is running in universal time mode.

2. Setting Local Times

Use the **SELECT** button to select local time (LT). Press the **SELECT & CONTROL** button with a single mouse click to enter the set mode. The tens of hours digit will start flashing. The set operation is the same as for UT, except that minutes are already synchronized and the UT clock cannot be set in local time.

3. Flight Time Reset

Use the **SELECT** button to select flight time (FT). Hold the **CONTROL** button down for 3 seconds or until 99:59 appears on the display. Flight time will be zeroed upon release of the **CONTROL** button.

4. Setting Flight Time Flashing Alarm

Use the **SELECT** button to select flight time (FT). Simultaneously press both the **SELECT** and the **CONTROL** buttons by mouse clicking on the **SELECT & CONTROL** button to enter the set mode. The tens of hours digit will start flashing. The set operation is the same as for UT. When actual flight time equals the alarm time, the display will flash. Pressing either the **SELECT** or **CONTROL** button will turn the flashing off and zero the alarm time. Flight time is unchanged and continues counting.

5. Setting Elapsed Time Count Up

Use the **SELECT** button to select elapsed time (ET). Press the **CONTROL** button and elapsed time will start counting. Elapsed time counts up to 59 minutes, 59 seconds, and then switches to hours and minutes. It continues counting up to 99 hours and 59 minutes. Pressing the **CONTROL** button again resets elapsed time to zero.


KI-209A Indicator



KI-208 Indicator




KR-87 Automatic Direction Finder (ADF)

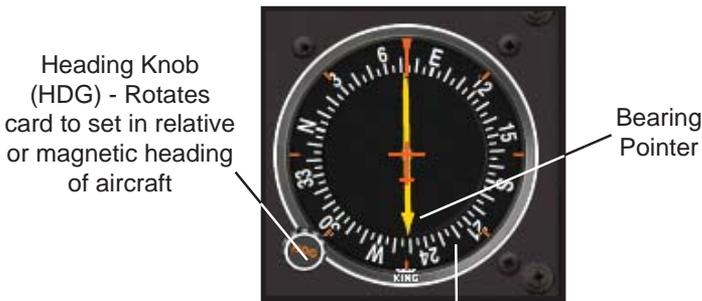

Compass Card - Manually rotatable card that indicates relative or magnetic heading of aircraft, as selected by HDG knob.

Engine driven mechanical tachometer is calibrated in increments of 100 RPM and indicates both engine and propeller speed. An hour meter in the dial records elapsed engine time in hours and tenths. The meter stops when the simulation is in FREEZE mode.

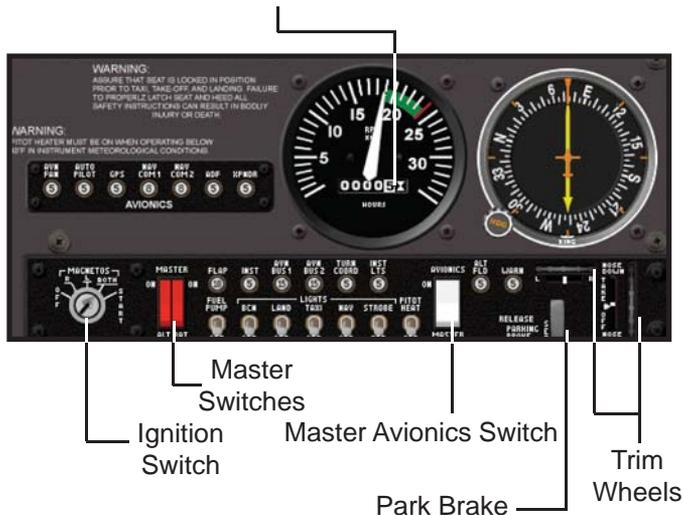

Fuel Selector - Click to change tanks

Throttle / Mixture/Fuel shutoff / Alternate Static Air - Click & drag to pull knobs

Aircraft Checklist**Before Starting Engine:**

| | |
|-----------------------|--------------|
| Brakes | TEST and Set |
| Electrical Equipment | OFF |
| Avionics Power Switch | OFF |
| Fuel Selector Valve | BOTH |
| Fuel Shutoff Valve | ON |

Starting Engine:

| | |
|----------------------------|--|
| Throttle | OPEN 1/4 INCH |
| Mixture | IDLE CUT OFF |
| Master Switch | ON |
| Auxiliary Fuel Pump Switch | ON |
| Mixture | ADVANCE to obtain 3-5GPH fuel flow, then return to IDLE CUT OFF position. |
| Ignition Switch | START |
| Mixture | ADVANCE smoothly to RICH as engine fires. |
| Oil Pressure | CHECK |
| Auxiliary Fuel Pump | OFF |
| Beacon Light | ON |
| Avionics Power Switch | ON |
| Radios | ON |

Before Takeoff:

| | |
|---------------------|-----------------|
| Parking Brake | SET |
| Flight Instruments | CHECK and SET |
| Fuel Quantity | CHECK |
| Mixture | RICH |
| Fuel Selector Valve | RECHECK BOTH |
| Elevator Trim | SET for Takeoff |
| Throttle | 1800 RPM |
| a. Magnetos | CHECK |

- b. Suction Gauge
- c. Engine Instruments

Annunciator Panel
 Throttle
 Radios and Avionics
 Wing Flaps
 Brakes

CHECK
 CHECK
 Ensure none are lit
 1000 RPM or less
 SET
 SET for Takeoff; 0-10°
 RELEASE

Takeoff (Normal):

Wing Flaps
 Throttle
 Mixture
 Elevator Control

0-10°
 FULL OPEN
 RICH
 LIFT NOSE WHEEL at
 55 KIAS
 70-80 KIAS
 RETRACT after
 reaching safe altitude
 and 60 KIAS.

Climb Speed
 Wing Flaps

En Route Climb:

Airspeed
 Throttle
 Mixture

70-85 KIAS
 FULL OPEN
 RICH

Cruise:

Power
 Elevator Trim
 Mixture

2000-2400 RPM
 ADJUST
 LEAN

Descent:

Power
 Mixture
 Fuel Selector Valve

AS DESIRED
 ADJUST
 BOTH

Before Landing:

| | |
|---------------------|------|
| Fuel Selector Valve | BOTH |
| Mixture | RICH |
| Landing/Taxi Lights | ON |

Landing (Normal):

| | |
|--------------|----------------------------|
| Airspeed | 65-75 KIAS (flaps UP) |
| Wing Flaps | AS DESIRED |
| Airspeed | 60-70 KIAS (flaps DOWN) |
| Touchdown | MAIN WHEELS FIRST |
| Landing Roll | LOWER NOSE WHEEL GENTLY |
| Braking | MINIMUM REQUIRED |

Balked Landing:

| | |
|-------------|--|
| Throttle | FULL OPEN |
| Wing Flaps | RETRACT to 20° |
| Climb Speed | 55 KIAS |
| Wing Flaps | 10°; RETRACT after reaching safe altitude and 60 KIAS. |

After Landing:

| | |
|------------|----|
| Wing Flaps | UP |
|------------|----|

Securing Airplane:

| | |
|--|---------------|
| Parking Brake | SET |
| Avionics Power Switch, Electrical Equipment | OFF |
| Mixture | IDLE CUT OFF |
| Ignition Switch | OFF |
| Master Switch | OFF |
| Fuel Selector Valve | LEFT or RIGHT |

Aircraft Settings Panel

| Aircraft Information | | | |
|--|-------------------|-----------------|-----------|
| NEW ACFT MODULE | | | |
| Aircraft module | | | |
| C172HR.pho | | | |
| <p style="color: yellow;">AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER.</p> | | | |
| Various | | | |
| Aircraft | Cessna F172R (v8) | | |
| Engines | 1 | Rated power | 160 HP |
| Propeller | Fixed pitch | Service ceiling | 13500 ft |
| Gear | Fixed | | |
| Gross weight | 2452 lbs | Empty weight | 1667 lbs |
| Usable fuel | 56.0 US gal = | | 335.8 lbs |
| Speed | | | |
| Never exceed speed | 163 kts | | |
| Best single engine rate of climb | --- kts | | |
| Minimum single engine control speed | --- kts | | |
| Maximum structural cruising speed | 129 kts | | |
| Zero flaps stalling speed | 44 kts | | |
| Flaps extended stalling speed | 33 kts | | |
| Maximum speed for flaps extended | 85 kts | | |
| Maximum speed for gear extended | --- kts | | |
| Maximum speed for gear operation | --- kts | | |

Configuration Page

Climb

| PRESS ALT FT | CLIMB SPEED KIAS | RATE OF CLIMB - FPM | | | |
|--------------------|------------------------|---------------------|-----|------|------|
| | | -20°C | 0°C | 20°C | 40°C |
| S.L. | 79 | 830 | 770 | 705 | 640 |
| 2000 | 77 | 720 | 655 | 595 | 535 |
| 4000 | 76 | 645 | 585 | 525 | 465 |
| 6000 | 74 | 530 | 475 | 415 | 360 |
| 8000 | 72 | 420 | 365 | 310 | 250 |
| 10,000 | 71 | 310 | 255 | 200 | 145 |
| 12,000 | 69 | 200 | 145 | --- | --- |

| PRESS ALT FT | TEMP °C | CLIMB SPEED KIAS | RATE OF CLIMB FPM | FROM SEA LEVEL | | |
|--------------------|------------|------------------------|----------------------------|-------------------|---------------------|------------|
| | | | | TIME IN MIN | FUEL USED GAL | DIST NM |
| S.L. | 15 | 79 | 720 | 0 | 0.0 | 0 |
| 1000 | 13 | 78 | 670 | 1 | 0.4 | 2 |
| 2000 | 11 | 77 | 625 | 3 | 0.7 | 4 |
| 3000 | 9 | 76 | 575 | 5 | 1.2 | 6 |
| 4000 | 7 | 76 | 560 | 6 | 1.5 | 8 |
| 5000 | 5 | 75 | 515 | 8 | 1.8 | 11 |
| 6000 | 3 | 74 | 465 | 10 | 2.1 | 14 |
| 7000 | 1 | 73 | 415 | 13 | 2.5 | 17 |
| 8000 | -1 | 72 | 365 | 15 | 3.0 | 21 |
| 9000 | -3 | 72 | 315 | 18 | 3.4 | 25 |
| 10,000 | -5 | 71 | 270 | 22 | 4.0 | 29 |
| 11,000 | -7 | 70 | 220 | 26 | 4.6 | 35 |
| 12,000 | -9 | 69 | 170 | 31 | 5.4 | 43 |

Cruise

CESSNA
MODEL 172RSECTION 5
PERFORMANCE

CRUISE PERFORMANCE

CONDITIONS:

2450 Pounds

Recommended Lean Mixture At All Altitudes (Refer to Section 4,
Cruise)

| PRESS ALT FT | RPM | 20°C BELOW STANDARD TEMP | | | STANDARD TEMPERATURE | | | 20°C ABOVE STANDARD TEMP | | |
|--------------------|------|-----------------------------|------|-----|-------------------------|------|-----|-----------------------------|------|-----|
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2000 | 2250 | --- | --- | --- | 79 | 115 | 9.0 | 74 | 114 | 8.5 |
| | 2200 | 79 | 112 | 9.1 | 74 | 112 | 8.5 | 70 | 111 | 8.0 |
| | 2100 | 69 | 107 | 7.9 | 65 | 106 | 7.5 | 62 | 105 | 7.1 |
| | 2000 | 61 | 101 | 7.0 | 58 | 99 | 6.6 | 55 | 97 | 6.4 |
| | 1900 | 54 | 94 | 6.2 | 51 | 91 | 5.9 | 50 | 89 | 5.8 |
| 4000 | 2300 | -- | --- | --- | 79 | 117 | 9.1 | 75 | 117 | 8.6 |
| | 2250 | 80 | 115 | 9.2 | 75 | 114 | 8.6 | 70 | 114 | 8.1 |
| | 2200 | 75 | 112 | 8.6 | 70 | 111 | 8.1 | 66 | 110 | 7.6 |
| | 2100 | 66 | 106 | 7.6 | 62 | 105 | 7.1 | 59 | 103 | 6.8 |
| | 2000 | 58 | 100 | 6.7 | 55 | 98 | 6.4 | 53 | 95 | 6.2 |
| | 1900 | 52 | 92 | 6.0 | 50 | 90 | 5.8 | 49 | 87 | 5.6 |
| 6000 | 2350 | -- | --- | --- | 80 | 120 | 9.2 | 75 | 119 | 8.6 |
| | 2300 | 80 | 117 | 9.2 | 75 | 117 | 8.6 | 71 | 116 | 8.1 |
| | 2250 | 76 | 115 | 8.7 | 71 | 114 | 8.1 | 67 | 113 | 7.7 |
| | 2200 | 71 | 112 | 8.1 | 67 | 111 | 7.7 | 64 | 109 | 7.3 |
| | 2100 | 63 | 105 | 7.2 | 60 | 104 | 6.9 | 57 | 101 | 6.6 |
| | 2000 | 56 | 98 | 6.4 | 53 | 96 | 6.2 | 52 | 93 | 6.0 |

NOTE:

1. Cruise speeds are shown for an airplane equipped with speed fairings. Without speed fairings, decrease speeds shown by 2 knots.

Figure 5-8. Cruise Performance (Sheet 1 of 2)

CESSNA 182S



Aircraft Checklist**Before Starting Engine:**

| | |
|-----------------------|--------------|
| Brakes | TEST and SET |
| Electrical Equipment | OFF |
| Avionics Power Switch | OFF |
| Cowl Flaps | OPEN |
| Fuel Selector Valve | BOTH |

Starting Engine (With Battery):

| | |
|----------------------------|---|
| Throttle | 1/4 in. open |
| Propeller | HIGH RPM |
| Mixture | IDLE CUT OFF |
| Propeller Area | CLEAR |
| Master Switch | ON |
| Auxiliary Fuel Pump Switch | ON |
| Mixture | ADVANCE to full rich for 3-4 seconds, then return to IDLE CUT OFF position. |
| Ignition Switch | START |
| Mixture | Advance smoothly to RICH hen engine fires. |

NOTE: If engine floods, turn off auxiliary fuel pump, place mixture in idle cut off, open throttle 1/2 to full, and crank engine. When engine fires, advance to full rich and retard throttle promptly.

| | |
|----------------------------|----------------|
| Oil Pressure | CHECK |
| Auxiliary Fuel Pump | OFF |
| Flashing Beacon Nav Lights | ON as required |
| Avionics Power Switch | ON |
| Radios | ON |

Before Takeoff:

| | |
|--------------------------|--|
| Parking Brake | SET |
| Flight Instruments | CHECK and SET |
| Fuel Quantity | CHECK |
| Mixture | RICH |
| Fuel Selector Valve | RECHECK BOTH |
| Elevator and Rudder Trim | SET for takeoff |
| Throttle | 1800 RPM |
| Magnetos | CHECK (RPM drop should not exceed 150 RPM on either magneto or 50 RPM differential between magnetos). |
| Propeller | CYCLE from high to low RPM, return to high RPM. |
| Suction Gauge | CHECK |
| Engine Instruments | CHECK |
| Ammeter | CHECK |
| Throttle | 800 - 1000 RPM |
| Throttle Friction Lock | ADJUST |
| Strobe Lights | AS DESIRED |
| Radios and Avionics | SET |
| Wing Flaps | SET for takeoff; 0° - 20° |
| Cowl Flaps | OPEN |
| Brakes | RELEASE |

Takeoff (Normal Takeoff):

| | |
|------------|-------------------------------|
| Wing Flaps | 0° - 20° |
| Power | FULL THROTTLE and 2400 RPM |
| Mixture | LEAN to obtain Max Power |

Brakes
Elevator Control

Fuel Flow placard
value.
RELEASE
MAINTAIN SLIGHTLY
TAIL

Climb Speed

LOW ATTITUDE
58 KIAS until all
obstacles are cleared
RETRACT slowly after
reaching 70 KIAS

Wing Flaps

Normal Climb:

Airspeed
Power

85-95 KIAS
23 in. Hg or FULL
THROTTLE (which
ever is less) and
2400 RPM

Mixture

15 FULL RICH
(which ever is less)

Fuel Selector Valve
Cowl Flaps

BOTH
OPEN as required

Cruise:

Power

15-23" Hg
2000-2400 RPM

Elevator & Rudder Trim

ADJUST

Mixture

LEAN

Cowl Flaps

CLOSED

Descent:

Power

AS DESIRED

Mixture

ENRICHEN

Cowl Flaps

CLOSED

Fuel Selector Valve

BOTH

Wing Flaps

AS DESIRED

Before Landing:

| | |
|--------------------------|----------|
| Fuel Selector Valve | BOTH |
| Mixture | RICH |
| Propeller | HIGH RPM |
| Landing/Taxi Lights | ON |
| Autopilot (if installed) | OFF |

Normal Landing:

| | |
|--------------|---------------------------------------|
| Airspeed | 70-80 KIAS flaps UP |
| Wing Flaps | AS DESIRED |
| Airspeed | 60-70 KIAS FULL flaps |
| Power | REDUCE to idle when obstacles cleared |
| Trim | ADJUST |
| Touchdown | MAIN WHEELS FIRST |
| Landing Roll | LOWER NOSE WHEEL GENTLY |
| Braking | MINIMUM REQUIRED |

Balked Landing:

| | |
|-------------|-------------------------------|
| Power | FULL THROTTLE and 2400 RPM |
| Wing Flaps | RETRACT to 20° |
| Climb Speed | 55 KIAS |
| Wing Flaps | RETRACT |
| Cowl Flaps | OPEN |

After Landing:

| | |
|------------|------|
| Wing Flaps | UP |
| Cowl Flaps | OPEN |

Securing the Airplane:

| | |
|----------------------|------|
| Parking Brake | SET |
| Throttle | IDLE |
| Electrical Equipment | OFF |

Mixture
Ignition Switch
Master Switch
Fuel Selector Valve

IDLE CUT-OFF
OFF
OFF
LEFT

Aircraft Settings Panel

| Aircraft Information | |
|--|---|
| NEW ACFT MODULE | |
| Aircraft module | |
| C182.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | Cessna F182S (v5) |
| Engines | 1 Rated power: 230 HP |
| Propeller | Constant speed Service ceiling: 14000 ft |
| Gear | Fixed |
| Gross weight | 3113 lbs Empty weight: 1906 lbs |
| Usable fuel | 88.1 US gal = 528.2 lbs |
| Speed | |
| Never exceed speed | 175 kts |
| Best single engine rate of climb | --- kts |
| Minimum single engine control speed | --- kts |
| Maximum structural cruising speed | 140 kts |
| Zero flaps stalling speed | 43 kts |
| Flaps extended stalling speed | 36 kts |
| Maximum speed for flaps extended | 140 kts |
| Maximum speed for gear extended | --- kts |
| Maximum speed for gear operation | --- kts |

Configuration Page

MAXIMUM RATE-OF-CLIMB AT 3100 POUNDS

CONDITIONS:

Flaps Up
 2400 RPM, Full Throttle, Mixture Set to Climb Schedule
 Cowl Flaps Open

| PRESS ALT FT | CLIMB SPEED KIAS | RATE OF CLIMB - FPM | | | |
|-----------------|---------------------|---------------------|-----|------|------|
| | | -20°C | 0°C | 20°C | 40°C |
| S.L. | 80 | 1055 | 980 | 905 | 835 |
| 2000 | 79 | 945 | 875 | 805 | 735 |
| 4000 | 78 | 840 | 770 | 705 | 635 |
| 6000 | 77 | 735 | 670 | 605 | 535 |
| 8000 | 75 | 625 | 560 | 495 | 430 |
| 10,000 | 74 | 520 | 455 | 390 | 330 |
| 12,000 | 73 | 410 | 350 | 285 | 225 |
| 14,000 | 72 | 310 | 250 | 190 | 130 |

CRUISE PERFORMANCE PRESSURE ALTITUDE SEA LEVEL

CONDITIONS:

3100 Pounds
 Recommended Lean Mixture
 Cowl Flaps Closed

NOTE: Maximum cruise power is 80% MCP. Those powers above that value in the table are for interpolation purposes only.

| RPM | MP | 20°C BELOW STANDARD TEMP -5°C | | | STANDARD TEMPERATURE 15°C | | | 20°C ABOVE STANDARD TEMP 35°C | | |
|------|----|-------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| | | 2400 | 27 | --- | --- | --- | 82 | 133 | 13.7 | 76 |
| | 26 | --- | --- | --- | 78 | 131 | 13.0 | 72 | 129 | 12.1 |
| | 25 | 80 | 129 | 13.3 | 73 | 128 | 12.3 | 68 | 126 | 11.5 |
| | 24 | 75 | 126 | 12.6 | 69 | 125 | 11.7 | 64 | 123 | 10.9 |
| | 23 | 70 | 123 | 11.9 | 65 | 122 | 11.0 | 60 | 119 | 10.3 |
| | 22 | 66 | 120 | 11.2 | 61 | 117 | 10.4 | 56 | 116 | 9.8 |
| | 21 | 61 | 116 | 10.5 | 57 | 114 | 9.9 | 52 | 112 | 9.3 |
| | 20 | 57 | 112 | 9.9 | 53 | 110 | 9.3 | 49 | 107 | 8.7 |
| 2300 | 27 | --- | --- | --- | 79 | 132 | 13.2 | 73 | 130 | 12.2 |
| | 26 | 81 | 130 | 13.6 | 75 | 129 | 12.5 | 69 | 127 | 11.6 |
| | 25 | 77 | 127 | 12.8 | 71 | 126 | 11.9 | 65 | 124 | 11.1 |
| | 24 | 72 | 124 | 12.2 | 67 | 123 | 11.3 | 62 | 120 | 10.6 |
| | 23 | 68 | 121 | 11.5 | 63 | 119 | 10.7 | 58 | 117 | 10.0 |
| | 22 | 64 | 118 | 10.9 | 59 | 116 | 10.2 | 54 | 114 | 9.5 |
| | 21 | 59 | 114 | 10.2 | 55 | 112 | 9.6 | 51 | 110 | 9.0 |
| | 20 | 55 | 110 | 9.6 | 51 | 108 | 9.0 | 47 | 105 | 8.5 |
| 2200 | 27 | 82 | 131 | 13.7 | 76 | 129 | 12.7 | 70 | 128 | 11.8 |
| | 26 | 78 | 128 | 13.0 | 72 | 127 | 12.1 | 66 | 125 | 11.2 |
| | 25 | 74 | 125 | 12.4 | 68 | 124 | 11.5 | 63 | 121 | 10.7 |
| | 24 | 70 | 122 | 11.7 | 64 | 121 | 10.9 | 59 | 119 | 10.2 |
| | 23 | 66 | 119 | 11.1 | 60 | 117 | 10.4 | 56 | 115 | 9.7 |
| | 22 | 61 | 116 | 10.5 | 57 | 114 | 9.9 | 52 | 112 | 9.3 |
| | 21 | 57 | 112 | 10.0 | 53 | 110 | 9.3 | 49 | 108 | 8.8 |
| | 20 | 53 | 109 | 9.4 | 49 | 106 | 8.8 | 45 | 103 | 8.3 |

**CRUISE PERFORMANCE
PRESSURE ALTITUDE 4000 FEET**

CONDITIONS:
 •3100 Pounds •Recommended Lean Mixture •Cowl Flaps Closed
 NOTE: Maximum cruise power is 80% MCP. Those powers above that value in the table are for interpolation purposes only.

| RPM | MP | 20°C BELOW STANDARD TEMP -13°C | | | STANDARD TEMPERATURE 7°C | | | 20°C ABOVE STANDARD TEMP 27°C | | |
|------|----|--------------------------------------|------|------|--------------------------------|------|------|-------------------------------------|------|------|
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 78 | 136 | 131 | 72 | 134 | 121 |
| | 24 | 80 | 134 | 13.4 | 74 | 133 | 124 | 68 | 130 | 115 |
| | 23 | 75 | 131 | 12.7 | 69 | 130 | 117 | 64 | 127 | 10.9 |
| | 22 | 71 | 128 | 11.9 | 65 | 125 | 111 | 60 | 123 | 10.4 |
| | 21 | 66 | 124 | 11.2 | 61 | 122 | 10.5 | 56 | 119 | 9.8 |
| 20 | 61 | 120 | 10.5 | 57 | 118 | 9.9 | 52 | 115 | 9.2 | |
| 2300 | 25 | 81 | 135 | 13.6 | 75 | 133 | 12.6 | 69 | 132 | 11.7 |
| | 24 | 77 | 132 | 12.9 | 71 | 131 | 12.0 | 66 | 128 | 11.1 |
| | 23 | 73 | 129 | 12.2 | 67 | 127 | 11.3 | 62 | 125 | 10.6 |
| | 22 | 68 | 126 | 11.5 | 63 | 123 | 10.7 | 58 | 121 | 10.1 |
| | 21 | 64 | 122 | 10.9 | 59 | 120 | 10.2 | 54 | 117 | 9.5 |
| 20 | 59 | 118 | 10.2 | 55 | 115 | 9.6 | 50 | 113 | 9.0 | |
| 2200 | 25 | 78 | 133 | 13.1 | 72 | 131 | 12.1 | 67 | 129 | 11.3 |
| | 24 | 74 | 130 | 12.4 | 68 | 128 | 11.5 | 63 | 126 | 10.8 |
| | 23 | 70 | 127 | 11.8 | 64 | 124 | 10.9 | 59 | 122 | 10.2 |
| | 22 | 66 | 124 | 11.1 | 60 | 121 | 10.4 | 56 | 119 | 9.7 |
| | 21 | 61 | 119 | 10.5 | 57 | 117 | 9.8 | 52 | 115 | 9.2 |
| 20 | 57 | 116 | 9.9 | 53 | 113 | 9.3 | 49 | 110 | 8.7 | |
| 2100 | 25 | 74 | 130 | 13.5 | 68 | 129 | 11.6 | 63 | 126 | 10.8 |
| | 24 | 70 | 127 | 11.9 | 65 | 125 | 11.0 | 60 | 123 | 10.3 |
| | 23 | 66 | 124 | 11.2 | 61 | 122 | 10.5 | 56 | 119 | 9.8 |
| | 22 | 62 | 120 | 10.7 | 57 | 118 | 10.0 | 53 | 116 | 9.4 |
| | 21 | 58 | 117 | 10.1 | 54 | 115 | 9.5 | 50 | 111 | 8.9 |
| 20 | 54 | 113 | 9.5 | 50 | 111 | 8.9 | 46 | 106 | 8.4 | |
| 2000 | 25 | 71 | 127 | 11.9 | 65 | 125 | 11.0 | 60 | 123 | 10.3 |
| | 24 | 67 | 125 | 11.3 | 61 | 122 | 10.5 | 57 | 120 | 9.9 |
| | 23 | 63 | 121 | 10.8 | 58 | 119 | 10.1 | 54 | 116 | 9.4 |
| | 22 | 59 | 118 | 10.2 | 55 | 115 | 9.6 | 50 | 112 | 9.0 |
| | 21 | 55 | 114 | 9.7 | 51 | 112 | 9.1 | 47 | 108 | 8.5 |

**CRUISE PERFORMANCE
PRESSURE ALTITUDE 2000 FEET**

CONDITIONS:
 3100 Pounds
 Recommended Lean Mixture
 Cowl Flaps Closed
 NOTE: Maximum cruise power is 80% MCP. Those powers above that value in the table are for interpolation purposes only.

| RPM | MP | 20°C BELOW STANDARD TEMP -9°C | | | STANDARD TEMPERATURE 11°C | | | 20°C ABOVE STANDARD TEMP 31°C | | |
|------|----|-------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 26 | --- | --- | --- | 80 | 135 | 13.4 | 74 | 133 | 12.4 |
| | 25 | 82 | 133 | 13.8 | 76 | 132 | 12.7 | 70 | 130 | 11.8 |
| | 24 | 78 | 130 | 13.0 | 71 | 129 | 12.0 | 66 | 126 | 11.2 |
| | 23 | 73 | 127 | 12.3 | 67 | 126 | 11.4 | 62 | 123 | 10.6 |
| | 22 | 68 | 124 | 11.6 | 63 | 121 | 10.8 | 58 | 119 | 10.1 |
| 21 | 64 | 120 | 10.9 | 59 | 118 | 10.2 | 54 | 115 | 9.5 | |
| 20 | 59 | 116 | 10.2 | 55 | 114 | 9.6 | 50 | 111 | 9.0 | |
| 2300 | 26 | --- | --- | --- | 77 | 132 | 12.9 | 71 | 131 | 12.0 |
| | 25 | 79 | 131 | 13.2 | 73 | 130 | 12.2 | 67 | 128 | 11.4 |
| | 24 | 75 | 128 | 12.5 | 69 | 127 | 11.6 | 64 | 124 | 10.8 |
| | 23 | 70 | 125 | 11.8 | 65 | 123 | 11.0 | 60 | 121 | 10.3 |
| | 22 | 66 | 122 | 11.2 | 61 | 119 | 10.4 | 56 | 117 | 9.8 |
| 21 | 62 | 118 | 10.6 | 57 | 116 | 9.9 | 52 | 113 | 9.3 | |
| 20 | 57 | 114 | 9.9 | 53 | 112 | 9.3 | 49 | 109 | 8.7 | |
| 2200 | 26 | 80 | 132 | 13.4 | 74 | 130 | 12.4 | 68 | 129 | 11.5 |
| | 25 | 76 | 129 | 12.7 | 70 | 128 | 11.8 | 65 | 125 | 11.0 |
| | 24 | 72 | 126 | 12.1 | 66 | 125 | 11.2 | 61 | 122 | 10.5 |
| | 23 | 68 | 123 | 11.4 | 62 | 121 | 10.7 | 58 | 119 | 10.0 |
| | 22 | 64 | 120 | 10.8 | 59 | 118 | 10.1 | 54 | 115 | 9.5 |
| 21 | 59 | 116 | 10.2 | 55 | 114 | 9.6 | 51 | 111 | 9.0 | |
| 20 | 55 | 112 | 9.7 | 51 | 110 | 9.0 | 47 | 106 | 8.5 | |

**CRUISE PERFORMANCE
PRESSURE ALTITUDE 6000 FEET**

CONDITIONS:

3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

| RPM | MP | 20°C BELOW STANDARD TEMP -17°C | | | STANDARD TEMPERATURE 3°C | | | 20°C ABOVE STANDARD TEMP 23°C | | |
|------|----|--------------------------------------|------|------|--------------------------------|------|------|-------------------------------------|------|------|
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 23 | 78 | 135 | 13.0 | 72 | 134 | 12.1 | 66 | 131 | 11.2 |
| | 22 | 73 | 132 | 12.3 | 67 | 129 | 11.4 | 62 | 127 | 10.6 |
| | 21 | 68 | 128 | 11.6 | 63 | 126 | 10.8 | 58 | 123 | 10.1 |
| 2300 | 20 | 64 | 123 | 10.9 | 59 | 121 | 10.1 | 54 | 119 | 9.5 |
| | 19 | 59 | 120 | 10.2 | 54 | 117 | 9.5 | 50 | 113 | 8.9 |
| | 23 | 75 | 133 | 12.6 | 69 | 131 | 11.6 | 64 | 129 | 10.9 |
| 2200 | 22 | 70 | 130 | 11.9 | 65 | 127 | 11.0 | 60 | 125 | 10.3 |
| | 21 | 66 | 126 | 11.2 | 61 | 124 | 10.4 | 56 | 121 | 9.8 |
| | 20 | 61 | 122 | 10.5 | 57 | 119 | 9.8 | 52 | 116 | 9.2 |
| 2100 | 19 | 57 | 117 | 9.9 | 52 | 115 | 9.3 | 48 | 111 | 8.7 |
| | 23 | 72 | 131 | 12.1 | 66 | 128 | 11.2 | 61 | 126 | 10.5 |
| | 22 | 68 | 127 | 11.4 | 62 | 125 | 10.7 | 58 | 122 | 10.0 |
| 2000 | 21 | 63 | 123 | 10.8 | 58 | 121 | 10.1 | 54 | 119 | 9.5 |
| | 20 | 59 | 120 | 10.2 | 54 | 117 | 9.5 | 50 | 114 | 9.0 |
| | 19 | 55 | 115 | 9.6 | 51 | 112 | 9.0 | 47 | 108 | 8.4 |
| 2100 | 23 | 68 | 128 | 11.6 | 63 | 126 | 10.8 | 58 | 123 | 10.1 |
| | 22 | 64 | 124 | 10.9 | 59 | 122 | 10.2 | 55 | 119 | 9.6 |
| | 21 | 60 | 121 | 10.4 | 56 | 118 | 9.7 | 51 | 115 | 9.1 |
| 2000 | 20 | 56 | 117 | 9.8 | 52 | 114 | 9.2 | 48 | 110 | 8.6 |
| | 19 | 52 | 112 | 9.2 | 48 | 109 | 8.6 | 44 | 104 | 8.1 |
| | 23 | 65 | 125 | 11.0 | 60 | 123 | 10.3 | 55 | 120 | 9.6 |
| 2000 | 22 | 61 | 121 | 10.5 | 56 | 119 | 9.8 | 52 | 116 | 9.2 |
| | 21 | 57 | 118 | 9.9 | 53 | 115 | 9.3 | 49 | 111 | 8.7 |
| | 20 | 53 | 114 | 9.4 | 49 | 110 | 8.8 | 45 | 106 | 8.3 |
| 1900 | 19 | 50 | 109 | 8.9 | 46 | 105 | 8.3 | 42 | 99 | 7.8 |

MAXIMUM RATE OF CLIMB

CONDITIONS:

Flaps Up
2400 RPM, Full Throttle, Mixture Set to Climb Schedule
Cowl Flaps Open
Standard Temperature

| PRESS ALT FT | CLIMB SPEED KTAS | RATE OF CLIMB FPM | FROM SEA LEVEL | | |
|--------------------|------------------------|----------------------------|-------------------|---------------------|------------|
| | | | TIME IN MIN | FUEL USED GAL | DIST NM |
| S.L. | 80 | 925 | 0 | 0.0 | 0 |
| 2000 | 79 | 835 | 2 | 0.8 | 3 |
| 4000 | 78 | 750 | 5 | 1.5 | 7 |
| 6000 | 77 | 660 | 8 | 2.3 | 11 |
| 8000 | 75 | 565 | 11 | 3.2 | 16 |
| 10,000 | 74 | 470 | 15 | 4.2 | 21 |
| 12,000 | 73 | 375 | 20 | 5.2 | 29 |
| 14,000 | 72 | 285 | 26 | 6.5 | 38 |

CESSNA 182RG



Aircraft Checklist**Before Starting Engine:**

| | |
|-----------------------|--------------|
| Brakes | TEST and Set |
| Avionics Power Switch | OFF |
| Electrical Equipment | OFF |
| Landing Gear Lever | DOWN |
| Cowl Flaps | OPEN |
| Fuel Selector Valve | BOTH |

Starting Engine:

| | |
|-----------------------|---|
| Carburetor Heat | COLD |
| Throttle | OPEN ¼ inch |
| Propeller | HIGH RPM |
| Mixture | RICH |
| Master Switch | ON |
| Auxiliary Fuel Pump | ON, check for rise in fuel pressure, then OFF |
| Ignition Switch | START |
| Oil Pressure | CHECK |
| Avionics Power Switch | ON |
| Radios | ON |

Before Takeoff:

| | |
|-----------------------|-----------------|
| Parking Brake | SET |
| Flight Instruments | CHECK and SET |
| Fuel Quantity | CHECK |
| Mixture | RICH |
| Fuel Selector Valve | RECHECK BOTH |
| Elevator Trim | SET for Takeoff |
| Throttle | 1800 RPM |
| a. Magnetos | CHECK |
| b. Suction Gauge | CHECK |
| c. Engine Instruments | CHECK |
| Annunciator Panel | No items lit |

| | |
|---------------------|------------------------|
| Throttle | 1000 RPM or less |
| Radios and Avionics | SET |
| Wing Flaps | SET for Takeoff; 0-10° |
| Brakes | RELEASE |

Takeoff (Normal):

| | |
|------------------|--|
| Wing Flaps | 0-10° |
| Throttle | FULL OPEN |
| Mixture | RICH |
| Elevator Control | LIFT NOSE WHEEL at 55 KIAS |
| Climb Speed | 70-80 KIAS |
| Wing Flaps | RETRACT after reaching safe altitude and 60 KIAS |

En Route Climb:

| | |
|----------|------------|
| Airspeed | 70-85 KIAS |
| Throttle | FULL OPEN |
| Mixture | RICH |

Cruise:

| | |
|----------|---------------|
| Power | 2000-2400 RPM |
| Elevator | Adjust |
| Mixture | LEAN |

Descent:

| | |
|---------------------|------------|
| Power | AS DESIRED |
| Mixture | ADJUST |
| Fuel Selector Valve | BOTH |

Before Landing:

| | |
|---------------------|------|
| Fuel Selector Valve | BOTH |
| Mixture | RICH |

Landing (Normal):

| | |
|--------------|----------------------------|
| Airspeed | 65-75 KIAS; flaps up |
| Wing Flaps | AS DESIRED |
| Airspeed | 60-70 KIAS; flaps down |
| Touchdown | MAIN WHEELS FIRST |
| Landing Roll | LOWER NOSE WHEEL GENTLY |

Balked Landing:

| | |
|-------------|---|
| Throttle | FULL OPEN |
| Wing Flaps | RETRACT to 20° |
| Climb Speed | 55 KIAS |
| Wing Flaps | 10°; RETRACT after reaching safe altitude and 60 KIAS |

After Landing:

| | |
|---------------------------|---------------|
| Wing Flaps | UP |
| Securing Airplane: | |
| Parking Brake | SET |
| Avionics Power | OFF |
| Electrical Equipment | OFF |
| Mixture | IDLE CUT OFF |
| Ignition Switch | OFF |
| Master Switch | OFF |
| Fuel Selector Valve | LEFT or RIGHT |

MAXIMUM RATE OF CLIMB

CONDITIONS:
 Flaps Up
 Gear Up
 2400 RPM
 Full Throttle
 Mixture Full Rich
 Cowl Flaps Open

NOTE:
 Mixture may be leaned above 3000 feet.

| WEIGHT LBS | PRESS ALT FT | CLIMB SPEED KIAS | RATE OF CLIMB - FPM | | | |
|---------------|--------------------|------------------------|---------------------|------|------|------|
| | | | -20°C | 0°C | 20°C | 40°C |
| 3100 | S.L. | 88 | 1270 | 1195 | 1120 | 1045 |
| | 2000 | 85 | 1110 | 1035 | 960 | 890 |
| | 4000 | 82 | 945 | 875 | 805 | 730 |
| | 6000 | 80 | 785 | 715 | 645 | 570 |
| | 8000 | 77 | 625 | 555 | 485 | 415 |
| | 10,000 | 75 | 465 | 395 | 325 | --- |
| 12,000 | 72 | 305 | 235 | 165 | --- | |
| 14,000 | 69 | 145 | 75 | --- | --- | |

TIME, FUEL, AND DISTANCE TO CLIMB

MAXIMUM RATE OF CLIMB

CONDITIONS:
 Flaps Up
 Gear Up
 2400 RPM
 Full Throttle
 Mixture Full Rich
 Cowl Flaps Open
 Standard Temperature

NOTES:
 1. Add 2.0 gallons of fuel for engine start, taxi and takeoff allowance.
 2. Mixture may be leaned above 3000 feet.
 3. Increase time, fuel and distance by 10% for each 10°C above standard temperature.
 4. Distances shown are based on zero wind.

| WEIGHT LBS | PRESSURE ALTITUDE FT | TEMP °C | CLIMB SPEED KIAS | RATE OF CLIMB FPM | FROM SEA LEVEL | | |
|---------------|----------------------------|------------|------------------------|-------------------------|----------------|----------------------|----------------|
| | | | | | TIME MIN | FUEL USED GALLONS | DISTANCE NM |
| 3100 | S.L. | 15 | 88 | 1140 | 0 | 0 | 0 |
| | 2000 | 11 | 85 | 995 | 2 | 0.8 | 3 |
| | 4000 | 7 | 82 | 850 | 4 | 1.6 | 6 |
| | 6000 | 3 | 80 | 700 | 7 | 2.4 | 10 |
| | 8000 | -1 | 77 | 560 | 10 | 3.7 | 15 |
| | 10,000 | -5 | 75 | 415 | 14 | 5.1 | 21 |
| 12,000 | -9 | 72 | 265 | 20 | 7.1 | 30 | |
| 14,000 | -13 | 69 | 120 | 32 | 10.6 | 47 | |



CRUISE PERFORMANCE
PRESSURE ALTITUDE 2000 FEET

CONDITIONS:
 3100 Pounds
 Recommended Lean Mixture
 Cowl Flaps Closed

NOTE
 For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT if an EGT indicator is installed.

| RPM | 20°C BELOW STANDARD TEMP -9°C | | | STANDARD TEMPERATURE 11°C | | | 20°C ABOVE STANDARD TEMP 31°C | | |
|------|-------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | --- | --- | --- | 76 | 148 | 13.6 | 73 | 149 | 13.2 |
| 22 | 74 | 143 | 13.3 | 71 | 145 | 12.8 | 69 | 146 | 12.4 |
| 21 | 69 | 140 | 12.4 | 67 | 141 | 12.0 | 64 | 142 | 11.6 |
| 20 | 64 | 136 | 11.6 | 62 | 137 | 11.3 | 60 | 138 | 10.9 |
| 2300 | 75 | 145 | 13.5 | 72 | 146 | 13.1 | 70 | 147 | 12.6 |
| 22 | 71 | 141 | 12.7 | 68 | 142 | 12.3 | 66 | 143 | 11.9 |
| 21 | 66 | 138 | 11.9 | 64 | 139 | 11.2 | 62 | 140 | 11.2 |
| 20 | 61 | 134 | 11.2 | 59 | 135 | 10.8 | 57 | 135 | 10.5 |
| 2200 | 72 | 142 | 12.9 | 69 | 143 | 12.5 | 67 | 144 | 12.1 |
| 22 | 67 | 139 | 12.1 | 65 | 140 | 11.7 | 63 | 141 | 11.4 |
| 21 | 63 | 135 | 11.4 | 61 | 136 | 11.0 | 59 | 137 | 10.7 |
| 20 | 59 | 131 | 10.7 | 57 | 132 | 10.3 | 55 | 133 | 10.0 |
| 2100 | 68 | 139 | 12.2 | 66 | 140 | 11.8 | 63 | 141 | 11.5 |
| 22 | 64 | 136 | 11.5 | 62 | 137 | 11.2 | 60 | 137 | 10.8 |
| 21 | 60 | 132 | 10.9 | 58 | 133 | 10.5 | 56 | 134 | 10.2 |
| 20 | 55 | 128 | 10.1 | 54 | 129 | 9.8 | 52 | 129 | 9.5 |
| 19 | 51 | 124 | 9.4 | 50 | 125 | 9.1 | 48 | 125 | 8.8 |
| 18 | 47 | 119 | 8.7 | 45 | 119 | 8.5 | 44 | 120 | 8.2 |

CRUISE PERFORMANCE
PRESSURE ALTITUDE 4000 FEET

CONDITIONS:
 3100 Pounds
 Recommended Lean Mixture
 Cowl Flaps Closed

NOTE
 For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT if an EGT indicator is installed.

| RPM | 20°C BELOW STANDARD TEMP -13°C | | | STANDARD TEMPERATURE 7°C | | | 20°C ABOVE STANDARD TEMP 27°C | | |
|------|--------------------------------------|------|------|--------------------------------|------|------|-------------------------------------|------|------|
| | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | --- | --- | --- | 78 | 153 | 14.0 | 75 | 154 | 13.6 |
| 22 | 76 | 148 | 13.7 | 73 | 149 | 13.2 | 71 | 150 | 12.8 |
| 21 | 71 | 144 | 12.8 | 69 | 145 | 12.4 | 66 | 146 | 12.0 |
| 20 | 66 | 140 | 12.0 | 64 | 141 | 11.6 | 62 | 142 | 11.2 |
| 2300 | 77 | 149 | 14.0 | 75 | 150 | 13.5 | 72 | 151 | 13.0 |
| 22 | 73 | 145 | 13.1 | 70 | 147 | 12.7 | 68 | 148 | 12.2 |
| 21 | 68 | 142 | 12.3 | 66 | 143 | 11.9 | 64 | 144 | 11.5 |
| 20 | 64 | 138 | 11.5 | 61 | 139 | 11.1 | 59 | 140 | 10.8 |
| 2200 | 74 | 146 | 13.3 | 71 | 148 | 12.9 | 69 | 149 | 12.4 |
| 22 | 70 | 143 | 12.5 | 67 | 144 | 12.1 | 65 | 145 | 11.7 |
| 21 | 65 | 139 | 11.8 | 63 | 140 | 11.4 | 61 | 141 | 11.0 |
| 20 | 61 | 135 | 11.0 | 59 | 136 | 10.7 | 57 | 137 | 10.3 |
| 2100 | 70 | 143 | 12.7 | 68 | 145 | 12.2 | 65 | 146 | 11.8 |
| 22 | 66 | 140 | 11.9 | 64 | 141 | 11.5 | 62 | 142 | 11.2 |
| 21 | 62 | 136 | 11.2 | 60 | 137 | 10.9 | 58 | 138 | 10.5 |
| 20 | 58 | 132 | 10.5 | 55 | 133 | 10.1 | 54 | 134 | 9.8 |
| 19 | 53 | 128 | 9.8 | 51 | 129 | 9.5 | 50 | 129 | 9.2 |
| 18 | 49 | 123 | 9.1 | 47 | 124 | 8.8 | 46 | 124 | 8.5 |

| CRUISE PERFORMANCE PRESSURE ALTITUDE 8000 FEET | | | | | | | | | | | |
|--|----|--------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|--|
| NOTE For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT if an EGT indicator is installed. | | | | | | | | | | | |
| CONDITIONS: 3100 Pounds Recommended Lean Mixture Cowl Flaps Closed | | | | | | | | | | | |
| RPM | MP | 20°C BELOW STANDARD TEMP -21°C | | | STANDARD TEMPERATURE -1°C | | | 20°C ABOVE STANDARD TEMP 19°C | | | |
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH | |
| 2400 | 21 | 76 | 153 | 13.6 | 73 | 154 | 13.1 | 70 | 155 | 12.7 | |
| | 20 | 71 | 145 | 12.7 | 68 | 146 | 12.3 | 66 | 147 | 11.9 | |
| | 19 | 66 | 145 | 11.9 | 63 | 146 | 11.5 | 61 | 147 | 11.1 | |
| 2300 | 21 | 73 | 151 | 13.1 | 70 | 152 | 12.6 | 68 | 153 | 12.2 | |
| | 20 | 68 | 147 | 12.2 | 65 | 148 | 11.8 | 63 | 149 | 11.4 | |
| | 19 | 63 | 142 | 11.1 | 61 | 143 | 11.1 | 59 | 144 | 10.7 | |
| 2200 | 21 | 70 | 148 | 12.5 | 67 | 149 | 12.1 | 65 | 150 | 11.7 | |
| | 20 | 65 | 144 | 11.7 | 63 | 145 | 11.3 | 60 | 146 | 11.0 | |
| | 19 | 60 | 141 | 11.1 | 58 | 141 | 10.6 | 56 | 141 | 10.3 | |
| 2100 | 21 | 66 | 145 | 11.9 | 64 | 146 | 11.5 | 61 | 147 | 11.2 | |
| | 20 | 62 | 141 | 11.2 | 59 | 142 | 10.8 | 57 | 142 | 10.5 | |
| | 19 | 57 | 137 | 10.5 | 55 | 137 | 10.1 | 53 | 138 | 9.8 | |
| 18 | 18 | 53 | 132 | 9.7 | 51 | 132 | 9.4 | 49 | 133 | 9.1 | |
| | 17 | 49 | 127 | 9.0 | 47 | 127 | 8.7 | 45 | 127 | 8.4 | |

| CRUISE PERFORMANCE PRESSURE ALTITUDE 6000 FEET | | | | | | | | | | | |
|--|----|--------------------------------------|------|------|--------------------------------|------|------|-------------------------------------|------|------|--|
| NOTE For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT if an EGT indicator is installed. | | | | | | | | | | | |
| CONDITIONS: 3100 Pounds Recommended Lean Mixture Cowl Flaps Closed | | | | | | | | | | | |
| RPM | MP | 20°C BELOW STANDARD TEMP -17°C | | | STANDARD TEMPERATURE 3°C | | | 20°C ABOVE STANDARD TEMP 23°C | | | |
| | | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH | |
| 2400 | 22 | 75 | 154 | 13.6 | 73 | 155 | 13.1 | 70 | 156 | 12.6 | |
| | 21 | 73 | 148 | 13.2 | 71 | 150 | 12.7 | 68 | 151 | 12.3 | |
| | 20 | 69 | 145 | 12.3 | 66 | 146 | 11.9 | 64 | 147 | 11.5 | |
| 2300 | 23 | 77 | 155 | 13.9 | 74 | 156 | 13.4 | 71 | 157 | 12.8 | |
| | 22 | 75 | 150 | 13.5 | 72 | 151 | 13.0 | 70 | 152 | 12.6 | |
| | 21 | 70 | 146 | 12.7 | 68 | 147 | 12.2 | 66 | 148 | 11.8 | |
| 2200 | 23 | 76 | 151 | 13.7 | 74 | 152 | 13.3 | 71 | 153 | 12.8 | |
| | 22 | 72 | 147 | 12.9 | 69 | 148 | 12.5 | 67 | 150 | 12.1 | |
| | 21 | 67 | 144 | 12.1 | 65 | 145 | 11.7 | 63 | 146 | 11.4 | |
| 2100 | 23 | 72 | 148 | 13.1 | 70 | 149 | 12.6 | 68 | 150 | 12.2 | |
| | 22 | 68 | 144 | 12.3 | 66 | 145 | 11.9 | 64 | 146 | 11.5 | |
| | 21 | 64 | 141 | 11.6 | 62 | 142 | 11.2 | 60 | 142 | 10.8 | |
| 18 | 20 | 60 | 137 | 10.9 | 57 | 137 | 10.5 | 56 | 138 | 10.2 | |
| | 19 | 56 | 132 | 10.1 | 53 | 133 | 9.6 | 52 | 133 | 9.5 | |
| | 18 | 51 | 128 | 9.4 | 49 | 128 | 9.1 | 48 | 128 | 8.8 | |




PIPER ARCHER III



Cockpit Functions

ELITE makes use of “pop-ups” to compensate for limited screen space when the display of more instruments or features is required.

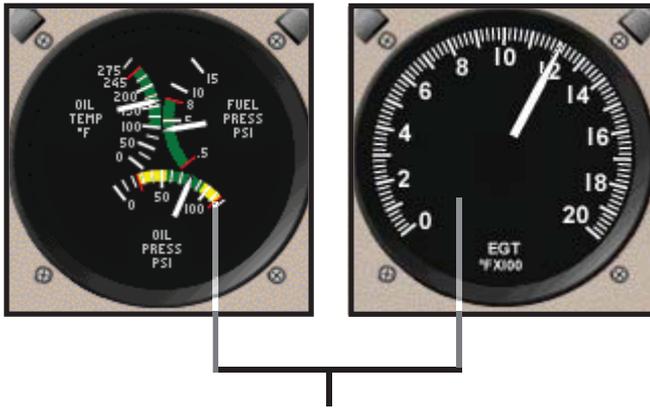

To change the engine oil temperature/oil pressure/fuel pressure tri-gauge to the EGT gauge simply click on the center of the instrument or press F2 on the keyboard. Toggle back in the same manner.



To display the ceiling mounted switch panel press F1 on the keyboard.



NOTE - Due to FAA regulation changes the amber light on the Annunciator Panel labeled PITOT HEAT OFF/INOP will remain illuminated. Selecting pitot heat ON will extinguish the light.


Archer Carb Heat Lever

The carburetor heat function may be operated by using the mouse or through use of several other mechanisms which may be assigned on the CONFIGURATION page.



Archer CH Choice

In the Instrument Configuration column go to the Carburetor Heat item and select the appropriate choice. Selecting Gear Handle will cause the landing gear control to operate the carburetor heat function. Moving the landing gear handle to the UP position will cause the carburetor heat to be OFF. The carburetor heat

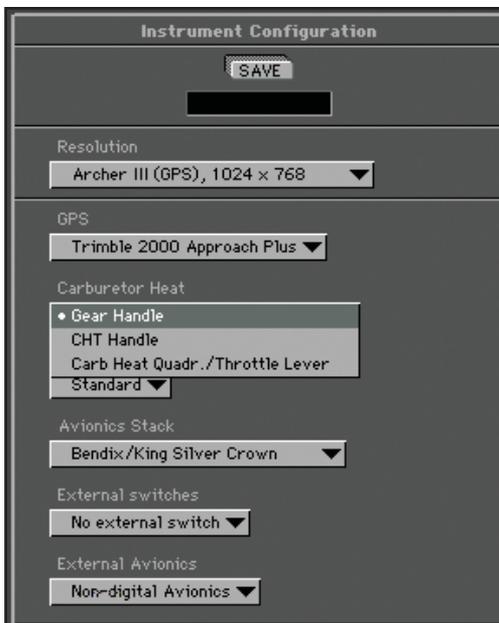

will be ON when the landing gear lever is in the DOWN position. Selecting CHT Handle will activate the carburetor heat control found on some consoles manufactured by Precision Flight Controls. Selecting the Carb Heat Quadr./Throttle Lever option will cause the throttle lever to control the carburetor heat function while the propeller and mixture levers will operate the throttle and mixture controls respectively.

Aircraft Checklist**Before Starting Engine:**

| | |
|-------------------------|--------------|
| Brakes | SET |
| Circuit Breakers | CHECK IN |
| Alternate Static Source | OFF |
| Carburetor Heat | FULL COLD |
| Avionics | OFF |
| Fuel Selector | DESIRED TANK |

Normal Start:

| | |
|-----------------------|--------------|
| Throttle | 1/4 in. OPEN |
| Battery master switch | ON |
| Alternator switch | ON |
| Magnetos | ON |
| Electric fuel pump | ON |
| Mixture | FULL RICH |
| Propeller | CLEAR |
| Starter | ENGAGE |
| Throttle | ADJUST |
| Oil Pressure | CHECK |

Warm-up:

| | |
|----------|--------------|
| Throttle | 800-1000 RPM |
|----------|--------------|

Taxiing:

| | |
|---------------|--------------|
| Taxi area | CLEAR |
| Parking brake | RELEASE |
| Throttle | APPLY SLOWLY |
| Brakes | CHECK |
| Steering | CHECK |

Ground Check:

| | |
|---------------|----------|
| Parking Brake | SET |
| Throttle | 2000 RPM |

| | |
|--------------------|---------------------|
| Magnetos | max. drop 175 RPM |
| | Max. diff. 50 RPM |
| Vacuum | 4.8 to 5.2 in. Hg. |
| Oil temperature | CHECK |
| Oil pressure | CHECK |
| Ammeter | CHECK |
| Annunciator panel | press-to-test |
| Carburetor heat | approx. 75 RPM drop |
| Electric fuel pump | OFF |
| Fuel pressure | CHECK |
| Throttle | RETARD |

Before Takeoff:

| | |
|-----------------------|-------------|
| Battery master switch | verify ON |
| Alternator switch | verify ON |
| Magnetos | verify ON |
| Flight instrument | CHECK |
| Fuel selector | PROPER TANK |
| Electric fuel pump | ON |
| Engine gauges | CHECK |
| Carburetor heat | OFF |
| Mixture | SET |
| Flaps | SET |
| Trim | SET |

Takeoff:*Normal Technique*

| | |
|-----------------------|--|
| Flaps | SET |
| Trim | SET |
| Accelerate to 57 KIAS | |
| Control wheel | BACK PRESSURE to smoothly rotate to climb attitude |

Climb:

| | |
|-----------------------|-------------------------|
| Best rate (flaps up) | 76 KIAS |
| Best angle (flaps up) | 64 KIAS |
| En route | 87 KIAS |
| Electric fuel pump | OFF at desired altitude |

Cruising:

| | |
|---------|---------------------|
| Power | SET per power table |
| Mixture | ADJUST |

Descent:*Normal*

| | |
|-----------------|----------------|
| Throttle | 2500 RPM |
| Airspeed | 122 KIAS |
| Mixture | RICH |
| Carburetor heat | ON if required |

Power Off

| | |
|-----------------|--|
| Carburetor heat | ON if required |
| Throttle | CLOSED |
| Airspeed | AS REQUIRED |
| Mixture | AS REQUIRED |
| Power | verify with throttle every 30 seconds |

Approach and Landing:

| | |
|-------------------------------------|--------------------|
| Fuel selector | PROPER TANK |
| Electric fuel pump | ON |
| Mixture | SET |
| Flaps | SET - 102 KIAS max |
| Initial approach speed | 75 KIAS |
| Final approach speed (flaps 40°) | 66 KIAS |

Stopping Engine:

| | |
|------------------------|--------------|
| Flaps | RETRACT |
| Electric fuel pump | OFF |
| Avionics master switch | OFF |
| Electrical switches | OFF |
| Throttle | CLOSED |
| Mixture | IDLE CUT-OFF |
| Magneto switches | OFF |
| Alternator switch | OFF |
| Battery master switch | OFF |


Aircraft Settings Panel

| Aircraft Information | |
|--|-------------------------|
| NEW ACFT MODULE | |
| Aircraft module | |
| ArcherIII.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | Archer III (v4) |
| Engines | 1 |
| Propeller | Fixed pitch |
| Gear | Fixed |
| Rated power | 180 HP |
| Service ceiling | 14000 ft |
| Gross weight | 2552 lbs |
| Empty weight | 1822 lbs |
| Usable fuel | 48.0 US gal = 288.1 lbs |
| Speed | |
| Never exceed speed | 154 kts |
| Best single engine rate of climb | --- kts |
| Minimum single engine control speed | --- kts |
| Maximum structural cruising speed | 125 kts |
| Zero flaps stalling speed | 50 kts |
| Flaps extended stalling speed | 45 kts |
| Maximum speed for flaps extended | 102 kts |
| Maximum speed for gear extended | --- kts |
| Maximum speed for gear operation | --- kts |

Configuration Page


| Engine / Cruise Performance for Non-ISA OAT* | | | | | |
|--|-----------------------------------|------|-----|------------------------|-------------------------------|
| RPM for Constant 55% Power | | | | | |
| Fuel Flow: Best Economy Mixture, 8.2 GPH | | | | | |
| Pressure Altitude Feet | Indicated Outside Air Temperature | | | Engine Speed RPM | True Air Speed Knots ** |
| | °C | °F | °F | | |
| Sea Level | ISA-15 | 0 | 32 | 2245 | 105 |
| | ISA | 15 | 59 | 2265 | |
| | ISA +10 | 25 | 77 | 2275 | |
| | ISA +20 | 35 | 95 | 2285 | |
| | ISA +30 | 45 | 113 | 2295 | |
| 2000 | ISA-15 | -4 | 25 | 2265 | 106 |
| | ISA | 11 | 52 | 2280 | |
| | ISA +10 | 21 | 70 | 2295 | |
| | ISA +20 | 31 | 88 | 2305 | |
| | ISA +30 | 41 | 106 | 2315 | |
| 4000 | ISA-15 | -8 | 18 | 2285 | 106 |
| | ISA | 7 | 45 | 2300 | |
| | ISA +10 | 17 | 63 | 2315 | |
| | ISA +20 | 27 | 81 | 2325 | |
| | ISA +30 | 37 | 99 | 2335 | |
| 6000 | ISA-15 | -12 | 10 | 2305 | 107 |
| | ISA | 3 | 37 | 2320 | |
| | ISA +10 | 13 | 55 | 2330 | |
| | ISA +20 | 23 | 73 | 2345 | |
| | ISA +30 | 33 | 91 | 2355 | |
| 8000 | ISA-15 | -16 | 3 | 2320 | 107 |
| | ISA | -1 | 30 | 2340 | |
| | ISA +10 | 9 | 48 | 2350 | |
| | ISA +17.5 | 16.5 | 62 | 2360 | |
| | ISA +30 | 26 | 79 | 2370 | |
| 9000 | ISA-15 | -18 | 0 | 2330 | 107 |
| | ISA | -3 | 27 | 2350 | |
| | ISA +8.5 | 5.5 | 42 | 2360 | |
| | ISA +15 | 12.5 | 55 | 2370 | |
| | ISA +22.5 | 20.5 | 69 | 2380 | |
| 10000 | ISA-15 | -20 | -4 | 2340 | 108 |
| | ISA | -5 | 23 | 2360 | |
| | ISA +10 | 7 | 45 | 2375 | |
| | ISA +17.5 | 14.5 | 58 | 2385 | |
| | ISA +25 | 22.5 | 72 | 2395 | |

NOTE: * Aircraft weight 2550 Lbs., Wheel pants and strut fairings installed
 ** Subtract 3 KTAS if wheel pants are removed.

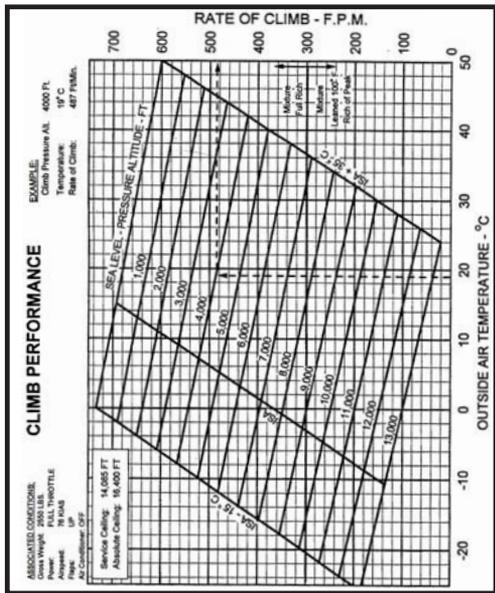

| Engine / Cruise Performance for Non-ISA OAT* RPM for Constant 65% Power Fuel Flow: Best Economy Mixture, 9.5 GPH | | | | | |
|--|---|------|------------------------|--------------------------------|-----|
| Pressure Altitude Feet | Indicated Outside Air Temperature °C | °F | Engine Speed RPM | True Air Speed Knots *** | |
| Sea Level | ISA-15 | 0 | 2385 | 113 | |
| | ISA | 15 | 2405 | | |
| | ISA +10 | 25 | 2415 | | |
| | ISA +20 | 35 | 2430 | | |
| | ISA +30 | 45 | 2440 | | |
| 2000 | ISA-15 | -4 | 25 | 2405 | 114 |
| | ISA | 11 | 52 | 2425 | |
| | ISA +10 | 21 | 70 | 2440 | |
| | ISA +20 | 31 | 88 | 2450 | |
| | ISA +30 | 41 | 106 | 2465 | 117 |
| 4000 | ISA-15 | -8 | 18 | 2430 | 115 |
| | ISA | 7 | 45 | 2450 | |
| | ISA +10 | 17 | 63 | 2460 | |
| | ISA +20 | 27 | 81 | 2475 | |
| | ISA +30 | 37 | 99 | 2485 | 118 |
| 6000 | ISA-15 | -12 | 10 | 2450 | 116 |
| | ISA | 3 | 37 | 2470 | |
| | ISA +10 | 13 | 55 | 2485 | |
| | ISA +20 | 23 | 73 | 2495 | |
| | ISA +30 | 33 | 91 | 2510 | 119 |
| 8000 | ISA-15 | -16 | 3 | 2475 | 117 |
| | ISA | -1 | 30 | 2495 | |
| | ISA +10 | 9 | 48 | 2505 | |
| | ISA +17.5 | 16.5 | 62 | 2515 | 119 |
| | ISA -15 | -18 | 0 | 2485 | 117 |
| 9000 | ISA | -3 | 27 | 2505 | |
| | ISA +8.5 | 5.5 | 42 | 2515 | 119 |
| | ISA -15 | -20 | 4 | 2495 | 118 |
| | ISA | -5 | 23 | 2515 | 119 |
| | 10000 | | | | |

NOTE: * Aircraft weight 2550 Lbs., Wheel pants and strut fairings installed
 ** Subtract 3 KTAS if wheel pants are removed.

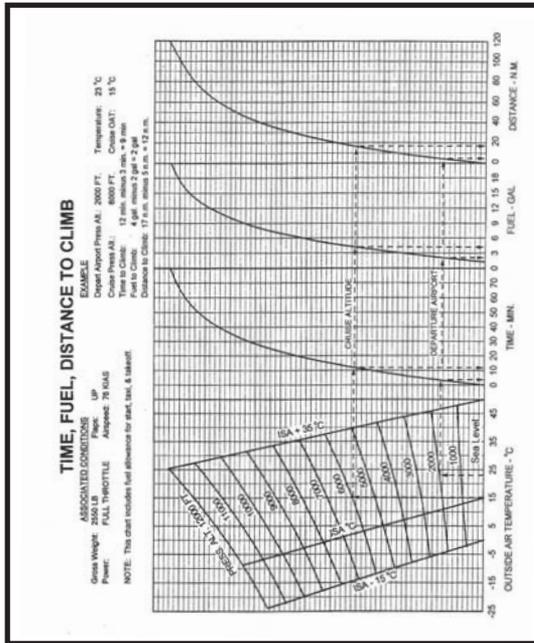

PIPER ARROW IV




Cockpit Functions



To adjust TAS, click on knob and drag up or down

Arrow IV CONFIGURATION page allows you to choose between HSI/RMI or DG/ADF-Dual VORs. You can also choose a slaved or non-slaved ADF.

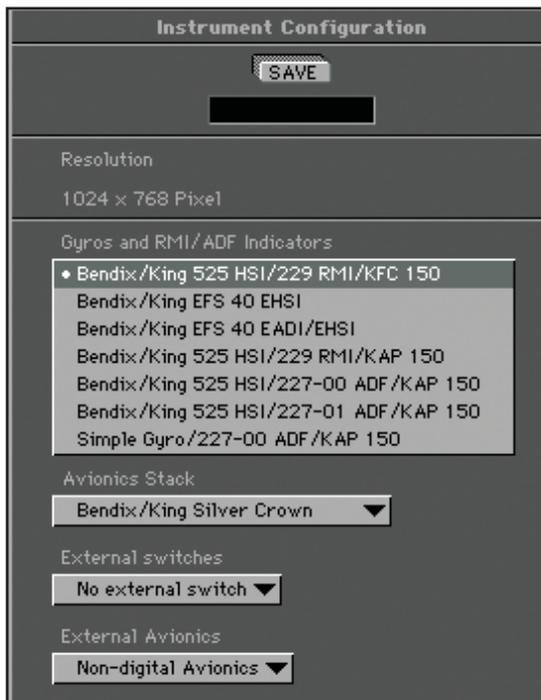




Assign #1 needle to Nav 1
or Nav 2 receiver



Click on instrument face to change ADF to Nav 2 and vice versa

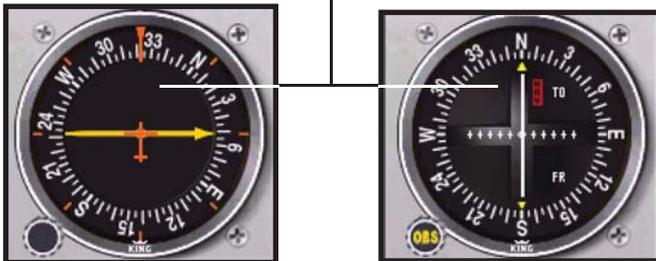

Aircraft Checklist**Before Starting Engine:**

| | |
|---------------|-------------------|
| Brakes | SET |
| Alternate Air | OFF |
| Propeller | FULL INCREASE RPM |
| Avionics | OFF |
| Fuel Selector | DESIRED TANK |

Starting Engine (Normal):

| | |
|--------------------|-----------------------------|
| Throttle | 1/4 INCH OPEN |
| ALTR Switch | ON |
| BATT MASTR Switch | ON |
| Electric Fuel Pump | ON |
| Mixture | RICH - then IDLE CUT OFF |
| Starter | ENGAGE |
| Mixture | FULL RICH |
| Throttle | ADJUST |
| Oil Pressure | CHECK |

Warm Up:

| | |
|----------|------------------|
| Throttle | 1400 to 1500 RPM |
|----------|------------------|

Ground Check:

| | |
|-------------------|----------------------|
| Parking Brake | SET |
| Propeller | FULL INCREASE |
| Throttle | 2000 RPM |
| Magnetos | CHECK |
| Vacuum | 4.8 to 5.1 inches Hg |
| Oil Temperature | CHECK |
| Oil Pressure | CHECK |
| Ammeter | CHECK |
| Annunciator Panel | PRESS-TO-TEST |

| | |
|--------------------|-----------------------------------|
| Propeller | EXERCISE then FULL INCREASE CHECK |
| Alternate Air | OFF |
| Electric Fuel Pump | CHECK |
| Fuel Pressure | RETARD |
| Throttle | |

Before Takeoff:

| | |
|--------------------|-------------|
| BATT MASTR Switch | ON |
| ALTR Switch | ON |
| Flight Instruments | CHECK |
| Fuel Selector | PROPER TANK |
| Electric Fuel Pump | ON |
| Engine Gauges | CHECK |
| Alternate Air | CLOSED |
| Mixture | SET |
| Propeller | SET |
| Flaps | SET |
| Trim | SET |

Takeoff (Normal):

| | |
|---------------|--------------------------|
| Flaps | SET |
| Trim | SET |
| Accelerate | 65 to 75 KIAS |
| Control Wheel | ROTATE to CLIMB ATTITUDE |

Climb:

| | |
|----------------------------------|-------------------------|
| Best Rate (Gear Up/Flaps Up) | 90 KIAS |
| Best Angle (Gear Up/Flaps Up) | 78 KIAS |
| En Route | 104 KIAS |
| Electric Fuel Pump | OFF at desired altitude |

Cruise:

| | |
|----------------------|---------------------|
| Normal Maximum Power | 75% |
| Power | SET per power table |
| Mixture | ADJUST |

Approach and Landing:

| | |
|--------------------|---------------------------------------|
| Fuel Selector | PROPER TANK |
| Electric Fuel Pump | ON |
| Mixture | SET |
| Propeller | FULL INCREASE |
| Gear | DOWN – 29 KIAS max |
| Flaps | SET – 103 KIAS max Trim to 75 KIAS |

Stopping Engine:


| | |
|---------------------|---------------|
| Flaps | RETRACT |
| Electric Fuel Pump | OFF |
| Avionics | OFF |
| Electrical Switches | OFF |
| Propeller | FULL INCREASE |
| Throttle | CLOSED |
| Mixture | IDLE CUT OFF |
| Magnetos | OFF |
| ALTR Switch | OFF |
| BATT MASTR Switch | OFF |

Aircraft Settings Panel

| Aircraft Information | |
|--|--|
| NEW ACFT MODULE | |
| Aircraft module | |
| Arrow4HR.pho | |
| <p style="color: yellow;">AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER.</p> | |
| Various | |
| Aircraft | Arrow IV, PA 28RT-201 (v1) |
| Engines | 1 Rated power 197 HP |
| Propeller | Constant speed Service ceiling 18000 ft |
| Gear | Retractable |
| Gross weight | 2749 lbs Empty weight 1790 lbs |
| Usable fuel | 77.0 US gal = 461.9 lbs |
| Speed | |
| Never exceed speed | 190 kts |
| Best single engine rate of climb | ...--- kts |
| Minimum single engine control speed | --- kts |
| Maximum structural cruising speed | 149 kts |
| — Zero flaps stalling speed | 58 kts |
| — Flaps extended stalling speed | 53 kts |
| — Maximum speed for flaps extended | 108 kts |
| — Maximum speed for gear extended | 130 kts |
| — Maximum speed for gear operation | 109 kts |

Configuration Page

Climb Performance


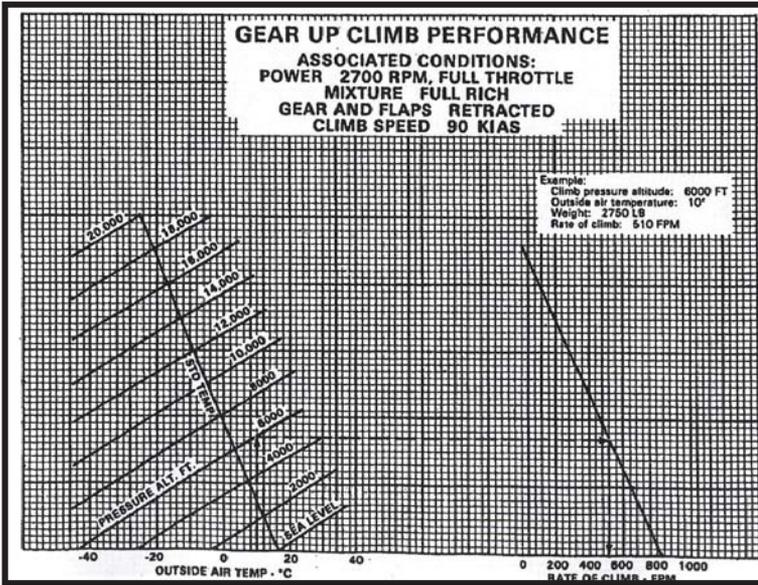


**Power Setting Table for Lycoming Model IO-360-C1C6
 Engine as Installed in PA-28R-201 Arrow Best Power Mixture**

| Pressure Altitude | ISA Temperature | | 55% power 110 BHP @ Prop Mixture Peak EGT + 100° F RPM and Manifold Press. | | 65% power 130 BHP @ Prop Mixture Peak EGT + 100° F RPM and Manifold Press. | | 75% power 150 BHP @ Prop Mixture Peak EGT + 100° F RPM and Manifold Press. | | Pressure Altitude |
|-------------------|-----------------|-----|---|----------|---|----------|---|----------|-------------------|
| | Feet | °F | °C | 2200 RPM | 2500 RPM | 2200 RPM | 2500 RPM | 2500 RPM | |
| S.L. | 59 | 15 | 23.7 | 21.7 | 28.1 | 24.1 | 28.3 | | S.L. |
| 1000 | 55 | 13 | 23.4 | 21.4 | 25.8 | 23.7 | 28.0 | | 1000 |
| 2000 | 52 | 11 | 23.0 | 21.1 | 25.4 | 23.4 | 25.6 | | 2000 |
| 3000 | 48 | 9 | 22.6 | 20.8 | 25.1 | 23.1 | 25.3 | | 3000 |
| 4000 | 45 | 7 | 22.3 | 20.5 | 24.7 | 22.8 | 24.9 | | 4000 |
| 5000 | 41 | 5 | 21.9 | 20.2 | 24.3 | 22.4 | 24.6 | | 5000 |
| 6000 | 38 | 3 | 21.6 | 19.9 | 24.0 | 22.1 | 24.3 | | 6000 |
| 6800 | 35 | 2 | 21.3 | 19.7 | 23.7 | 21.9 | F.T. | | 6800 |
| 7000 | 34 | 1 | 21.2 | 19.6 | 23.6 | 21.8 | | | 7000 |
| 7500 | 32 | 0 | 21.0 | 19.4 | F.T. | 21.6 | | | 7500 |
| 8000 | 30 | -1 | 20.8 | 19.3 | | 21.5 | | | 8000 |
| 9000 | 27 | -3 | 20.5 | 19.0 | | 21.1 | | | 9000 |
| 9400 | 25 | -4 | 20.3 | 18.9 | | F.T. | | | 9400 |
| 10000 | 23 | -5 | F.T. | 18.7 | | | | | 10000 |
| 11000 | 19 | -7 | | 18.4 | | | | | 11000 |
| 12000 | 16 | -9 | | 18.1 | | | | | 12000 |
| 13000 | 12 | -11 | | 17.8 | | | | | 13000 |
| 14000 | 9 | -13 | | 17.5 | | | | | 14000 |


Note:
 To maintain constant power, correct manifold pressure approximately 0.16" Hg for each 10° F (5.5° C) variation in inlet air temperature from standard altitude temperature. Add manifold pressure for air temperatures above standard; subtract for temperatures below standard. Full throttle manifold pressure values may not be obtainable when atmospheric conditions are non-standard.

Cruise Performance

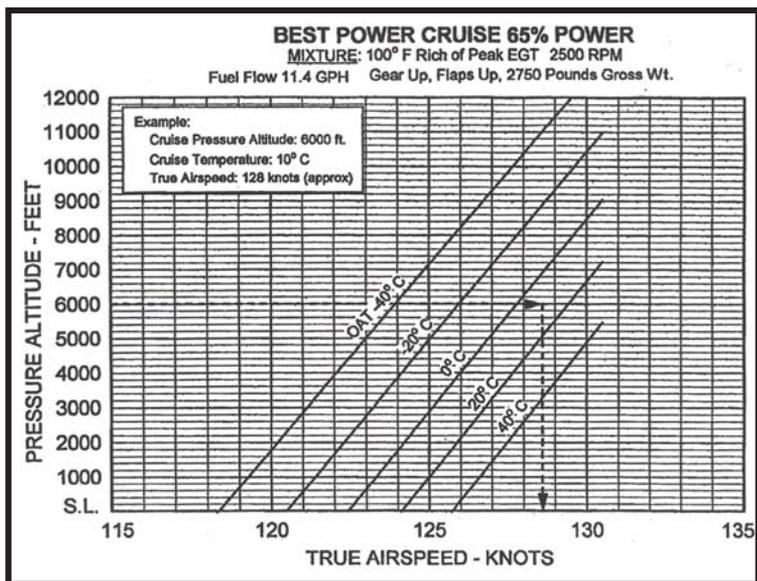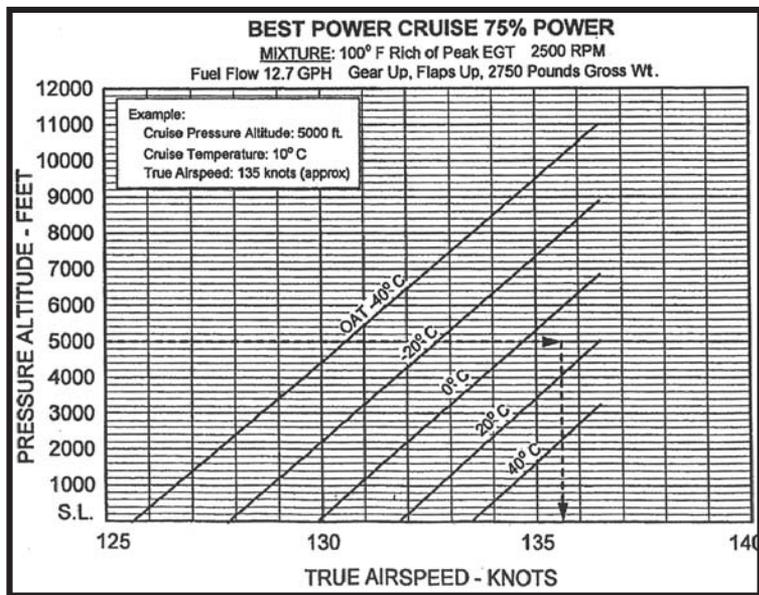

MOONEY M20J



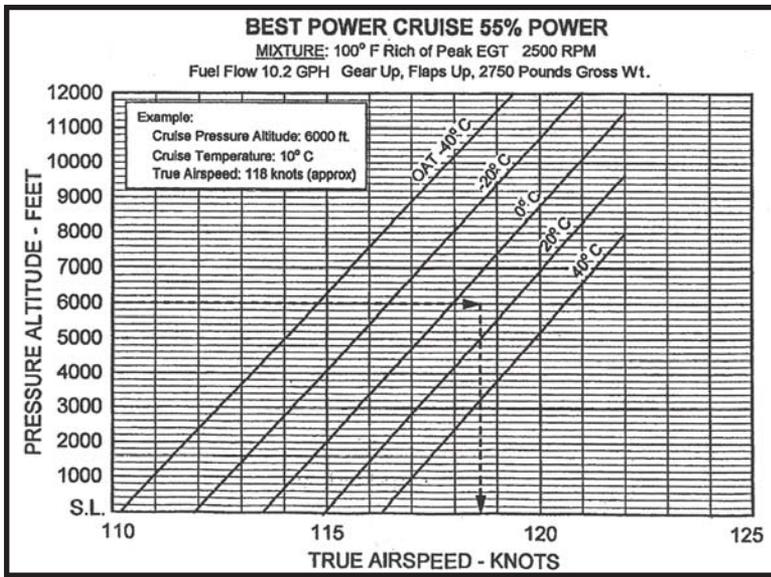

Cockpit Functions



As in all ELITE photo-realistic modules, the Mooney M20J provides unbelievable cockpit detail. From full functioning warning annunciator panel, alternate air source, standby vac to the gear safety bypass switch.



Choose between standard or digital altimeter (see Sec. III, Instrument Configuration)



Fully integrated cowl flaps

Gear safety bypass switch overrides the safety features of the airspeed switch (which automatically prevents retraction below approximately 65 knots)



Aircraft Checklist

Before Starting Check:

| | |
|------------------------------|---------------------|
| Magneto/Starter Switch | OFF |
| Master Switch | OFF |
| Alternator Field Switch | OFF |
| Radio Master Switch | OFF |
| Fuel Boost Pump | OFF |
| Alternate Static Source Push | OFF |
| Lights | OFF |
| Pitot Heat | OFF |
| Throttle | CLOSED |
| Propeller | HIGH RPM |
| Mixture | IDLE CUTOFF |
| Cowl Flaps | VERIFY OPEN |
| Parking Brakes | SET |
| Flap Switch | Centered (Flaps UP) |
| Fuel Selector | FULLEST TANK |
| ELT | ARM |
| Landing Gear Switch | DOWN |

Starting Engine (Normal):

| | |
|-------------------------|---------------------------------------|
| Throttle | ¼ OPEN |
| Propeller | HIGH RPM |
| Mixture | FULL FORWARD (RICH) |
| Master Switch | ON |
| Alternator Field Switch | ON |
| Annunciator Lights | PRESS TO TEST |
| Fuel Boost Pump | ON to establish pressure, then OFF |
| Mixture | IDLE CUTOFF |
| Magneto/Starter Switch | TURN and PUSH |
| Mixture | Move slowly to RICH |
| Throttle | Set at 1000 to 1200 RPM |

| | |
|---------------------|-------|
| Oil Pressure | CHECK |
| Voltmeter | CHECK |
| Fuel Flow Indicator | |

Before Taxi:

| | |
|---------------------|------------------------------------|
| Radio Master Switch | ON |
| Radios | CHECK and SET |
| Altimeter | SET |
| Fuel Selector | CHECK TANKS |
| Cowl Flaps | CHECK OPERATION then as desired |

Before Takeoff:

| | |
|------------------------|---|
| Parking Brake | SET |
| Throttle | 1200 RPM |
| Propeller | HIGH RPM |
| Mixture | RICH (Full Forward) |
| Cowl Flaps | FULL OPEN |
| Magneto/Starter Switch | GROUND CHECK |
| Throttle | 1900-2000 RPM |
| Magnetos | CHECK |
| Propeller | CYCLE |
| Throttle | IDLE |
| Trim | Takeoff Setting |
| Wing Flaps | CHECK OPERATION then takeoff setting |
| Avionics | CHECK |
| Annunciator Lights | Press to Test |
| Lights | ON |
| Parking Brake | RELEASE |

Takeoff (Normal):

| | |
|--------------------------|-------------------------------|
| Electric Fuel Boost Pump | ON |
| Power | FULL THROTTLE and 2700 RPM |

| | |
|--------------------------|------------------|
| Aircraft Attitude | Lift Nose Wheel |
| Climb Speed | 63 KIAS |
| Landing Gear | 71 KIAS |
| Wing Flaps | RETRACT before |
| Electric Fuel Boost Pump | 107 KIAS |
| | RETRACT in climb |
| | OFF |

Climb (Best Rate, V_y):

| | |
|------------|---------------|
| Power | FULL THROTTLE |
| Mixture | and 2700 RPM |
| Cowl Flaps | FULL RICH |
| Airspeed | FULL OPEN |
| | 88 KIAS |

Cruise and Descent:

See Mooney manual for full details.

Approach for Landing:

| | |
|-----------------|---------------------|
| Landing Gear | XTEND below |
| Mixture | 132 KIAS |
| Propeller | FULL RICH |
| Fuel Boost Pump | HIGH RPM |
| Fuel Selector | ON |
| Wing Flaps | FULLEST TANK |
| Trim | AS DESIRED; FULL |
| Parking Brake | DOWN below 115 KIAS |
| | AS DESIRED |
| | OFF |

Go Around (Balked Landing):

| | |
|----------|-------------------|
| Power | FULL THROTTLE and |
| Mixture | 2700 RPM |
| Airspeed | FULL RICH |
| | 65 KIAS |


| | |
|--------------|--|
| Flaps | TAKEOFF position after climb established |
| Trim | Nose down to relieve control force |
| Airspeed | 73 KIAS |
| Landing Gear | RETRACT |
| Wing Flaps | RETRACT |
| Cowl Flaps | OPEN |
| Airspeed | 91 KIAS |

Landing (Normal):

| | |
|-------------------|-------------------------------|
| Airspeed on Final | 71 KIAS (Full Flaps) |
| Brakes | Minimum required |
| Wing Flaps | RETRACT after clearing runway |
| Boost Pump | OFF after landing |
| Trim | TAKEOFF position |

Shutdown:


| | |
|-------------------------|--|
| Parking Brake | SET |
| Throttle | 1000 to 1200 RPM to drop cylinder head temps |
| Radio Master | OFF |
| Magneto/Starter Switch | Grounding Check |
| Mixture | IDLE CUTOFF |
| Magneto/Starter Switch | OFF |
| Alternator Field Switch | OFF |
| Master Switch | OFF |

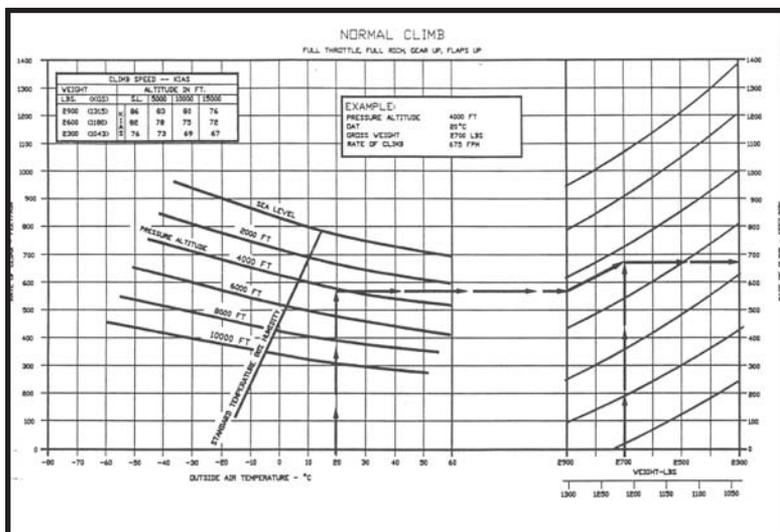

SOCATA TB10 TOBAGO



Cockpit Functions

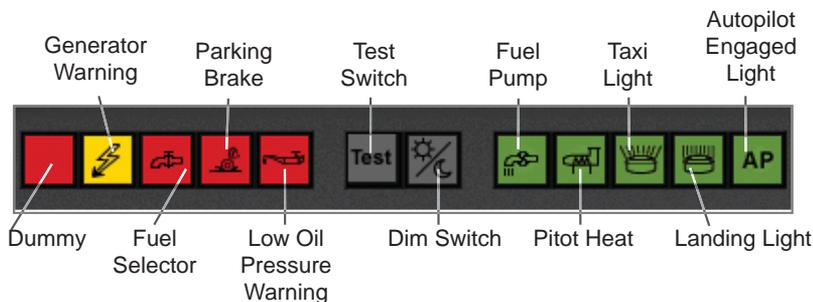

Dummy light: Not used.

Generator Warning light: Illuminates when the voltage is low or the engine is operated below 1000 RPM.

Fuel Selector light: Illuminates when the fuel tank selector is in the 'off' position.

Parking Brake light: Illuminates when the parking brake is set.

Low Oil Pressure Warning light: Illuminates when oil pressure is low or the engine is not running.

Test Switch: Click on this switch to test all annunciator lights.

Dim Switch: Dims all lights for use at night.


Fuel Pump light: Illuminates when the electric fuel pump is activated.

Pitot Heat light: Illuminates when the pitot heat is activated.


Taxi / Landing Light: Illuminates when the Taxi or Landing light switches are activated.

Autopilot Engaged light: Illuminates when the autopilot is engaged.

Turn knob to set and release the parking brake

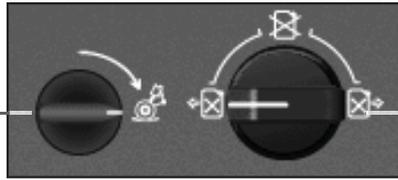

Turn knob to select desired fuel tank. The top position shuts off the fuel supply.

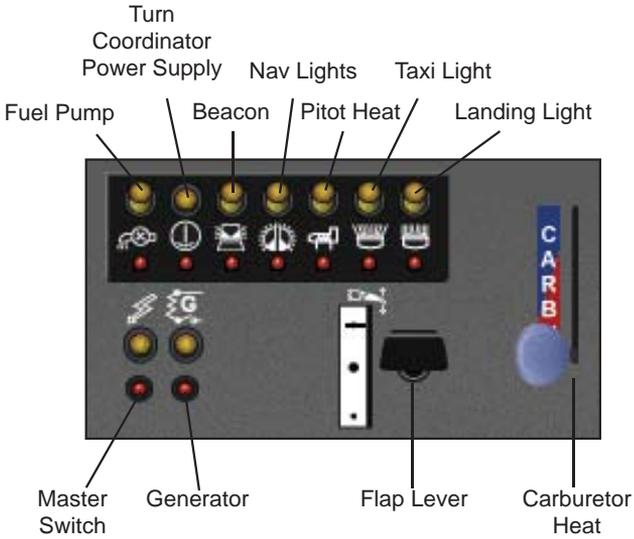

Aircraft Checklist

Before Starting Check:

| | |
|-------------------------|--------------------|
| Main switch | OFF |
| Parking brake | SET |
| Fuel selector | OPEN (L.H or R.H.) |
| Magneto selector | OFF |
| Radio master | OFF |
| Alternate static source | Pushed |

Engine Starting:

| | |
|------------------------|-------------------------------|
| Anticollision light | ON |
| Carburetor heating | OFF |
| Propeller | FULL FORWARD |
| Mixture | FULL RICH |
| Main switch | ON |
| Fuel pump | ON |
| Pump warning light | ON |
| Fuel pressure | Green sector |
| Injection | Throttle operated a few times |
| Throttle | ¼ OPEN |
| Magneto/start selector | START |
| Magneto selector | BOTH when engine starts |
| Oil pressure | Green sector |
| Fuel pump | OFF |
| Engine | 1000 to 1200 RPM |

After Starting Engine:

Electrical Generation Check:

| | |
|-----------------------------|---------------|
| Alternator switch | OFF |
| a. Generation warning light | ON |
| b. Voltmeter | Yellow sector |
| Alternator switch | ON |
| a. Generation warning light | OFF |

b. Voltmeter
 Turn and bank indicator
 Vacuum gauge
 Advisory panel test
 Radio master
 All radios and nav aids
 Fuel selector
 Flaps

Green sector
 ON
 Checked
 Positive
 ON
 ON
 Set to fullest tank
 Checked and
 RETRACTED

Taxiing:

Parking brake
 Flight instruments
 Taxi light

RELEASE
 Checked
 As required

Engine Run-up:

Parking brake
 Oil temperature
 Oil pressure
 Fuel pressure
 Mixture
 Carburetor heating
 Fuel selector

SET
 Green sector
 Green sector
 Green sector
 FULL RICH
 OFF
 Set to fullest tank

Propeller Check:

Propeller
 Throttle
 Propeller

FULL FORWARD
 2000 RPM
 Cycle twice and return
 to HIGH RPM

Magneto Check:

Throttle
 Magneto selector

2000 RPM
 L. then BOTH
 R. then BOTH
 175 RPM

Max RPM drop on each Mag

Max difference between Mags 50 RPM

Carburetor Heating Check:

| | |
|----------------------------------|----------|
| Carburetor heating | ON |
| Manifold pressure | Decrease |
| Carburetor temperature indicator | Increase |
| Carburetor heating | OFF |

Maximum Power Check:

Full throttle 2700 RPM

Before Take-off:

| | |
|--------------------------|-----------------------|
| Pitch trim | TAKE-OFF |
| Flaps | TAKE-OFF |
| Magneto selector | BOTH |
| Propeller | FULL FORWARD |
| Carburetor heating | OFF |
| Mixture | FULL RICH |
| Fuel selector | Check to fullest tank |
| Fuel pump | ON |
| Oil temperature | Green sector |
| Oil pressure | Green sector |
| Fuel pressure | Green sector |
| Voltmeter | Green sector |
| Altimeter | SET |
| Heading indicator | SET |
| Horizontal attitude gyro | SET |
| Parking brake | RELEASE |

Takeoff:

Throttle FULL POWER

Standard airspeeds:

| | |
|---------------|---------|
| Rotation | 63 KIAS |
| Initial climb | 70 KIAS |

When Safely Airborne:

| | |
|--------|-------|
| Brakes | Apply |
|--------|-------|

At 300 Feet:

| | |
|-------------|---------|
| Climb speed | 73 KIAS |
| Flaps | RETRACT |

At 1000 Feet:

| | |
|-----------|-----|
| Fuel pump | OFF |
|-----------|-----|

Climb:

| | |
|---------------------|----------------------------|
| Mixture | FULL RICH |
| Throttle | FULL POWER |
| Propeller | FULL FORWARD (2700 RPM) |
| Optimum climb speed | 78 KIAS |

Cruise:

| | |
|------------|-------------|
| Power | As required |
| Pitch trim | As required |
| Mixture | As required |

Descent:

Power setting as required for descent.

Approach - Landing:

| | |
|----------|----------|
| Final: | |
| Airspeed | 78 KIAS |
| Flaps | TAKE-OFF |

| | |
|--------------------|-----------------------|
| Fuel pump | ON |
| Mixture | FULL RICH |
| Propeller | FULL FORWARD |
| Carburetor heating | ON or OFF as required |

Short Final:

| | |
|----------|------------|
| Flaps | LANDING |
| Airspeed | 72-80 KIAS |

Go-Around:

| | |
|--------------------|------------|
| Carburetor heating | OFF |
| Throttle | FULL POWER |
| Airspeed | 70-73 KIAS |

When climb rate is positive:

| | |
|----------|-----------|
| Flaps | TAKE-OFF |
| Airspeed | 73 KIAS |
| Flaps | RETRACTED |
| Climb | 78 KIAS |

After Landing:

| | |
|--------------------|-------------|
| Fuel pump | OFF |
| Flaps | RETRACTED |
| Trim | TAKE-OFF |
| Radio equipment | As required |
| Carburetor heating | OFF |

Shutdown / Securing Airplane:

| | |
|-------------------------|--------|
| Parking brake | SET |
| Turn and Bank indicator | OFF |
| Radio master | OFF |
| Throttle | REDUCE |


CLIMB PERFORMANCE

CONDITIONS :

Climb speed : 78 KIAS - 90 MPH IAS
 Weight : 2535 lbs (1150 kg)
 Airplane equipped with wheel fairings
 Flaps retracted

| PRESSURE ALTITUDE (ft) | CLIMB SPEED | | | | | | | | | | | |
|------------------------|--------------|--------|-------------|--------|---------------|--------|---------------|--------|----------------|--------|-----|--------|
| | -4°F (-20°C) | | +32°F (0°C) | | +59°F (+15°C) | | +86°F (+30°C) | | +104°F (+40°C) | | | |
| | m/s | ft/min | m/s | ft/min | m/s | ft/min | m/s | ft/min | m/s | ft/min | m/s | ft/min |
| 0 | 4.68 | 921 | 4.29 | 844 | 4.00 | 787 | 3.72 | 732 | 3.54 | 697 | | |
| 2000 | 4.06 | 799 | 3.68 | 724 | 3.40 | 669 | 3.14 | 618 | 2.97 | 585 | | |
| 4000 | 3.41 | 671 | 3.04 | 598 | 2.78 | 547 | 2.53 | 498 | 2.36 | 465 | | |
| 6000 | 2.78 | 547 | 2.43 | 478 | 2.17 | 427 | 1.93 | 380 | 1.77 | 348 | | |
| 8000 | 2.17 | 427 | 1.84 | 362 | 1.59 | 313 | 1.35 | 266 | 1.20 | 236 | | |

CLIMB - CONSUMPTION - TIME - DISTANCE COVERED

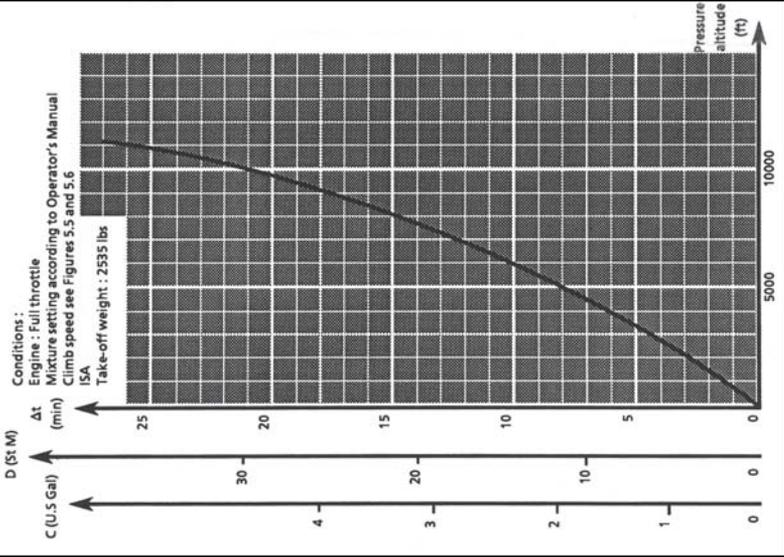

PRESSURE ALTITUDE : 2000 ft
 ISA : 52°F (11°C)
 Airplane with wheel/fairings

| N (RPM) | 2700 | | 2600 | | 2500 | | 2400 | | 2300 | |
|---|----------|------|------|------|------|------|------|------|-------|------|
| | KTAS | MPH | KTAS | MPH | KTAS | MPH | KTAS | MPH | KTAS | MPH |
| MP (in.Hg) | 22.1 | 23.6 | 22.1 | 23.6 | 22.1 | 23.6 | 22.1 | 23.6 | 22.1 | 23.6 |
| % BHP (rounded) | 73 | 78 | 72 | 76 | 70 | 74 | 72 | 76 | 70 | 74 |
| TAS | 119 | 137 | 122 | 141 | 121 | 140 | 124 | 143 | 122 | 141 |
| | 114 | 132 | 118 | 136 | 117 | 135 | 120 | 138 | 118 | 136 |
| C (U.S. Gal/hr) | 108 | 124 | 113 | 130 | 112 | 129 | 115 | 133 | 113 | 130 |
| | 106 | 122 | 104 | 119 | 110 | 127 | 108 | 124 | 111.4 | 11.7 |
| Distance to be cleared without reserves | h.min SM | 4.42 | 4.64 | 4.37 | 5.49 | 4.53 | 6.84 | 4.40 | 6.65 | 4.41 |
| | h.min SM | 5.12 | 6.87 | 5.05 | 6.90 | 5.22 | 7.24 | 5.07 | 7.08 | 5.20 |
| Distance to be cleared with reserves | h.min SM | 5.43 | 7.11 | 5.36 | 7.27 | 5.54 | 7.58 | 5.38 | 7.49 | 5.51 |
| | h.min SM | 6.06 | 7.43 | 6.25 | 7.64 | 6.10 | 7.83 | 6.23 | 7.92 | 6.31 |

CLIMB PERFORMANCE

CONDITIONS : Climb speed : 78 KIAS - 90 MPH IAS
 Weight : 2535 lbs (1150 kg)
 Airplane equipped with wheel/fairings
 Flaps retracted

| PRESSURE ALTITUDE (ft) | CLIMB SPEED | | | | | | | | | |
|------------------------|--------------|--------|-------------|--------|---------------|--------|---------------|--------|----------------|--------|
| | -4°F (-20°C) | | +32°F (0°C) | | +59°F (+15°C) | | +86°F (+30°C) | | +104°F (+40°C) | |
| | m/s | ft/min | m/s | ft/min | m/s | ft/min | m/s | ft/min | m/s | ft/min |
| 0 | 4.68 | 921 | 4.29 | 844 | 4.00 | 787 | 3.72 | 732 | 3.54 | 697 |
| 2000 | 4.06 | 799 | 3.68 | 724 | 3.40 | 669 | 3.14 | 618 | 2.97 | 585 |
| 4000 | 3.41 | 671 | 3.04 | 598 | 2.78 | 547 | 2.53 | 498 | 2.36 | 465 |
| 6000 | 2.78 | 547 | 2.43 | 478 | 2.17 | 427 | 1.93 | 380 | 1.77 | 348 |
| 8000 | 2.17 | 427 | 1.84 | 362 | 1.59 | 313 | 1.35 | 266 | 1.20 | 236 |

PRESSURE ALTITUDE : 6000 ft
ISA : 37°F (3°C)
Airplane with wheel fairings

| N (RPM) | 2700 | | 2600 | | 2500 | | 2400 | | 2300 | |
|---|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| | KTAS MPH |
| MP (in.Hg) | 22.1 | 22.1 | 22.1 | 22.1 | 22.1 | 22.1 | 22.1 | 22.1 | 22.1 | 22.1 |
| | 20.7 | 20.7 | 20.7 | 20.7 | 20.7 | 20.7 | 20.7 | 20.7 | 20.7 | 20.7 |
| | 19.2 | 19.2 | 19.2 | 19.2 | 19.2 | 19.2 | 19.2 | 19.2 | 19.2 | 19.2 |
| % BHP (rounded) | 78 | 76 | 74 | 74 | 74 | 73 | 73 | 70 | 70 | 70 |
| | 69 | 71 | 69 | 68 | 68 | 66 | 66 | 64 | 64 | 64 |
| | 62 | 64 | 63 | 61 | 61 | 60 | 60 | 58 | 58 | 58 |
| TAS | 127 | 146 | 125 | 144 | 125 | 144 | 123 | 142 | 121 | 139 |
| | 122 | 140 | 120 | 139 | 119 | 137 | 117 | 135 | 115 | 132 |
| | 115 | 132 | 113 | 130 | 111 | 128 | 109 | 126 | 105 | 121 |
| C (U.S Gal/hr) | 12.2 | 11.3 | 10.7 | 10.7 | 10.7 | 10.2 | 10.2 | 9.9 | 9.9 | 9.9 |
| | 11.1 | 10.3 | 9.7 | 9.7 | 9.7 | 9.3 | 9.3 | 8.9 | 8.9 | 8.9 |
| | 9.9 | 9.3 | 8.9 | 8.9 | 8.9 | 8.5 | 8.5 | 8.2 | 8.2 | 8.2 |
| Distance to be cleared without reserves | h.min SM |
| | 4.25 | 643 | 4.46 | 687 | 5.02 | 721 | 5.16 | 746 | 5.28 | 761 |
| | 4.52 | 684 | 5.14 | 724 | 5.33 | 761 | 5.48 | 783 | 6.00 | 792 |
| | 5.25 | 718 | 5.48 | 755 | 6.06 | 783 | 6.21 | 795 | 6.32 | 789 |
| Distance to be cleared with reserves | h.min SM |
| | 3.53 | 550 | 4.10 | 587 | 4.23 | 615 | 4.35 | 634 | 4.44 | 646 |
| | 4.15 | 581 | 4.33 | 618 | 4.49 | 646 | 4.61 | 665 | 5.11 | 671 |
| | 4.42 | 612 | 5.00 | 640 | 5.16 | 665 | 5.28 | 671 | 5.37 | 668 |

PRESSURE ALTITUDE : 4000 ft
ISA : 45°F (7°C)
Airplane with wheel fairings


| N (RPM) | 2700 | | 2600 | | 2500 | | 2400 | | 2300 | |
|---|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| | KTAS MPH |
| MP (in.Hg) | 22.1 | 23.6 | 22.1 | 23.6 | 22.1 | 23.6 | 22.1 | 23.6 | 22.1 | 23.6 |
| | 20.7 | 22.1 | 20.7 | 22.1 | 20.7 | 22.1 | 20.7 | 22.1 | 20.7 | 22.1 |
| | 19.2 | 20.7 | 19.2 | 20.7 | 19.2 | 20.7 | 19.2 | 20.7 | 19.2 | 20.7 |
| % BHP (rounded) | 76 | 80 | 74 | 77 | 74 | 77 | 74 | 77 | 74 | 77 |
| | 69 | 74 | 72 | 70 | 70 | 68 | 70 | 68 | 68 | 68 |
| | 62 | 67 | 66 | 64 | 64 | 62 | 64 | 62 | 62 | 62 |
| TAS | 123 | 142 | 126 | 145 | 125 | 144 | 124 | 142 | 122 | 140 |
| | 118 | 136 | 122 | 140 | 120 | 139 | 119 | 137 | 117 | 135 |
| | 112 | 129 | 117 | 135 | 115 | 132 | 113 | 130 | 111 | 128 |
| C (U.S Gal/hr) | 11.8 | 12.1 | 11.4 | 11.4 | 11.4 | 10.9 | 10.9 | 10.4 | 10.4 | 10.4 |
| | 10.7 | 11 | 10.3 | 9.9 | 9.9 | 9.9 | 9.6 | 9.6 | 9.6 | 9.6 |
| | 9.7 | 9.9 | 9.7 | 9 | 9 | 8.7 | 8.7 | 8.7 | 8.7 | 8.7 |
| Distance to be cleared without reserves | h.min SM |
| | 4.32 | 640 | 4.27 | 646 | 4.43 | 677 | 4.57 | 702 | 5.09 | 724 |
| | 5.02 | 684 | 4.55 | 690 | 5.13 | 721 | 5.27 | 746 | 5.40 | 764 |
| | 5.34 | 715 | 5.25 | 730 | 5.32 | 733 | 6.00 | 783 | 6.12 | 792 |
| Distance to be cleared with reserves | h.min SM |
| | 3.58 | 550 | 3.53 | 553 | 4.07 | 581 | 4.19 | 603 | 4.29 | 618 |
| | 4.28 | 587 | 4.17 | 590 | 4.32 | 618 | 4.44 | 637 | 4.54 | 652 |
| | 4.49 | 612 | 4.42 | 624 | 4.48 | 624 | 5.11 | 668 | 5.23 | 677 |
| | 5.08 | 640 | 5.08 | 640 | 5.26 | 665 | 5.35 | 671 | 5.35 | 671 |

Aircraft Settings Panel

| Aircraft Information | |
|--|----------------|
| NEW ACFT MODULE | |
| Aircraft module | |
| TB10.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | TB-10 (v1) |
| Engines | 1 |
| Propeller | Constant speed |
| Gear | Fixed |
| Gross weight | 2535 lbs |
| Usable fuel | 55.4 US gal = |
| Rated power | 180 HP |
| Service ceiling | 13000 ft |
| Empty weight | 1543 lbs |
| | 332.2 lbs |
| Speed | |
| Never exceed speed | 165 kts |
| Best single engine rate of climb | --- kts |
| Minimum single engine control speed | --- kts |
| Maximum structural cruising speed | 128 kts |
| Zero flaps stalling speed | 60 kts |
| Flaps extended stalling speed | 53 kts |
| Maximum speed for flaps extended | 95 kts |
| Maximum speed for gear extended | --- kts |
| Maximum speed for gear operation | --- kts |

Configuration Page

Cockpit Functions

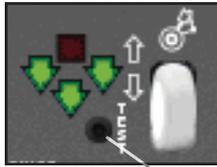

Press-to-test

TB20 Landing Gear

The small knob labeled TEST below the right green light is a press-to-test switch which, when pressed, will illuminate all the lights including the red, 'in transit' light. The red light will also illuminate if the throttle is closed with the gear in the up position.

TB20 Rudder Trim



The rudder trim knob is only functional when used in conjunction with rudder pedals or if the Yaw Control feature is 'Enabled' on the CONTROL Page. If the Yaw Control is 'Disabled' the ELITE software locks out the rudder trim and the aircraft maintains coordinated flight.

Aircraft Checklist**Before Starting Engine:**

| | |
|-------------------------|---------------------|
| Main switch | OFF |
| Parking brake | SET |
| Fuel selector | OPEN (L.H. or R.H.) |
| Magneto selector | OFF |
| Radio master | OFF |
| Landing gear lever | DOWN |
| Alternate air | PUSHED |
| Alternate static source | PUSHED |

Engine Starting:

| | |
|---------------------|---|
| Anticollision light | ON |
| Main switch | ON |
| Propeller | FULL FORWARD |
| Throttle | ¼ OPEN |
| Mixture | IDLE CUT-OFF |
| Fuel pump | FULL RICH until fuel flow displayed then IDLE CUT-OFF |
| Magneto selector | BOTH when engine starts |
| Oil pressure | CHECK |

After Starting Engine:

| | |
|-------------------------|---------------|
| Electrical Power Check: | |
| ALTr FLD switch-breaker | OFF |
| a. ALTr warning light | ON |
| b. Voltmeter | Yellow sector |
| ALTr FLD switch-breaker | ON |
| a. ALTr warning light | OFF |
| b. Voltmeter | Green sector |
| Turn and bank indicator | ON |
| Vacuum gauge | Checked |
| Advisory panel test | Positive |

| | |
|------------------------------------|-------------------------------------|
| Landing gear indicator lights test | Positive |
| Radio master | ON |
| All radios and nav aids | ON |
| Fuel selector | Check engine operation on each tank |
| Fuel selector | Set to fullest tank |
| Flaps | Checked and RETRACTED |

Taxiing:

| | |
|--------------------|-------------|
| Parking brake | RELEASE |
| Flight instruments | Checked |
| Taxi light | As required |

Engine Run-up:

| | |
|-----------------|---------------------|
| Parking brake | SET |
| Oil temperature | Green sector |
| Oil pressure | Green sector |
| Mixture | FULL RICH |
| Fuel selector | Set to fullest tank |

Propeller Check:

| | |
|-----------|------------------------------------|
| Propeller | FULL FORWARD |
| Throttle | 2000 RPM |
| Propeller | Cycle twice and return to HIGH RPM |

Magneto Check:

| | |
|------------------------------|------------------------------|
| Throttle | 2000 RPM |
| Magneto selector | L. then BOTH R. then BOTH |
| Maximum RPM drop on each Mag | 175 RPM |

| | |
|------------------------------------|--------|
| Maximum difference between Mags | 50 RPM |
|------------------------------------|--------|

Alternate Air Check:

| | |
|-------------------|------------|
| Alternate air | PULLED |
| Manifold pressure | Maintained |
| Alternate air | PUSHED |

Maximum Power Check:

| | |
|---------------|----------|
| Full throttle | 2575 RPM |
|---------------|----------|

Before Takeoff:

| | |
|--------------------------|-----------------------|
| Pitch trim | TAKE-OFF |
| Rudder trim | TAKE-OFF |
| Flaps | TAKE-OFF |
| Magneto selector | BOTH |
| Propeller | FULL FORWARD |
| Mixture | FULL RICH |
| Fuel selector | Check to fullest tank |
| Fuel pump | ON |
| Oil temperature | Green sector |
| Oil pressure | Green sector |
| Voltmeter | Green sector |
| Altimeter | SET |
| Heading indicator | SET |
| Horizontal attitude gyro | SET |
| Parking brake | RELEASE |

Takeoff:

| | |
|----------|------------|
| Throttle | FULL POWER |
|----------|------------|

Standard Airspeeds:

| | |
|---------------|---------|
| Rotation | 68 KIAS |
| Initial climb | 75 KIAS |

When Safely Airborne:

| | |
|--------------|---------|
| Brakes | Apply |
| Landing gear | RETRACT |

At 300 Feet:

| | |
|-------|---------|
| Flaps | RETRACT |
|-------|---------|

At 1000 Feet:

| | |
|-----------|-----|
| Fuel pump | OFF |
|-----------|-----|

Climb:

| | |
|---------------------|----------------------------|
| Mixture | FULL RICH |
| Throttle | FULL POWER |
| Propeller | FULL FORWARD (2575 RPM) |
| Optimum climb speed | 95 KIAS |

Cruise:

| | |
|------------|-------------|
| Power | As required |
| Pitch trim | As required |
| Mixture | As required |

Descent:

Power setting as required for descent.

Approach - Landing:

| | |
|--------------------|----------------------------|
| Final: | |
| Airspeed | 86-92 KIAS |
| Flaps | TAKE-OFF below 129 KIAS |
| Landing gear lever | DOWN |
| Fuel pump | ON |
| Mixture | FULL RICH |

| | |
|-----------|--------------|
| Propeller | FULL FORWARD |
| Brakes | Checked |

Short final:

| | |
|-----------|---------------------------|
| Flaps | LANDING below 103 KIAS |
| Airspeed | 68-76 KIAS |
| Go-Around | |
| Throttle | FULL POWER |
| Airspeed | 76-81 KIAS |

When climb rate is positive:

| | |
|--------------------|-----------|
| Landing gear lever | UP |
| Flaps | TAKE-OFF |
| Airspeed | 90 KIAS |
| Flaps | RETRACTED |
| Climb | 95 KIAS |

After Landing:

| | |
|-----------------|-------------|
| Fuel pump | OFF |
| Flaps | RETRACTED |
| Trim | TAKE-OFF |
| Radio equipment | As required |

Shut-down / Securing Airplane:

| | |
|-------------------------|--------|
| Parking brake | SET |
| Turn and bank indicator | OFF |
| Radio master | OFF |
| Throttle | REDUCE |

CLIMB PERFORMANCE

CONDITIONS :

- Landing gear UP
- Weight : 3086 lbs (1400 kg)
- Indicated speed : 95 KIAS - 109 MPH IAS
- Mixture : FULL RICH
- Flaps retracted
- Power : 2575 RPM - full throttle

| PRESSURE ALTITUDE | CLIMB SPEED | | | | | |
|----------------------|--------------------|--------|------|--------|------|--------|
| | ISA - 20°C (+ 36F) | | | ISA | | |
| | m/s | ft/min | m/s | ft/min | m/s | ft/min |
| 500 | 6.32 | 1244 | 5.59 | 1100 | 4.96 | 977 |
| 2500 | 5.65 | 1112 | 4.94 | 972 | 4.34 | 853 |
| 4500 | 4.98 | 979 | 4.29 | 844 | 3.70 | 729 |
| 6500 | 4.31 | 848 | 3.64 | 716 | 3.07 | 604 |
| 8500 | 3.64 | 716 | 2.99 | 588 | 2.43 | 479 |
| 10500 | 2.97 | 585 | 2.34 | 460 | 1.80 | 353 |
| 12500 | 2.31 | 455 | 1.69 | 332 | 1.16 | 228 |

PRESSURE ALTITUDE : 2500 ft
ISA : 90°F (10°C)

- CONDITIONS :**
- Mixture adjusted to the BEST POWER
 - Speed without antennas nor external lights
 - Weight : 2943 lbs (1335 kg)

NOTE : Bold-faced types represent recommended power.

| % BHP | N RPM | PA in-Hg | CAS MPH | TAS MPH | TAS kt | MIXTURE ADJUSTING | | SPECIFIC CONSUMPTION | |
|----------|-------------|-------------|------------|------------|------------|----------------------|-----------------------|-------------------------|-----------------------|
| | | | | | | l/h | U.S. Gall / 100 NM | U.S. Gall / 100 NM | U.S. Gall / 100 NM |
| 75 % | 2500 | 23.0 | | | | 61.3 | 16.2 | 39.9 | 10.5 |
| | 2400 | 23.8 | | | | 60.4 | 15.9 | 39.2 | 10.4 |
| | 2300 | 24.5 | 171 | 148 | 154 | 59.4 | 15.7 | 38.6 | 10.2 |
| | 2200 | 25.4 | | | | 58.5 | 15.5 | 38.0 | 10.0 |
| 70 % | 2500 | 21.9 | | | | 58.4 | 15.4 | 39.0 | 10.3 |
| | 2400 | 22.6 | | | | 57.4 | 15.2 | 38.4 | 10.1 |
| | 2300 | 23.3 | 166 | 144 | 172 | 56.5 | 14.9 | 37.7 | 10.0 |
| | 2200 | 24.2 | | | | 55.5 | 14.7 | 37.1 | 9.8 |
| 65 % | 2500 | 20.7 | | | | 55.4 | 14.6 | 38.1 | 10.1 |
| | 2400 | 21.4 | | | | 54.5 | 14.4 | 37.5 | 9.9 |
| | 2300 | 22.1 | 161 | 140 | 167 | 53.6 | 14.2 | 36.8 | 9.7 |
| | 2200 | 22.9 | | | | 52.6 | 13.9 | 36.2 | 9.6 |
| 60 % | 2500 | 19.6 | | | | 52.5 | 13.9 | 37.3 | 9.9 |
| | 2400 | 20.2 | | | | 51.6 | 13.6 | 36.6 | 9.7 |
| | 2300 | 20.9 | 156 | 136 | 162 | 50.6 | 13.4 | 36.0 | 9.5 |
| | 2200 | 21.6 | | | | 49.7 | 13.1 | 35.3 | 9.3 |
| 55 % | 2500 | 18.5 | | | | 49.6 | 13.1 | 36.6 | 9.7 |
| | 2400 | 19.0 | | | | 48.6 | 12.8 | 35.9 | 9.5 |
| | 2300 | 19.6 | 150 | 131 | 156 | 47.7 | 12.6 | 35.2 | 9.3 |
| | 2200 | 20.3 | | | | 46.7 | 12.4 | 34.5 | 9.1 |
| 50 % | 2500 | 17.3 | | | | 46.7 | 12.3 | 35.9 | 9.5 |
| | 2400 | 17.8 | | | | 45.7 | 12.1 | 35.2 | 9.3 |
| | 2300 | 18.4 | 144 | 125 | 130 | 44.8 | 11.8 | 34.4 | 9.1 |
| | 2200 | 19.0 | | | | 43.8 | 11.6 | 33.7 | 8.9 |

PRESSURE ALTITUDE : 6500 ft
ISA : 35.6°F (2°C)

CONDITIONS : - Mixture adjusted to the BEST POWER
- Speed without antennas nor external lights
- Weight : 2943 lbs (1335 kg)

NOTE : Bold-faced types represent recommended power.

| % | N | PA | CAS | | TAS | | MIXTURE ADJUSTING | | SPECIFIC CONSUMPTION | | |
|------|-----|-------------|-------------|-----|-----|-----|-------------------|--------------|----------------------|-------------------|------|
| | | | MPH | kt | MPH | kt | l/h | U.S. Gal /hr | | U.S. Gal / 100 NM | |
| 75 % | BHP | RPM | in.Hg | | | | | | | | |
| | | 2500 | 22.1 | 167 | 145 | 184 | 160 | 61.3 | 16.2 | 38.4 | 10.1 |
| | | 2500 | 20.9 | | | | | 58.4 | 15.4 | 37.6 | 9.9 |
| 70 % | | 2400 | 21.6 | 162 | 141 | 178 | 155 | 57.4 | 15.2 | 37.0 | 9.8 |
| | | 2300 | 22.3 | | | | | 56.5 | 14.9 | 36.3 | 9.6 |
| 65 % | | 2500 | 19.8 | | | | | 55.4 | 14.6 | 36.8 | 9.7 |
| | | 2400 | 20.5 | 157 | 137 | 173 | 151 | 54.5 | 14.4 | 36.1 | 9.5 |
| | | 2300 | 21.1 | | | | | 53.6 | 14.1 | 35.5 | 9.4 |
| | | 2200 | 21.9 | | | | | 52.6 | 13.9 | 34.9 | 9.2 |
| 60 % | | 2500 | 18.7 | | | | | 52.5 | 13.9 | 36.0 | 9.5 |
| | | 2400 | 19.3 | 152 | 132 | 168 | 146 | 51.6 | 13.6 | 35.4 | 9.4 |
| | | 2300 | 19.9 | | | | | 50.6 | 13.4 | 34.7 | 9.2 |
| | | 2200 | 20.6 | | | | | 49.7 | 13.1 | 34.1 | 9.0 |
| 55 % | | 2500 | 17.6 | | | | | 49.6 | 13.1 | 35.4 | 9.4 |
| | | 2400 | 18.2 | 146 | 127 | 161 | 140 | 48.6 | 12.9 | 34.7 | 9.2 |
| | | 2300 | 18.8 | | | | | 47.7 | 12.6 | 34.0 | 9.0 |
| | | 2200 | 19.4 | | | | | 46.7 | 12.3 | 33.3 | 8.8 |
| 50 % | | 2500 | 16.5 | | | | | 46.7 | 12.3 | 35.2 | 9.3 |
| | | 2400 | 17.0 | 138 | 120 | 152 | 132 | 45.7 | 12.1 | 34.5 | 9.1 |
| | | 2300 | 17.6 | | | | | 44.8 | 11.8 | 33.8 | 8.9 |
| | | 2200 | 18.2 | | | | | 43.8 | 11.6 | 33.1 | 8.7 |

PRESSURE ALTITUDE : 4000 ft
ISA : 45°F (7°C)
Airplane with wheel fairings

| N (RPM) | 2700 | | 2600 | | 2500 | | 2400 | | 2300 | |
|---|-------|------|-------|------|-------|------|-------|------|-------|------|
| | KTAS | MPH |
| MP (in.Hg) | 22.1 | 23.6 | 23.6 | 25.1 | 25.1 | 26.6 | 26.6 | 28.1 | 28.1 | 29.6 |
| | 20.7 | 22.1 | 22.1 | 23.6 | 23.6 | 25.1 | 25.1 | 26.6 | 26.6 | 28.1 |
| | 19.2 | 20.7 | 20.7 | 22.1 | 22.1 | 23.6 | 23.6 | 25.1 | 25.1 | 26.6 |
| % BHP (rounded) | 76 | 80 | 79 | 77 | 77 | 74 | 74 | 71 | 71 | 68 |
| | 69 | 74 | 72 | 70 | 70 | 68 | 68 | 65 | 65 | 62 |
| | 62 | 67 | 66 | 64 | 64 | 62 | 62 | 60 | 60 | 58 |
| TAS | 123 | 142 | 145 | 125 | 144 | 124 | 142 | 122 | 140 | 118 |
| | 118 | 136 | 122 | 140 | 120 | 139 | 119 | 137 | 117 | 135 |
| | 112 | 129 | 117 | 135 | 115 | 132 | 113 | 130 | 111 | 128 |
| C (U.S. Gal/hr) | 11.8 | 12.1 | 11.4 | 10.9 | 10.9 | 10.4 | 10.4 | 9.9 | 9.6 | 9.4 |
| | 10.7 | 11 | 10.3 | 9.9 | 9.9 | 9.6 | 9.6 | 9.1 | 8.9 | 8.7 |
| | 9.7 | 9.9 | 9.7 | 9 | 9 | 8.7 | 8.7 | 8.3 | 8.3 | 8.1 |
| Distance to be cleared without reserves | h.min | SM |
| | 4.32 | 640 | 4.27 | 646 | 4.43 | 677 | 4.57 | 702 | 5.09 | 724 |
| | 5.02 | 684 | 4.55 | 690 | 5.13 | 721 | 5.27 | 746 | 5.40 | 764 |
| Distance to be cleared with reserves | h.min | SM |
| | 5.34 | 715 | 5.25 | 730 | 5.32 | 733 | 6.00 | 783 | 6.12 | 792 |
| | 5.57 | 749 | 6.19 | 777 | 6.30 | 786 | | | | |

Aircraft Settings Panel

| Aircraft Information | |
|--|-------------------------|
| NEW ACFT MODULE | |
| Aircraft module | |
| TB10.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | TB-10 (v1) |
| Engines | 1 |
| Rated power | 180 HP |
| Propeller | Constant speed |
| Service ceiling | 13000 ft |
| Gear | Fixed |
| Gross weight | 2535 lbs |
| Empty weight | 1543 lbs |
| Usable fuel | 55.4 US gal = 332.2 lbs |
| Speed | |
| Never exceed speed | 165 kts |
| Best single engine rate of climb | --- kts |
| Minimum single engine control speed | --- kts |
| Maximum structural cruising speed | 128 kts |
| Zero flaps stalling speed | 60 kts |
| Flaps extended stalling speed | 53 kts |
| Maximum speed for flaps extended | 95 kts |
| Maximum speed for gear extended | --- kts |
| Maximum speed for gear operation | --- kts |

Configuration Page

BONANZA A36




Cockpit Functions

The standard configuration for the Bonanza A36 is the HSI and RMI. The Configuration page allows you to change the avionics configuration: HSI with slaved ADF; HSI with non-slaved ADF; Directional Gyro (DG) with slaved ADF. When in the ADF (slaved or non-slaved) mode, click on the ADF instrument face to change it to a VOR #2.



Possible changes to the avionics configuration and type of altimeters can be chosen on the Bonanza's Configuration Page

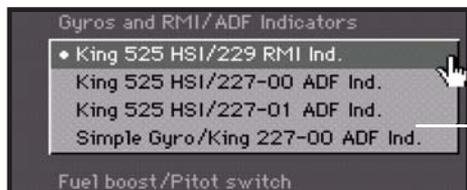



DG with ADF



DG with CDI #2


NOTE: The HSI / RMI mode comes with the KFC 150 Flight Director & Autopilot. When in the DG mode, the Autopilot is changed to the KAP150 mode.



Radar Altimeter, click on button to test or click and drag knob to set the Decision Height (DH) bug. The DH light on the radar altimeter and attitude indicator will light when designated height above ground is reached.

 A vertical instrument panel with three main sections.

- Top section:** A digital display showing '0000' in red. Below it are three buttons: a left arrow, a double arrow, and a right arrow. A label 'Push to Start and Stop timer' points to the left arrow button. A label 'Push to change from time to timer mode' points to the double arrow button. Below these is a digital display showing '14°C' in red. A label 'Click and drag switch to change OAT from Fahr to Cent' points to a small vertical switch on the right side of this display. A label 'Push to reset timer' points to the right arrow button.
- Middle section:** A circular analog clock with a white face and black markings, labeled 'CLOCK'. A label 'Clock' points to the top of the clock face.
- Bottom section:** A circular analog gauge with a white face and black markings, labeled 'INSTRUMENT AIR'. The needle points to approximately 4.5. A label 'Vacuum Pressure Gauge' points to the gauge. The 'Beechcraft' logo is at the bottom.

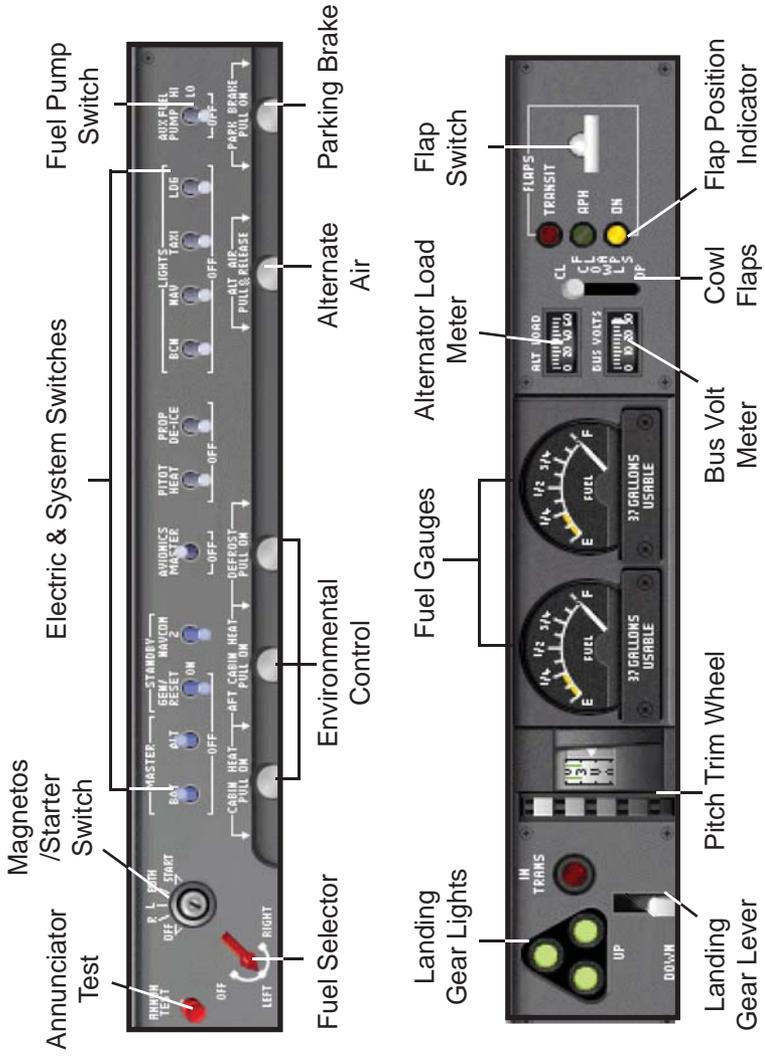

Bonanza cockpit switches and controls



Aircraft Checklist**Before Starting:**

| | |
|---|----------|
| Parking Brake | SET |
| Avionics | OFF |
| Landing Gear Handle | DOWN |
| Cowl Flaps | OPEN |
| Fuel Selectors | CHECK ON |
| Circuit Breakers, Switches, Controls | CHECK |
| Battery / Alternator Switches | ON |
| Fuel Quantity Indicators | CHECK |
| Landing Gear Position Lights | CHECK |

Starting Engine:

| | |
|-----------------------------|-------------------------------|
| Mixture | FULL RICH |
| Propeller | HIGH RPM |
| Throttle | FULL OPEN |
| Fuel Boost Pump | HI, then OFF |
| Throttle | CLOSE, then open ½ inch |
| Magneto/Start Switch | START position and release |
| Throttle | 900-1000 RPM |
| Oil Pressure | 10 PSI within 30 seconds |
| Warm-up | 900-1000 RPM |
| Alternator Switch | ON |
| Loadmeters and Voltmeter | CHECK for battery charge |
| Voltmeter | CHECK for 28 volts |
| Red START Annunciator Light | CHECK |
| Start other engine | Same procedure |

After Starting and Taxi:

| | |
|--------------------|-------------------|
| Avionics Equipment | ON as required |
| Brakes | RELEASE and CHECK |

Before Takeoff:

| | |
|-----------------------------|-----------------------------|
| Parking Brake | SET |
| Fuel Boost Pumps | OFF |
| Engine / Flight Instruments | CHECK |
| Fuel Indicators | CHECK |
| Mixture | FULL RICH |
| Fuel Selectors | CHECK ON |
| Starter Annunciator Light | CHECK |
| Throttles | 2200 RPM |
| Propellers | EXERCISE |
| Throttles | 1700 RPM |
| Magnetos | CHECK |
| Throttles | 1500 RPM |
| Propellers | FEATHERING CHECK |
| Throttles | IDLE |
| Throttles | 900-1000 RPM |
| Trim | As Required for Take-off |
| Flaps | CHECK |
| Parking Brake | OFF |

Takeoff:

| | |
|-----------------|--|
| Take-off Power | FULL THROTTLE, 2700 RPM |
| Oil Temperature | CHECK at 24°C Minimum |
| Airspeed | Accelerate to Take-off Speed |
| Landing Gear | RETRACT when rate-of-climb positive |

Airspeed

Establish Desired
Climb Speed**Cruise Climb:**

Mixture

FULL RICH

Cowl Flaps

As Required

Power

FULL THROTTLE

Propellers

2500 RPM

Engine Temperatures

Monitor

Fuel Boost Pumps

OFF

Cruise:

Cowl Flaps

CLOSED

Power

SET

Fuel Boost Pumps

OFF

Mixtures

SET using EGT

Descent:

Altimeter

SET

Mixture

FULL RICH

Cowl Flaps

CLOSED

Flaps

As Required

Power

As Required

Before Landing:

Fuel Selector Valves

CHECK ON

Fuel Boost Pumps

OFF

Cowl Flaps

As Required

Mixture Controls

FULL RICH

Flaps

APPROACH

Landing Gear

DOWN

Flaps

FULL DOWN

Airspeed

Normal Approach
Speed

Propellers

HIGH RPM

Balked Landing:

| | |
|--------------|----------------------|
| Propellers | HIGH RPM |
| Power | MAXIMUM ALLOWABLE |
| Airspeed | 95 KTS |
| Flaps | UP |
| Landing Gear | UP |
| Cowl Flaps | As Required |

After Landing:

| | |
|------------------|-------------|
| Lights | As Required |
| Flaps | UP |
| Trim Tabs | RESET |
| Cowl Flaps | OPEN |
| Fuel Boost Pumps | As Required |


Shutdown:

| | |
|--------------------------------|--------------|
| Parking Brake | SET |
| Propellers | HIGH RPM |
| Throttles | 1000 RPM |
| Fuel Boost Pumps | OFF |
| Electrical Switches / Avionics | OFF |
| Mixture Controls | IDLE CUT-OFF |
| Magneto / Start Switches | OFF |
| Battery / Alternator Switches | OFF |

Aircraft Settings Panel

| Aircraft Information | |
|---|--|
| NEW ACFT MODULE | |
| Aircraft module | |
| Bonanza.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | Bonanza A36 (v8) |
| Engines | 1 Rated power 300 HP |
| Propeller | Constant speed Service ceiling 18500 ft |
| Gear | Retractable |
| Gross weight | 3693 lbs Empty weight 2517 lbs |
| Usable fuel | 74.0 US gal = 443.7 lbs |
| Speed | |
| Never exceed speed | 205 kts |
| Best single engine rate of climb | --- kts |
| Minimum single engine control speed | --- kts |
| Maximum structural cruising speed | 167 kts |
| Zero flaps stalling speed | 68 kts |
| Flaps extended stalling speed | 61 kts |
| Maximum speed for flaps extended | 124 kts |
| Maximum speed for gear extended | 154 kts |
| Maximum speed for gear operation | 154 kts |

Configuration Page

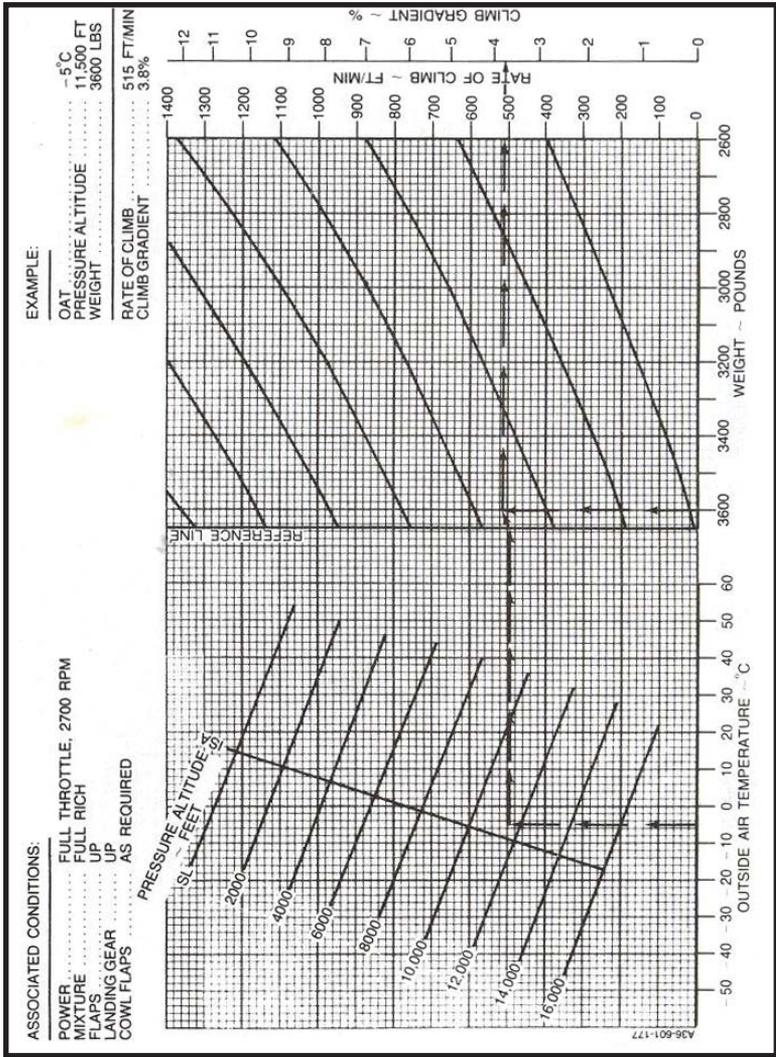


ASSOCIATED CONDITIONS:

- POWER FULL THROTTLE, 2500 RPM
- FUEL DENSITY 6.0 LBS/GAL
- MIXTURE FULL RICH
- COWL FLAPS AS REQUIRED

EXAMPLE:

- OAT AT TAKEOFF 15°C
- OAT AT CRUISE -5°C
- AIRPORT PRESSURE ALTITUDE 5653 FT
- CRUISE PRESSURE ALTITUDE 11,500 FT
- INITIAL CLIMB WEIGHT 3650 LBS
- TIME TO CLIMB (18 - 6.5) 11.5 MIN
- FUEL TO CLIMB (6.0 - 2.5) 3.5 GAL
- DISTANCE TO CLIMB (36 - 12.5) 23.5 NM

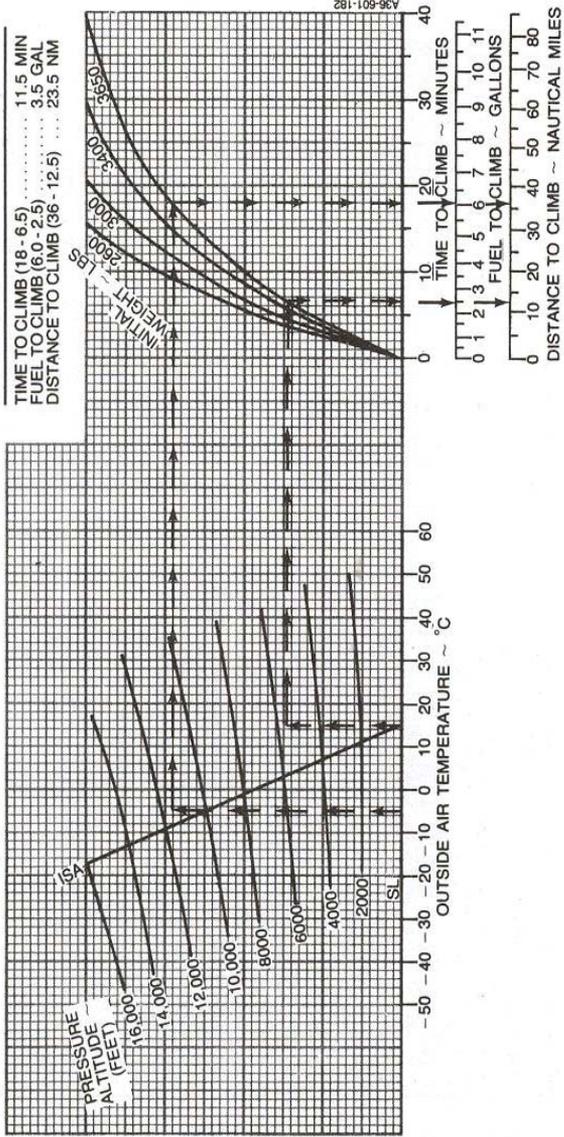

A36-601-182

20°C RICH

25.0 IN. HG (OR FULL THROTTLE) @ 2100 RPM
CRUISE RICH MIXTURE
3400 LBS

OF PEAK EGT

| | PRESS. ALT | IOAT | | MAN. PRESS. | FUEL FLOW | | AIR- SPEED | |
|---------------------------|---------------|------|-----|----------------|--------------|------|---------------|------|
| | FEET | °C | °F | IN. HG | PPH | GPH | KIAS | KTAS |
| ISA -20° C (ISA - 36° F) | SL | -3 | 27 | 25.0 | 79.5 | 13.3 | 155 | 148 |
| | 2000 | -7 | 20 | 25.0 | 82.6 | 13.8 | 156 | 153 |
| | 4000 | -11 | 13 | 25.0 | 85.8 | 14.3 | 157 | 158 |
| | 6000 | -15 | 6 | 24.3 | 85.1 | 14.2 | 154 | 159 |
| | 8000 | -19 | -1 | 22.5 | 79.5 | 13.3 | 147 | 157 |
| | 10,000 | -23 | -9 | 20.8 | 74.9 | 12.5 | 140 | 153 |
| | 12,000 | -27 | -16 | 19.3 | 70.9 | 11.8 | 132 | 149 |
| | 14,000 | -31 | -23 | 17.9 | 68.2 | 11.4 | 123 | 144 |
| | 16,000 | -35 | -31 | 16.5 | 65.6 | 10.9 | 112 | 135 |
| STANDARD DAY (ISA) | SL | 17 | 63 | 25.0 | 77.0 | 12.8 | 150 | 148 |
| | 2000 | 13 | 56 | 25.0 | 79.9 | 13.3 | 151 | 153 |
| | 4000 | 9 | 49 | 25.0 | 82.9 | 13.8 | 152 | 158 |
| | 6000 | 5 | 42 | 24.3 | 82.3 | 13.7 | 149 | 160 |
| | 8000 | 1 | 35 | 22.5 | 77.1 | 12.9 | 142 | 157 |
| | 10,000 | -3 | 27 | 20.8 | 72.9 | 12.2 | 134 | 153 |
| | 12,000 | -7 | 20 | 19.3 | 69.5 | 11.6 | 126 | 148 |
| | 14,000 | -11 | 12 | 17.9 | 67.2 | 11.2 | 116 | 141 |
| | 16,000 | -15 | 5 | 16.5 | 64.9 | 10.8 | 101 | 127 |
| ISA + 20° C (ISA + 36° F) | SL | 37 | 99 | 25.0 | 74.9 | 12.5 | 146 | 148 |
| | 2000 | 33 | 92 | 25.0 | 77.3 | 12.9 | 146 | 153 |
| | 4000 | 29 | 85 | 25.0 | 80.1 | 13.4 | 146 | 158 |
| | 6000 | 25 | 78 | 24.3 | 79.5 | 13.3 | 143 | 160 |
| | 8000 | 21 | 71 | 22.5 | 74.9 | 12.5 | 136 | 156 |
| | 10,000 | 17 | 63 | 20.8 | 71.0 | 11.8 | 128 | 152 |
| | 12,000 | 13 | 56 | 19.3 | 68.1 | 11.4 | 119 | 145 |
| | 14,000 | 9 | 48 | 17.9 | 66.1 | 11.0 | 107 | 135 |
| | 16,000 | — | — | — | — | — | — | — |

MULTI-ENGINE AIRCRAFT

The ELITE Twin simulators are the popular Piper Seneca III, Beech Baron 58, and Beech King Air B200.

The instrumentation of the cockpit represents all standard navigation instruments. In addition, the handling of two engines incorporates in valuable training in professional IFR education.

The performance characteristics, flight envelope and aerodynamic characteristics exactly match those of the actual aircraft.

ELITE Twins provide for the use of a flight director and autopilot. The autopilot is a replica of the King KFC 150 autopilot system. The autopilot's functions and modes represent functions of an IFR equipped aircraft.

ELITE Twins support all instrument procedures including non-precision approaches (NDB, VOR, localizer, and backcourse) and precision approaches (ILS).

All instruments are displayed on the screen and behave exactly like their real counterparts. Instrument scanning and handling may thus be exercised in the same way as in the aircraft. Proper navigation training can only be achieved with a training device which exactly represents the real cockpit.

The purpose of ELITE Twins is navigation, IFR procedures and situational awareness training coupled with the accuracy and performance characteristics of light twin engine propeller aircraft. The separate engine performance characteristics is reflected in the dual instrumentation. Impending engine failure can often be detected by proper instrument scanning techniques.

Engine out emergency procedures can be chosen for instant failure or probability of failure. (**MALFUNCTIONS Page**). When using the probability feature, the pilot does

not know which engine will fail or where the failure will occur. Proper procedures must be exercised as in the actual aircraft. ELITE gives all indications and flight characteristics of an engine loss with exception of "feel." Stereo sound, how ever, was added to provide an audible detection of engine loss to enhance the realism. Needless to say, a stereo sound card and speakers are required. Best sounds are achieved with high quality speakers with a good bass subwoofer.

Operational Limitations

ELITE makes use of 'pop-ups' to compensate for limited screen space when the display of more instruments or features is required.

Load / Voltmeter Panel:

To display the ceiling mounted Load / Voltmeter panel press F1 on the keyboard.



Battery & Generator Switches:



To uncover the Battery (BAT) and Generator (GEN 1 & GEN 2) switches simply click on the master switch cover. The cover will close automatically after several moments.

Firewall Shutoff Valves:



To access the firewall shutoff valves simply click on either red switch cap to expose the firewall fuel cutoff toggle. The switch caps will close automatically after several moments.

External power for engine starting may be simulated by pressing Ctrl on the keyboard and simultaneously clicking the MASTER SWITCH cover. The Battery must be turned on for this function to work.

To cancel the Master Warning and Master Caution lights press the F2 and F3 keys respectively.

The DH button on the Radar Altimeter can be pressed to reset.

To cancel the Landing Gear Warning Horn press the F4 key.

To quick-start the engines when not previously selected, click on either Ignition/Start switch and drag to the other Ignition / Start switch. This will immediately start both engines.

AP-3000 Avionics Panel:



Using the Collins radio with the AP-3000 Avionics Panel

The Collins Pro Line II COMM/NAV radios are unique in that they allow for several different modes of operation. They can store up to six COMM frequencies in memory and up to four NAV frequencies. The ADF radio can also store up to four frequencies in memory.

The COMM, NAV and ADF radios may all be used in normal tune/preset mode, or they may be used in direct tune mode. In tune/preset mode the active frequency is shown in the upper display and the lower display contains the inactive frequency where all frequency changes or revisions are made. To switch between the two frequencies simply push the flip/flop switch on the AP-3000 or use the mouse to toggle the XFR switch on the radio head on-screen. The radios may also be used in direct tuning mode simply by pressing and holding with the mouse the ACT button located in the lower right corner of each radio head for two seconds. Activating the direct tuning mode will cause the lower display to change to a series of dashes and the upper display now becomes the frequency in use and where all changes are made.

To store COMM, NAV and ADF frequencies use the mouse to move the MEM toggle down repeatedly until the desired channel is displayed. Once the desired channel number is indicated simply push the mouse the STO button on-screen twice in five seconds to store a COMM frequency in memory. NAV frequencies may be stored in a similar fashion or by pushing the appropriate navigation radio RAD button twice within five seconds on the AP-3000 panel. Storing an ADF frequency may be accomplished by using the mouse as before or by pushing the ADF SET/RST button twice within five seconds.

The # 1 NAV radio allows for DME hold by selecting the desired VOR frequency and then selecting the HLD function on that radio head. When the DME toggle located below the HSI is placed in the NAV 1 position the DME readout on the HSI will indicate this distance value even though the NAV 1 active frequency may change. Be sure that the HSI is in DIST mode to read distance.



The transponder may be programmed to hold a pre-selected squawk frequency as well. Simply depress the PRE button for two seconds and then dial in the desired squawk code with either the mouse or by using the four control knobs on the AP-3000. When done press the PRE button again. This will save the desired code and may be retrieved at any time simply by pushing the PRE button.

NAV1/ NAV2 Toggle:



The NAV1 NAV2 toggle allows the user to switch the yellow needle of the RMI between VOR and ADF. The

green needle requires the mouse to switch between VOR and ADF.



The AUX2 toggle switch moves the DME toggle switch located below the HSI between NAV1 and NAV2.

Cowl Flap Switches:

The left Cowl Flap switch controls Inverter operation. The right Cowl Flap switch controls the Autofeather feature.



The MDI knob controls the Radar Altimeter. The ALT knob adjusts the altimeter setting. The NAV 2 knob is non-functional on the King Air module. The CRS knob with corresponding toggle switch in CRS mode moves the course selector on the HSI. CRS knob in OBS mode moves the three-position selector on the lower left corner of the HSI. The DIST, TTC or SPD readout is indicated in the top left portion of the HSI and will provide information from the navigation source selected by the toggle below the HSI. The HDG knob moves the heading bug on the HSI.

Collins Flight Control System:



To use the Collins Flight Control System please note which functions are operated by which buttons on the AP-3000 avionics panel:

FD button engages the 1/2 BK, one-half bank angle function.

ALT button engages the altitude hold function.

HDG button engages the heading hold function.

NAV button engages the navigation track function.

APR button engages the APPR, localizer track function.

BC button engages the AP CPLD, autopilot coupled function.

AP ENG button engages the autopilot and yaw damper.

ENG button engages the VS function.

ARM button engages the ALT SEL function.

To operate in flight director mode, simply press ALT and HDG, NAV or APR. The command bars will be present only if HDG, NAV or APR is selected. No flight director function is available with ALT selected only. Deviations in heading and/or altitude from original setting selected will cause the command bars to tilt and/or move vertically to indicate prescribed corrective flight action. If the Control Wheel

Steering (CWS) button is depressed during flight director mode the ALT function if selected will trip off and will need to be reset when desired. If a climb or descent is necessary, use CWS to initiate the necessary pitch attitude and dial the desired level-off altitude into the SET ALTITUDE box. Once the altitude change has commenced select ALT SEL and the command bars will indicate when altitude level-off is required. Additionally, once the desired pitch attitude has been set and VS has been selected the command bars will indicate the amount of pitch change required to maintain the chosen vertical speed. If the VS button is not used then the command bars will simply direct the pilot to maintain the selected pitch attitude. Electric trim may be utilized during this mode of flight control.



To operate in basic autopilot mode, simply press the AP ENG button on the avionics panel. This activates the Yaw Damper (YD) and Autopilot (AP) which by itself is the most basic functional mode. In this mode you may depress and hold the Control Wheel Steering (CWS) button on the left side of the yoke to make pitch and heading changes. When the CWS button is released the aircraft will hold the current heading and maintain the current pitch attitude. This is NOT necessarily an altitude hold feature. The command bars will not be present during this type of operation. During this operation the control knob may also be used to make pitch and heading changes, however, the control knob will only select a rate of vertical speed and/or bank angle. The resultant amount of vertical speed and bank angle is dependent upon the degree of knob deflection. The rocker switch on the autopilot portion of the AP-3000 may be used in place of the control knob for vertical speed

selection There is no alternative switch available for the bank angle function. The mouse must be used for all on-screen control knob use.

To operate in full autopilot mode, press AP ENG and BC. BC couples the autopilot and allows precise vertical and horizontal flight management. The command bars will only be present HDG, NAV or APR is selected. To maintain altitude, simply fly the aircraft to the desired altitude and press ALT, or, use the CWS button to pitch the aircraft toward the desired altitude, let go of the CWS button, set the altitude desired into the SET ALTITUDE box and press VS, ALT SEL and BC. Don't forget that using the CWS button will disengage the autopilot coupling. Another method is to use the vertical speed rocker switch on the AP-3000 to initiate a climb or descent. This rocker switch does not disengage the coupling, but the VS and ALT SEL buttons will need to be pressed to cause the aircraft to level-off at the SET ALTITUDE value. Using the VS function in a climb or descent will cause the aircraft to pitch as necessary to maintain the desired vertical speed should throttle and/or configuration changes occur. If the VS function is not used then the aircraft will maintain the original pitch attitude causing the vertical speed and airspeed indications to change as necessary. To maintain a heading, simply move the heading bug to the desired heading value and press HDG. The aircraft will turn the shortest distance to the bug position. To change heading simply move the heading bug to a new value. To track a VOR radial, select the desired course TO or FROM the VOR with the course selector. Use the heading function to set up the desired intercept angle and then press NAV. The aircraft will intercept and track the course if the intercept angle is less than, or equal to, 90° in NAV mode for both VOR radials and LOC courses. To track a LOC using APR mode, use the same procedure as that for a VOR radial intercept. Maximum angle of intercept for a LOC in APR mode is 89° . The glideslope

capture only works when using APR mode, however, NAV mode will track a LOC course.

GPS-NAV Control:



GPS navigation using the autopilot may be accomplished by first selecting the desired navigational fix on the GPS, then pressing the NAV GPS button on the GPS-NAV CONTROL box located above the Attitude Indicator and then pressing NAV on the autopilot.

The 1/2 BK function should be used when desired to prevent excessive banking during tracking operations, especially when close to a VOR as in station passage. The autopilot automatically utilizes this function once established on a LOC course in both NAV and APR modes, although the 1/2 BK button will not be illuminated.

Aircraft Checklist**Before Starting the Engine:**

| | |
|--------------------|---------------------------|
| Brakes | SET |
| Switches | OFF |
| DOWN | |
| Power Levers | IDLE |
| Propeller Controls | FULL FORWARD |
| Condition Levers | IDLE CUTOFF |
| Battery Switch | ON |
| Fuel Quantity | CHECK |
| DC Volt/Loadmeters | PRESS to Check Voltage |

Starting Engine (With Battery):

| | |
|-------------------------------------|---|
| Right Ignition & Engine Start | ON (R FUEL PRESS annunciator-OFF) |
| Right Condition Lever | LOW IDLE (after N1 indicates 12% minimum) |
| ITT and N1 | MONITOR |
| Right Oil Pressure | CHECK |
| Right Condition Lever | HIGH IDLE |
| Right Ignition & Engine Start | OFF (at 50% N1 or above) |
| Right Generator | RESET, then ON. CHARGE BATTERY until load meter reads approximately .50, then OFF |
| Left Ignition & Engine Start | ON (L FUEL PRESS annunciator-OFF) |
| As left N1 RPM accelerates thru 12% | |
| Left Condition Lever | LOW IDLE |
| Right Generator | ON |

| | |
|------------------------------|-----------------------------|
| ITT and N1 | Monitor (1000°C maximum) |
| Left Oil Pressure | CHECK |
| Left Ignition & Engine Start | OFF (at 50% N1 or above) |
| Left Generator | RESET, ON |
| Right Condition Lever | REDUCE to Low Idle |

After Starting, and Taxiing:

| | |
|----------------------------|-------------|
| Inverter | ON |
| DC Voltmeters & Loadmeters | ON |
| AC Voltage & Frequency | CHECK |
| Avionics Master | ON |
| Lights | AS REQUIRED |
| Instruments | CHECK |
| Brakes | CHECK |

Before Takeoff (Runup):

| | |
|--------------------------------|---------------------|
| Avionics | CHECK |
| Autopilot | CHECK |
| Electric Elevator Trim Control | CHECK |
| Trim Tabs | SET |
| Engine Control Friction Locks | SET |
| Flaps | CHECK AND SET |
| Instrument Vacuum | CHECK (at 1800 RPM) |
| Fuel Quantity | CHECK |
| Flight & Engine Instruments | CHECK |

Before Takeoff (Final Items):

| | |
|--------------------|--------------|
| Annunciator Lights | EXTINGUISHED |
| Transponder | ON |
| Auto Ignition | ARM |

On Takeoff Roll:

| | |
|-----------------------|--------------|
| Ignition Annunciators | EXTINGUISHED |
| Autofeather | ILLUMINATED |

Takeoff:

Refer to PERFORMANCE section for minimum takeoff power, speed, distance and climb data.

Climb:

| | |
|-------------------------|----------|
| Landing Gear | UP |
| Flaps | UP |
| Yaw Damp | ON |
| Climb Power | SET |
| Propeller | 1900 RPM |
| Propeller Synchrophaser | ON |
| Autofeather | MONITOR |

Cruise:

| | |
|----------------------|---------------------------------|
| Cruise | SET (per CRUISE POWER TABLE) |
| Engine Instruments | MONITOR |
| Auxiliary Fuel Gauge | MONITOR |

Descent:

| | |
|-----------|-------------|
| Altimeter | SET |
| Power | AS REQUIRED |

Before Landing:

| | |
|--------------------|-------------|
| Autofeather Switch | ARM |
| Flaps | APPROACH |
| Landing Gear | DOWN |
| Lights | AS REQUIRED |

Landing:*WHEN LANDING IS ASSURED*

| | |
|----------|-------------|
| Flaps | DOWN (100%) |
| Yaw Damp | OFF |

AFTER TOUCHDOWN

| | |
|------------------|--------------------------|
| Propeller Levers | FULL FORWARD |
| Power Levers | BETA RANGE or REVERSE |

Maximum Reverse Thrust Landing:*WHEN LANDING ASSURED*

| | |
|------------------|---------------|
| Flaps | DOWN (100%) |
| Yaw Damp | OFF |
| Condition Levers | HIGH IDLE |
| Propeller Levers | FULL FOR WARD |

AFTER TOUCHDOWN

| | |
|------------------|------------------|
| Power Levers | LIFT and REVERSE |
| Condition Levers | LOW IDLE |

Balked Landing:

| | |
|--------------|------------------------|
| Power | MAXIMUM AVAIL ABLE |
| Airspeed | ESTABLISH 100 KNOTS |
| Flaps | UP |
| Landing Gear | UP |

After Landing:

| | |
|-------------------------|----------------|
| Landing and Taxi Lights | AS REQUIRED |
| Engine Auto Ignition | OFF |
| Electrical Load | OBSERVE LIMITS |
| Trim | SET |
| Flaps | UP |



Shutdown and Securing:

| | |
|------------------------------|--|
| Parking Brake | SET |
| Avionics Master | OFF |
| Inverter | OFF |
| Autofeather Switch | OFF |
| Light Switches | OFF |
| Battery | CHARGED |
| ITT | STABILIZED AT MIN. TEMP. for one MIN. |
| Condition Levers | FUEL CUTOFF |
| Propellers | FEATHERED |
| Standby Boost | |
| Pumps & Crossfeed | OFF |
| DC Volt/ Loadmeters | CHECK VOLTAGE |
| Battery & generator Switches | OFF (below 15% N1) |

Aircraft Settings Panel

| Aircraft Information | |
|--|---------------------------|
| NEW ACFT MODULE | |
| Aircraft module | |
| KingAir.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | King Air B200 (v10) |
| Engines | 2 |
| Rated power | 850 HP |
| Propeller | Constant speed |
| Service ceiling | 35000 ft |
| Gear | Retractable |
| Gross weight | 12511 lbs |
| Empty weight | 8007 lbs |
| Usable fuel | 544.0 US gal = 3644.2 lbs |
| Speed | |
| Never exceed speed | 259 kts |
| Best single engine rate of climb | 121 kts |
| Minimum single engine control speed | 86 kts |
| Maximum structural cruising speed | 181 kts |
| Zero flaps stalling speed | 99 kts |
| Flaps extended stalling speed | 75 kts |
| Maximum speed for flaps extended | 157 kts |
| Maximum speed for gear extended | 181 kts |
| Maximum speed for gear operation | 163 kts |

Configuration Page

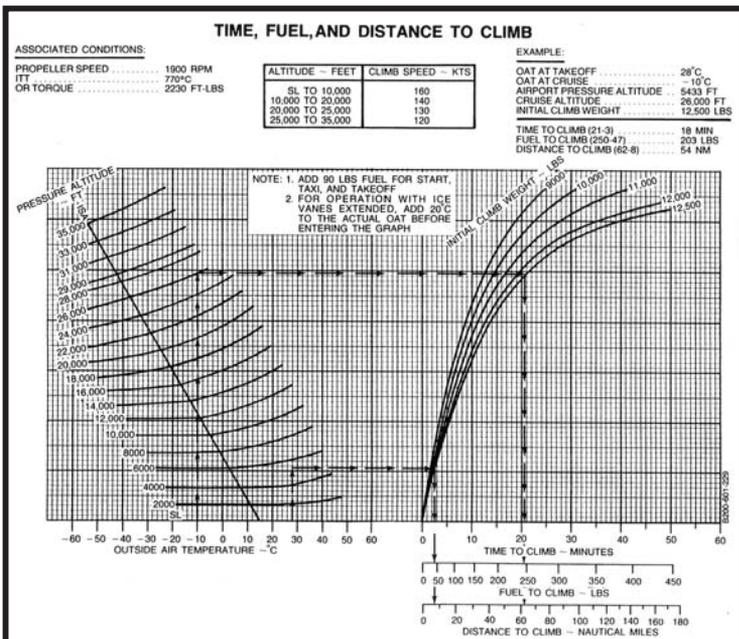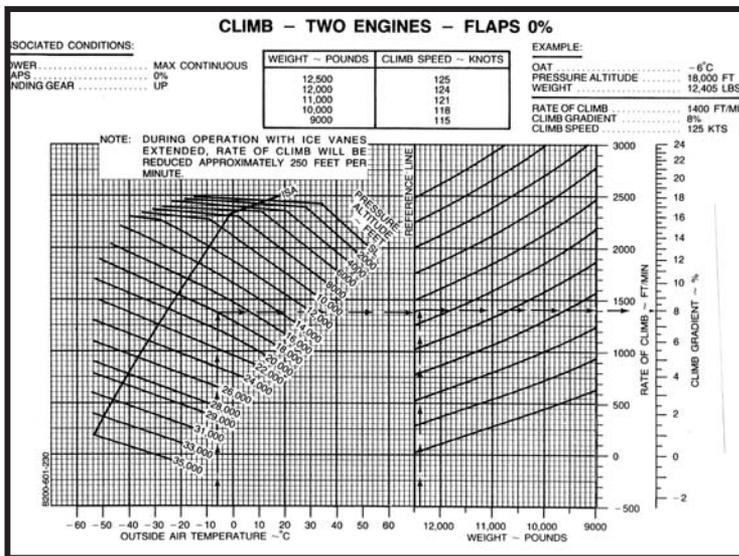

NORMAL CRUISE POWER
1800 RPM
ISA

NOTE: IOAT, TORQUE, AND FUEL FLOW BASED ON 11,000 POUNDS.

| PRESSURE ALTITUDE FEET | IOAT °C | QAT °C | TORQUE PER ENGINE | | FUEL FLOW PER ENGINE | | TOTAL FUEL FLOW | | AIRSPEED - KNOTS | | | | | | | | | |
|---------------------------|---------|--------|-------------------|---------|----------------------|---------|-----------------|------------------|------------------|------------------|-----------------|-----------------|-----------------|-----|-----|-----|-----|-----|
| | | | FT-LBS | PERCENT | LBS-HR | PERCENT | LBS-HR | TAS @ 12,000 LBS | TAS @ 11,000 LBS | TAS @ 10,000 LBS | TAS @ 9,000 LBS | TAS @ 8,000 LBS | TAS @ 7,000 LBS | | | | | |
| SL | 21 | 15 | 2230 | 491 | 962 | 243 | 245 | 244 | 245 | 245 | 246 | 246 | 246 | 246 | 246 | 246 | 246 | 246 |
| 2000 | 17 | 11 | 2230 | 478 | 956 | 241 | 249 | 242 | 250 | 243 | 251 | | | | | | | |
| 4000 | 13 | 7 | 2230 | 463 | 926 | 239 | 254 | 240 | 255 | 240 | 256 | | | | | | | |
| 6000 | 9 | 3 | 2230 | 450 | 900 | 236 | 259 | 237 | 260 | 238 | 261 | | | | | | | |
| 8000 | 6 | -1 | 2230 | 439 | 878 | 234 | 264 | 235 | 265 | 236 | 266 | | | | | | | |
| 10,000 | 2 | -5 | 2230 | 429 | 868 | 232 | 269 | 233 | 270 | 234 | 271 | | | | | | | |
| 12,000 | -2 | -9 | 2230 | 418 | 836 | 229 | 274 | 230 | 276 | 231 | 277 | | | | | | | |
| 14,000 | -5 | -13 | 2230 | 411 | 822 | 227 | 279 | 228 | 281 | 229 | 282 | | | | | | | |
| 16,000 | -9 | -17 | 2177 | 397 | 794 | 222 | 283 | 224 | 285 | 225 | 286 | | | | | | | |
| 18,000 | -13 | -21 | 2048 | 373 | 746 | 215 | 282 | 216 | 284 | 217 | 286 | | | | | | | |
| 20,000 | -17 | -25 | 1959 | 355 | 710 | 209 | 283 | 210 | 285 | 212 | 287 | | | | | | | |
| 22,000 | -21 | -29 | 1871 | 338 | 676 | 202 | 284 | 204 | 286 | 206 | 288 | | | | | | | |
| 24,000 | -25 | -33 | 1758 | 316 | 632 | 195 | 283 | 197 | 285 | 199 | 288 | | | | | | | |
| 26,000 | -29 | -37 | 1635 | 293 | 586 | 187 | 280 | 189 | 283 | 191 | 286 | | | | | | | |
| 28,000 | -33 | -41 | 1508 | 270 | 540 | 177 | 276 | 180 | 280 | 182 | 284 | | | | | | | |
| 29,000 | -35 | -42 | 1447 | 259 | 518 | 172 | 273 | 175 | 278 | 178 | 282 | | | | | | | |
| 31,000 | -40 | -46 | 1329 | 239 | 478 | 162 | 267 | 166 | 273 | 169 | 278 | | | | | | | |
| 33,000 | -44 | -50 | 1218 | 220 | 440 | 151 | 258 | 156 | 267 | 160 | 274 | | | | | | | |
| 35,000 | -49 | -54 | 1100 | 201 | 402 | 135 | 241 | 145 | 257 | 151 | 267 | | | | | | | |

NORMAL CRUISE POWER
1700 RPM
ISA

NOTE: IOAT, TORQUE, AND FUEL FLOW BASED ON 11,000 POUNDS.

| PRESSURE ALTITUDE FEET | IOAT °C | QAT °C | TORQUE PER ENGINE | | FUEL FLOW PER ENGINE | | TOTAL FUEL FLOW | | AIRSPEED - KNOTS | | | | | | | | | |
|---------------------------|---------|--------|-------------------|---------|----------------------|---------|-----------------|------------------|------------------|------------------|-----------------|-----------------|-----------------|--|--|--|--|--|
| | | | FT-LBS | PERCENT | LBS-HR | PERCENT | LBS-HR | TAS @ 12,000 LBS | TAS @ 11,000 LBS | TAS @ 10,000 LBS | TAS @ 9,000 LBS | TAS @ 8,000 LBS | TAS @ 7,000 LBS | | | | | |
| SL | 20 | 15 | 2230 | 473 | 946 | 238 | 239 | 240 | 240 | 241 | | | | | | | | |
| 2000 | 17 | 11 | 2230 | 459 | 918 | 236 | 244 | 237 | 245 | 238 | 246 | | | | | | | |
| 4000 | 13 | 7 | 2230 | 446 | 892 | 234 | 249 | 235 | 250 | 236 | 250 | | | | | | | |
| 6000 | 9 | 3 | 2230 | 433 | 866 | 231 | 253 | 232 | 254 | 233 | 255 | | | | | | | |
| 8000 | 5 | -1 | 2230 | 421 | 842 | 229 | 258 | 230 | 259 | 231 | 260 | | | | | | | |
| 10,000 | 2 | -5 | 2230 | 410 | 820 | 227 | 263 | 228 | 264 | 229 | 265 | | | | | | | |
| 12,000 | -2 | -9 | 2230 | 400 | 800 | 224 | 268 | 225 | 270 | 226 | 271 | | | | | | | |
| 14,000 | -6 | -13 | 2230 | 383 | 766 | 222 | 274 | 223 | 275 | 224 | 276 | | | | | | | |
| 16,000 | -9 | -17 | 2230 | 368 | 776 | 219 | 279 | 220 | 280 | 221 | 282 | | | | | | | |
| 18,000 | -13 | -21 | 2152 | 373 | 746 | 213 | 280 | 215 | 282 | 216 | 284 | | | | | | | |
| 20,000 | -17 | -25 | 2057 | 355 | 710 | 207 | 281 | 208 | 283 | 210 | 285 | | | | | | | |
| 22,000 | -21 | -29 | 1963 | 337 | 674 | 200 | 281 | 202 | 284 | 204 | 286 | | | | | | | |
| 24,000 | -25 | -33 | 1842 | 316 | 632 | 192 | 280 | 195 | 283 | 197 | 285 | | | | | | | |
| 26,000 | -29 | -37 | 1712 | 293 | 586 | 184 | 277 | 186 | 280 | 189 | 283 | | | | | | | |
| 28,000 | -33 | -41 | 1579 | 270 | 540 | 175 | 272 | 178 | 277 | 180 | 281 | | | | | | | |
| 29,000 | -35 | -42 | 1514 | 259 | 518 | 170 | 269 | 173 | 274 | 176 | 279 | | | | | | | |
| 31,000 | -40 | -46 | 1391 | 239 | 478 | 160 | 263 | 164 | 270 | 167 | 275 | | | | | | | |
| 33,000 | -44 | -50 | 1274 | 220 | 440 | 149 | 254 | 154 | 263 | 158 | 270 | | | | | | | |
| 35,000 | -49 | -54 | 1153 | 201 | 402 | 133 | 237 | 143 | 254 | 150 | 263 | | | | | | | |


PIPER SENECA III




Cockpit Functions



Click and drag to open/close cowl flaps

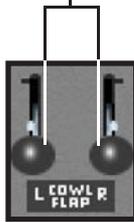

Click mouse to lower mag guards and access mag switches

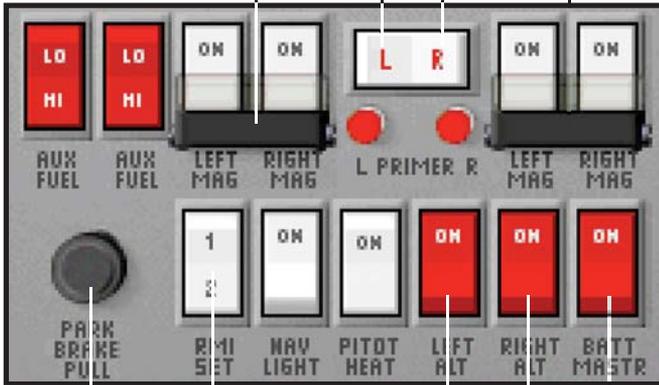

Push/Pull Park Brake

Nav 1/Nav 2

Electrical System Control






Click on gauge or press F2 to toggle between suction and amp meter

Emergency gear release switch (restart program to reset)



Click on instrument or press F1 to toggle instrument from EGT to Fuel Flow



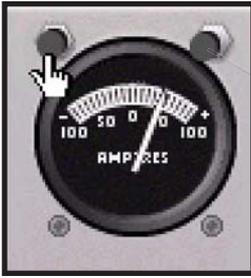


The amp meter shows charge or discharge information. Check generator load by pressing left or right engine AMP button.

The chronometer in the Seneca III gives 3 specific displays: UTC time, OAT (Fahrenheit and Celsius) and timer. The chronometer digital display shows Time and OAT information as provided on the Control page (time) and Meteo page (OAT).



CONTROL Page

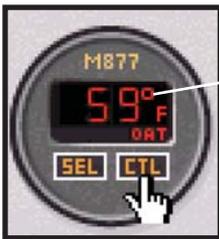

METEO Page



SEL button toggles between UTC, OAT and timer modes. When in the OAT mode, Fahr to Cen can be changed by pressing the **CTL** button. In the timer mode, pressing **CTL** will start or stop timer. Holding **CTL** for approximately 2 seconds will reset the timer to zero.

Aircraft Checklist**Before Starting:**

| | |
|------------------------|--------------|
| Battery Master Switch | ON |
| Alternators | ON |
| Parking Brake | SET |
| Gear Selector | GEAR DOWN |
| Throttles | IDLE |
| Propeller Controls | FULL FORWARD |
| Mixture | IDLE CUT-OFF |
| Alternate Air Controls | OFF |
| Cowl Flaps | OPEN |
| Fuel Selectors | ON |
| Radio Master Switch | OFF |
| Electrical Switches | OFF |

Starting Engine:

| | |
|-----------------------|---------------------------|
| Battery Master Switch | ON |
| Gear Lights | Green |
| Throttles | HALF OPEN |
| Propeller Controls | FULL FORWARD |
| Mixtures | FULL RICH |
| Magneto Switches | ON |
| Starter | ENGAGE |
| Throttle | 1000 RPM |
| Oil Pressure | CHECK |
| Second Engine | Repeat Procedure |
| Alternator Output | CHECK Both Left and Right |
| Gyro Vacuum | CHECK |

Warm-Up:

| | |
|----------|---------------|
| Throttle | 1000-1200 RPM |
|----------|---------------|

Before Taxiing:

| | |
|-----------------------|-------------|
| Battery Master Switch | ON |
| Gyros | SET |
| Altimeter | SET |
| Radio Master Switch | ON |
| Lights | As Required |
| Parking Brake | Release |

Taxiing:

| | |
|----------------|---------------------|
| Throttles | Apply Slowly |
| Brakes | CHECK |
| Instruments | CHECK |
| Fuel Selectors | ON, CHECK Crossfeed |

Ground Check:

| | |
|--------------------------|---------------------------|
| Parking Brake | SET |
| Mixtures | FULL RICH |
| Propeller Controls | FULL FORWARD |
| Throttles | 1000 RPM |
| Engine Instruments | CHECK |
| Propeller Controls | FEATHER-CHECK |
| Throttles | 2300 RPM |
| Propeller Controls | EXERCISE |
| Throttles | 2000 RPM |
| Magnetos | CHECK |
| Alternator Output | CHECK Both Left and Right |
| Annunciator Panel Lights | OUT |
| Gyro Vacuum Gauge | 4.8-5.1 IN Hg |
| Throttles | IDLE-CHECK |
| Throttles | 800-1000 RPM |

Before Takeoff:

| | |
|--------------------|-------|
| Flight Instruments | CHECK |
| Engine Instruments | CHECK |

| | |
|--------------------------|---------------|
| Fuel Quantity | CHECK |
| Auxiliary Fuel Pumps | OFF |
| Mixtures | FULL FORWARD |
| Fuel Selectors | ON |
| Cowl Flaps | OPEN |
| Alternate Air | OFF |
| Flaps | CHECK |
| Engine Runup | Complete |
| Annunciator Panel Lights | Press-to-Test |
| Parking Brake | RELEASE |

Takeoff:

| | |
|--------------|--------------------------|
| Flaps | UP |
| Brakes | HOLD |
| Power | 2800 RPM, 40 IN Hg MP |
| Mixture | FULL RICH |
| Brakes | RELEASE |
| Rotate Speed | KIAS |
| Gear | UP |
| Climb Speed | 92 KIAS |

Climb:

| | |
|-------------|--------------------------|
| Mixture | FULL RICH |
| Power | 2600 RPM, 33 IN Hg MP |
| Climb Speed | 120 KIAS |
| Cowl Flaps | As Required |

Cruising:

| | |
|------------------|---------------|
| Power | SET per CHART |
| Mixture Controls | ADJUST |
| Cowl Flaps | As Required |

Descent:

| | |
|------------------|---------------------|
| Mixture Controls | ADJUST with Descent |
| Throttles | As Required |
| Cowl Flaps | CLOSED |

Approach and Landing:

| | |
|----------------------------------|--------------|
| Auxiliary Fuel Pumps | OFF |
| Fuel Selectors | ON |
| Cowl Flaps | As Required |
| Mixture Controls | FULL RICH |
| Propeller Controls | FULL FORWARD |
| Landing Gear (Below 130 KIAS) | DOWN |
| Landing Gear Lights | 3 GREEN |

Go Around:

| | |
|--------------------|----------------|
| Throttles | FULL POWER |
| Propeller Controls | FULL FORWARD |
| Mixtures | FULL RICH |
| Climb Speed | 85 KIAS |
| Flaps | RETRACT SLOWLY |
| Gear | UP |
| Cowl Flaps | As Required |
| Trim | As Required |

Normal Landing:

| | |
|------------------------|-------------|
| Flaps (Below 115 KIAS) | FULL DOWN |
| Airspeed | 90 KIAS |
| Trim | As Required |
| Throttles | As Required |
| Touchdown | Main Wheels |

After Landing:

Flaps

RETRACT

Cowl Flaps

FULL OPEN

Lights

As Required

Stopping Engine:

Radio Master Switch

OFF

Electrical Equipment

OFF

Throttles

IDLE

Mixtures

IDLE CUTOFF

Magneto Switches

OFF

Alternator Switches

OFF



Battery Master


OFF

Aircraft Settings Panel

| Aircraft Information | |
|--|--------------------------|
| NEW ACFT MODULE | |
| Aircraft module | |
| Seneca.pho | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | |
| Various | |
| Aircraft | Seneca III (v4) |
| Engines | 2 |
| Propeller | Constant speed |
| Gear | Retractable |
| Gross weight | 4407 lbs |
| Usable fuel | 128.0 US gal = 767.6 lbs |
| Rated power | 220 HP |
| Service ceiling | 25000 ft |
| Empty weight | 3215 lbs |
| Speed | |
| Never exceed speed | 205 kts |
| Best single engine rate of climb | 92 kts |
| Minimum single engine control speed | 66 kts |
| Maximum structural cruising speed | 166 kts |
| Zero flaps stalling speed | 67 kts |
| Flaps extended stalling speed | 64 kts |
| Maximum speed for flaps extended | 115 kts |
| Maximum speed for gear extended | 130 kts |
| Maximum speed for gear operation | 108 kts |

Configuration Page

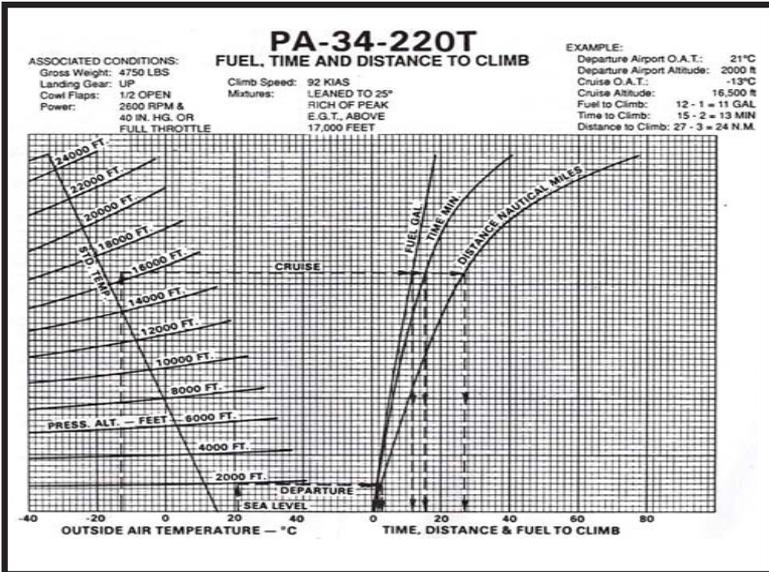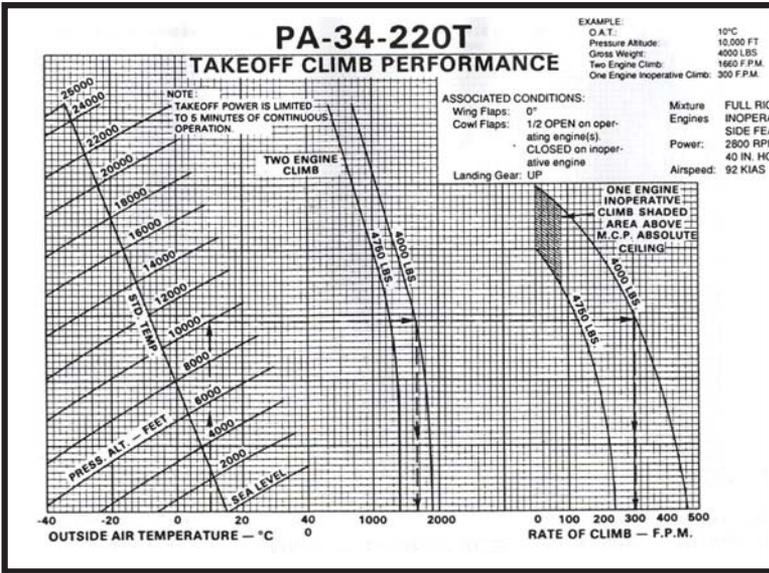

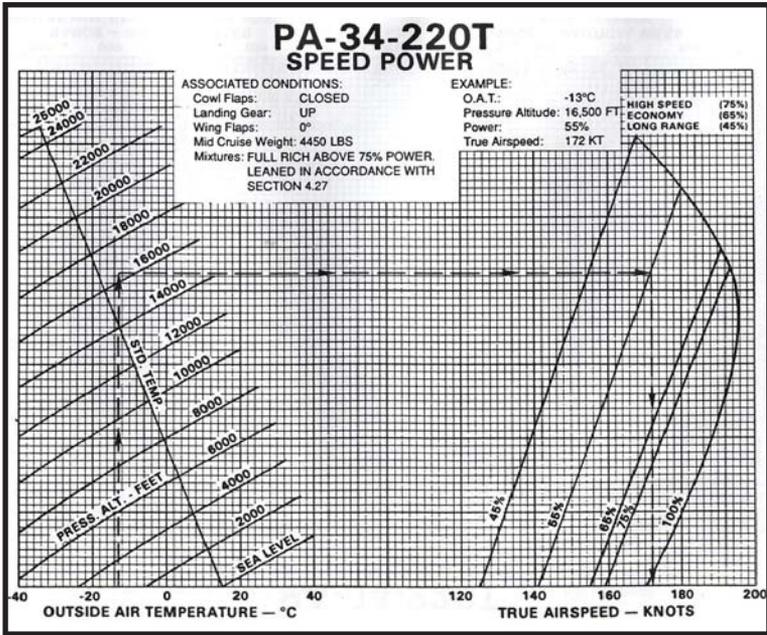

| Press. ALL | Std. All. Temp. | 45% Power Approx. Fuel 18 G.P.H. RPM AND MAN. PRESS. | | | | | 55% Power Approx. Fuel 18.7 G.P.H. RPM AND MAN. PRESS. | | | | | 65% Power Approx. Fuel 23.3 G.P.H. RPM AND MAN. PRESS. | | | | | 75% Power Approx. Fuel 29.0 G.P.H. RPM AND MAN. PRESS. | |
|---------------|-----------------------|--|------|------|------|------|--|------|------|------|------|--|------|------|------|------|--|------|
| | | 2100 | 2200 | 2300 | 2400 | 2500 | 2600 | 2100 | 2200 | 2300 | 2400 | 2500 | 2600 | 2400 | 2500 | 2600 | 2500 | 2600 |
| Feet | °C | 2100 | 2200 | 2300 | 2400 | 2500 | 2600 | 2100 | 2200 | 2300 | 2400 | 2500 | 2600 | 2400 | 2500 | 2600 | 2500 | 2600 |
| 8000 | -1 | 24.8 | 24.0 | 23.0 | 22.4 | 21.6 | 21.2 | 20.4 | 28.4 | 27.7 | 26.8 | 25.7 | 25.0 | 32.3 | 31.0 | 30.1 | 33.1 | 32.0 |
| 10000 | -5 | 24.4 | 23.7 | 22.8 | 22.0 | 21.4 | 21.0 | 28.3 | 27.5 | 26.5 | 25.5 | 24.7 | 32.0 | 30.9 | 30.0 | 33.0 | 31.9 | |
| 13000 | -9 | 24.0 | 23.3 | 22.5 | 21.7 | 21.2 | 20.9 | 28.3 | 27.2 | 26.3 | 25.3 | 24.6 | 31.8 | 30.7 | 29.8 | 32.5 | 31.8 | |
| 14000 | -13 | 23.0 | 22.3 | 21.4 | 21.1 | 20.8 | | 27.1 | 26.1 | 25.2 | 24.4 | | 30.5 | 29.7 | | 31.7 | | |
| 16000 | -17 | | 22.0 | | 21.3 | 21.0 | 20.6 | | 25.9 | 25.0 | 24.3 | | 30.4 | 29.5 | | 31.6 | | |
| 18000 | -21 | | | | 21.2 | 20.9 | 20.5 | | 25.0 | 24.2 | | | 29.4 | | | | | |
| 20000 | -25 | | | | 21.2 | 20.8 | 20.4 | | | 24.1 | | | 29.3 | | | | | |
| 22000 | -28 | | | | | | | | | | | | | | | | | |
| 24000 | -33 | | | | | | 20.4 | | | | | | | | | | | |
| 25000 | -34 | | | | | | 20.4 | | | | | | | | | | | |

To maintain constant power, add approximately 1% for each 6°C above standard. Subtract approximately 1% for each 6°C below standard. Do not exceed 34" MAP in cruise.

1650°F MAX E.G.T.
(See P.O.H. Section 4)

1525°F MAX E.G.T.
(See P.O.H. Section 4)

To maintain constant power, add approximately 1% for each 6°C above standard. Subtract approximately 1% for each 6°C below standard. Do not exceed 34 " MAP in cruise.

| Press. Atl. Feet | Std. Alt. Temp. °C | 45% Power RPM and MAN. PRESS | | | | | 55% Power RPM and MAN. PRESS | | | | | | |
|------------------|--------------------|------------------------------|------|------|------|------|------------------------------|------|------|------|------|------|------|
| | | 2100 | 2200 | 2300 | 2400 | 2500 | 2600 | 2100 | 2200 | 2300 | 2400 | 2500 | 2600 |
| S.L. | 15 | 27.1 | 26.4 | 25.5 | 24.3 | 23.3 | 22.5 | 31.2 | 30.3 | 29.4 | 28.2 | 27.2 | 26.3 |
| 2000 | 11 | 26.4 | 25.8 | 24.6 | 23.7 | 22.8 | 22.1 | 30.5 | 29.7 | 28.8 | 27.8 | 26.8 | 26.0 |
| 4000 | 7 | 25.8 | 24.5 | 23.5 | 22.8 | 21.9 | 21.5 | 30.0 | 29.2 | 28.3 | 27.4 | 26.4 | 25.6 |
| 6000 | 3 | 25.3 | 24.5 | 23.5 | 22.8 | 21.9 | 21.5 | 29.7 | 28.8 | 28.0 | 27.0 | 26.2 | 25.3 |
| 8000 | -1 | 24.8 | 24.0 | 23.0 | 22.4 | 21.6 | 21.2 | 29.4 | 28.4 | 27.7 | 26.8 | 25.7 | 25.0 |
| 10000 | -5 | 24.4 | 23.7 | 22.8 | 22.0 | 21.4 | 21.0 | 28.3 | 28.3 | 27.5 | 26.5 | 25.5 | 24.7 |
| 12000 | -9 | 24.0 | 23.3 | 22.5 | 21.7 | 21.2 | 20.9 | 28.3 | 28.3 | 27.2 | 26.3 | 25.3 | 24.6 |
| 14000 | -13 | | 23.0 | 22.3 | 21.4 | 21.1 | 20.8 | | | 27.2 | 26.2 | 25.2 | 24.4 |
| 1600 | -17 | | | 22.0 | 21.3 | 21.0 | 20.6 | | | 25.9 | 25.0 | 25.0 | 24.3 |
| 18000 | -21 | | | | 21.2 | 20.9 | 20.5 | | | | 25.0 | 25.0 | 24.2 |
| 20000 | -25 | | | | 21.2 | 20.8 | 20.4 | | | | | 24.2 | 24.2 |
| 22000 | -28 | | | | | | 20.4 | | | | | | 24.1 |

To maintain constant power, add approximately 1% for each 6°C above standard. Subtract approximately 1% for each 6°C below standard. Do not exceed 34 " MAP in cruise.

| Press. Atl. Feet | Std. Alt. Temp. °C | 65% Power RPM and MAN. PRESS | | 75% Power RPM and MAN. PRESS | |
|------------------|--------------------|------------------------------|------|------------------------------|------|
| | | 2400 | 2500 | 2600 | 2600 |
| S.L. | 15 | 33.8 | 32.0 | 31.0 | 34.0 |
| 2000 | 11 | 33.2 | 31.7 | 30.7 | 33.8 |
| 4000 | 7 | 32.8 | 31.5 | 30.5 | 33.6 |
| 6000 | 3 | 32.5 | 31.2 | 30.3 | 33.4 |
| 8000 | -1 | 32.3 | 31.0 | 30.1 | 33.1 |
| 10000 | -5 | 32.0 | 30.9 | 30.0 | 33.0 |
| 12000 | -9 | 31.8 | 30.7 | 29.8 | 32.5 |
| 14000 | -13 | | 30.5 | 29.7 | 31.7 |
| 1600 | -17 | | 30.4 | 29.5 | 31.6 |
| 18000 | -21 | | | 29.4 | |
| 20000 | -25 | | | 29.3 | |
| 22000 | -28 | | | | |

BEECH BARON 58




Cockpit Functions



Possible changes to the avionics configuration and type of altimeters can be chosen on the Baron's Configuration page. The standard configuration for the Bar on 58 is the HSI and RMI. The Configuration page allows you to change the avionics configuration: HSI with slaved ADF, HSI with non-slaved ADF, Directional Gyro (DG) with slaved ADF. When in the ADF (slaved or non-slaved) mode, click on the ADF instrument to change it to a VOR #2.

For pilots of older Baron models, external throttle controls (prop and throttle) can be configured to match the aircraft quadrant structure (**Configuration page**).

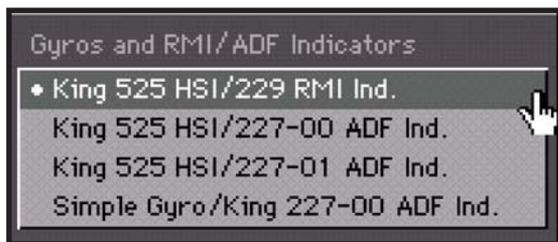

Instrument Options, CONFIGURATION page



Prop Synchronizer
Indicator



DG with ADF



DG with VOR #2

NOTE: The HSI / RMI mode comes with the KFC 150 Flight Director & Autopilot. When in the DG mode, the Autopilot is changed to the KAP.



Switch Array




Audio Panel

Push to change from time to timer mode

Push to Start and Stop timer

Push to reset timer

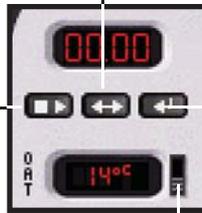

Click and drag switch to change OAT from Fahr to Cent

Aircraft Checklist**Before Starting:**

| | |
|---|----------|
| Parking Brake | SET |
| Avionics | OFF |
| Landing Gear Handle | DOWN |
| Cowl Flaps | OPEN |
| Fuel Selectors | CHECK ON |
| Circuit Breakers, Switches, Controls | CHECK |
| Battery / Alternator Switches | ON |
| Fuel Quantity Indicators | CHECK |
| Landing Gear Position Lights | CHECK |

Starting Engine:

| | |
|-----------------------------|-------------------------------|
| Mixture | FULL RICH |
| Propeller | HIGH RPM |
| Throttle | FULL OPEN |
| Fuel Boost Pump | HI, then OFF |
| Throttle | CLOSE, then open ½ inch |
| Magneto/Start Switch | START position and release |
| Throttle | 900-1000 RPM |
| Oil Pressure | PSI within 30 seconds |
| Warm-up | 900-1000 RPM |
| Alternator Switch | ON |
| Loadmeters and Voltmeter | CHECK for battery charge |
| Voltmeter | CHECK for 28 volts |
| Red START Annunciator Light | CHECK |
| Start other engine | Same procedure |

After Starting and Taxi:

| | |
|--------------------|-------------------|
| Avionics Equipment | ON as required |
| Brakes | RELEASE and CHECK |

Before Takeoff:

| | |
|-----------------------------|-----------------------------|
| Parking Brake | SET |
| Fuel Boost Pumps | OFF |
| Engine / Flight Instruments | CHECK |
| Fuel Indicators | CHECK |
| Mixture | FULL RICH |
| Fuel Selectors | CHECK ON |
| Starter Annunciator Light | CHECK |
| Throttles | 2200 RPM |
| Propellers | EXERCISE |
| Throttles | 1700 RPM |
| Magnetos | CHECK |
| Throttles | 1500 RPM |
| Propellers | FEATHERING CHECK |
| Throttles | IDLE |
| Throttles | 900-1000 RPM |
| Trim | As Required for Take-off |
| Flaps | CHECK |
| Parking Brake | OFF |

Takeoff:

| | |
|-----------------|--|
| Take-off Power | FULL THROTTLE, 2700 RPM |
| Oil Temperature | CHECK at 24°C Minimum |
| Airspeed | Accelerate to Take-off Speed |
| Landing Gear | RETRACT when rate-of-climb positive |
| Airspeed | Establish Desired Climb Speed |

Cruise Climb:

| | |
|---------------------|---------------|
| Mixture | FULL RICH |
| Cowl Flaps | As Required |
| Power | FULL THROTTLE |
| Propellers | 2500 RPM |
| Engine Temperatures | Monitor |
| Fuel Boost Pumps | OFF |

Cruise:

| | |
|------------------|---------------|
| Cowl Flaps | CLOSED |
| Power | SET |
| Fuel Boost Pumps | OFF |
| Mixtures | SET using EGT |

Descent:

| | |
|------------|-------------|
| Altimeter | SET |
| Mixture | FULL RICH |
| Cowl Flaps | CLOSED |
| Flaps | As Required |
| Power | As Required |

Before Landing:

| | |
|----------------------|--------------------------|
| Fuel Selector Valves | CHECK ON |
| Fuel Boost Pumps | OFF |
| Cowl Flaps | As Required |
| Mixture Controls | FULL RICH |
| Flaps | APPROACH |
| Landing Gear | DOWN |
| Flaps | FULL DOWN |
| Airspeed | Normal Approach Speed |
| Propellers | HIGH RPM |

Balked Landing:

| | |
|--------------|----------------------|
| Propellers | HIGH RPM |
| Power | MAXIMUM ALLOWABLE |
| Airspeed | 95 KTS |
| Flaps | UP |
| Landing Gear | UP |
| Cowl Flaps | As Required |

After Landing:

| | |
|------------------|-------------|
| Lights | As Required |
| Flaps | UP |
| Trim Tabs | RESET |
| Cowl Flaps | OPEN |
| Fuel Boost Pumps | As Required |

Shutdown:

| | |
|--------------------------------|--------------|
| Parking Brake | SET |
| Propellers | HIGH RPM |
| Throttles | 1000 RPM |
| Fuel Boost Pumps | OFF |
| Electrical Switches / Avionics | OFF |
| Mixture Controls | IDLE CUT-OFF |
| Magneto / Start Switches | OFF |
| Battery / Alternator Switches | OFF |

Aircraft Settings Panel

| Aircraft Information | | | |
|--|----------------|-----------------|----------|
| NEW ACFT MODULE | | | |
| Aircraft module | | | |
| baron.pho | | | |
| AIRCRAFT DATA BELOW IS FOR INFORMATION PURPOSES ONLY. THESE VALUES ARE PART OF THE AIRCRAFT CONFIGURATION AND CANNOT BE CHANGED BY THE USER. | | | |
| Various | | | |
| Aircraft | Baron 58 (v2) | | |
| Engines | 2 | Rated power | 300 HP |
| Propeller | Constant speed | Service ceiling | 20688 ft |
| Gear | Retractable | | |
| Gross weight | 2497 kg | Empty weight | 1740 kg |
| Usable fuel | 193.9 US gal = | | 527.7 kg |
| Speed | | | |
| Never exceed speed | 223 kts | | |
| Best single engine rate of climb | 100 kts | | |
| Minimum single engine control speed | 84 kts | | |
| Maximum structural cruising speed | 195 kts | | |
| Zero flaps stalling speed | 68 kts | | |
| Flaps extended stalling speed | 61 kts | | |
| Maximum speed for flaps extended | 122 kts | | |
| Maximum speed for gear extended | 152 kts | | |
| Maximum speed for gear operation | 152 kts | | |

Configuration Page

CLIMB — TWO ENGINE


ASSOCIATED CONDITIONS

- POWER MIXTURE FULL RICH
- FLAPS UP
- LANDING GEAR UP
- COWL FLAPS OPEN

CLIMB SPEED 105 KNOTS (ALL WEIGHTS)

EXAMPLE

- OAT -5°C
- PRESSURE ALTITUDE 11,500 FT
- WEIGHT 5500 LBS
- RATE OF CLIMB 800 FT/MIN
- CLIMB GRADIENT 5.7%

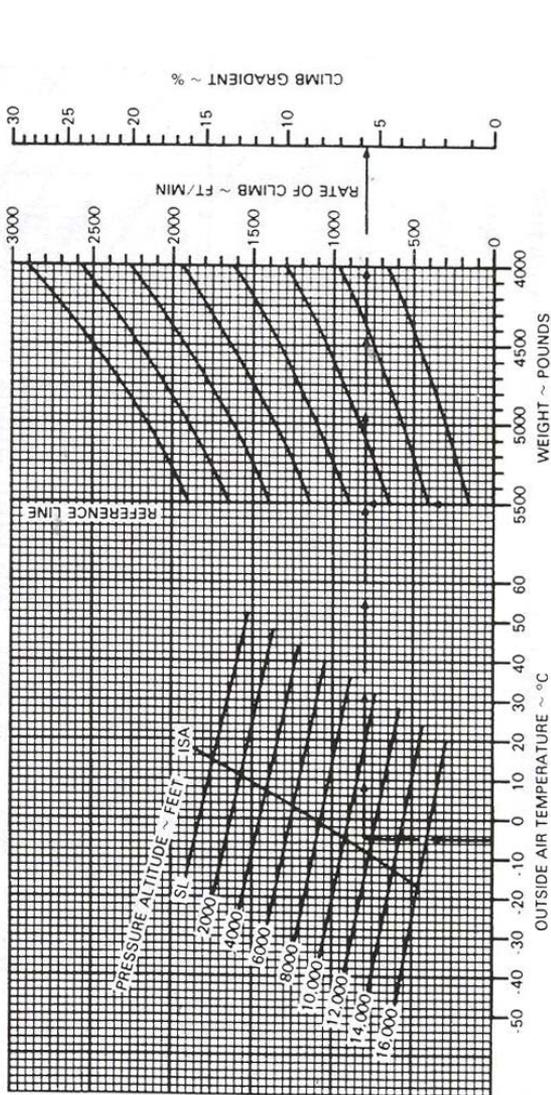

KCS8-550-8

CRUISE POWER SETTINGS

20° RICH

RECOMMENDED CRUISE POWER
23 IN. HG (OR FULL THROTTLE)
@ 2300 RPM (5200 LBS)

OF PEAK EGT


| PRESS. ALT. FEET | IOAT | | MAN. PRESS. | | FUEL FLOW/ENGINE | | AIRSPEED | |
|------------------|------|-----|-------------|-----|------------------|------|----------|------|
| | °C | °F | IN. HG | PPH | GPH | KIAS | KIAS | KTAS |
| SL | 2 | 28 | 23 | 81 | 13.5 | 176 | 170 | |
| 2000 | -6 | 21 | 23 | 84 | 14.0 | 178 | 176 | |
| 4000 | -10 | 14 | 23 | 87 | 14.5 | 179 | 182 | |
| 6000 | -14 | 7 | 23 | 91 | 15.2 | 180 | 188 | |
| 8000 | -18 | 0 | 22 | 89 | 14.8 | 177 | 190 | |
| 10000 | -22 | -7 | 21 | 84 | 14.0 | 169 | 188 | |
| 12000 | -26 | -14 | 19 | 78 | 13.0 | 162 | 185 | |
| 14000 | -30 | -21 | 18 | 73 | 12.2 | 154 | 182 | |
| 16000 | -34 | -29 | 17 | 68 | 11.3 | 146 | 178 | |
| SL | 18 | 64 | 23 | 78 | 13.0 | 171 | 171 | |
| 2000 | 14 | 57 | 23 | 81 | 13.5 | 173 | 177 | |
| 4000 | 10 | 50 | 23 | 85 | 14.2 | 174 | 183 | |
| 6000 | 6 | 44 | 23 | 88 | 14.7 | 175 | 190 | |
| 8000 | 3 | 37 | 22 | 87 | 14.5 | 171 | 192 | |
| 10000 | -2 | 29 | 21 | 81 | 13.5 | 164 | 189 | |
| 12000 | -6 | 22 | 19 | 76 | 12.7 | 156 | 186 | |
| 14000 | -10 | 15 | 18 | 71 | 11.8 | 149 | 183 | |
| 16000 | -14 | 7 | 17 | 66 | 11.0 | 140 | 178 | |
| SL | 38 | 100 | 23 | 76 | 12.7 | 166 | 171 | |
| 2000 | 34 | 93 | 23 | 79 | 13.2 | 168 | 178 | |
| 4000 | 30 | 86 | 23 | 82 | 13.7 | 169 | 184 | |
| 6000 | 26 | 80 | 23 | 85 | 14.2 | 169 | 191 | |
| 8000 | 23 | 73 | 22 | 84 | 14.0 | 166 | 193 | |
| 10000 | 19 | 66 | 21 | 78 | 13.0 | 159 | 190 | |
| 12000 | 14 | 58 | 19 | 73 | 12.2 | 151 | 187 | |
| 14000 | 10 | 51 | 18 | 68 | 11.3 | 143 | 183 | |
| 16000 | 6 | 43 | 17 | 64 | 10.7 | 135 | 178 | |

TIME, FUEL, AND DISTANCE TO CRUISE CLIMB

ASSOCIATED CONDITIONS:
MANUVER: FULL RICH
FUEL FLOW: 2000 RPM
FUEL WEIGHT: 6.0 LBS/GAL
CONV FLAPS: OPEN

CLIMB SPEED: 138 KNOTS (ALL HEIGHTS)

EXAMPLE:
EGT AT TAKEOFF: 15°C
EGT AT CRUISE: 5°C
CRUISE PRESSURE ALTITUDE: 11,500 FT
INITIAL CLIMB ALTITUDE: 11,500 FT
INITIAL CLIMB HEIGHT: 0 FT
EGT AT CRUISE: 13°C
FUEL TO CLIMB: 85.3 @ 5.6 GAL
DISTANCE TO CLIMB: 12 (11.5) @ 255 NM

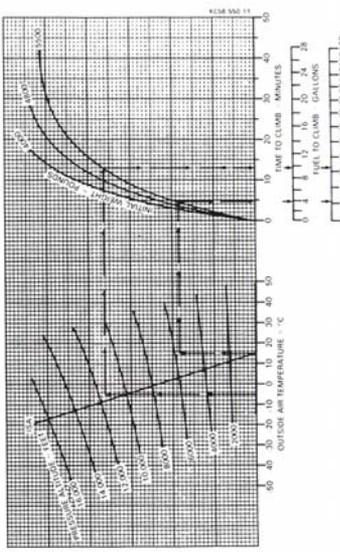

CRUISE POWER SETTINGS
20° RICH
 RECOMMENDED CRUISE POWER
 21 IN. HG (OR FULL THROTTLE)
 @ 2100 RPM (5200 LBS)
 OF PEAK EGT.

| PRESS. ALT. FEET | IOAT | | MAN. PRESS. | | FUEL FLOW/ENGINE | | AIRSPEED | |
|------------------|------|-----|-------------|-----|------------------|------|----------|------|
| | °C | °F | IN. HG | PPH | GPH | PPH | KIAS | KTAS |
| SL | -3 | 27 | 21 | 21 | 62 | 10.3 | 155 | 149 |
| 2000 | -7 | 20 | 21 | 65 | 10.8 | 157 | 155 | 155 |
| 4000 | -11 | 13 | 21 | 67 | 11.2 | 158 | 161 | 161 |
| 6000 | -14 | 6 | 21 | 70 | 11.7 | 159 | 167 | 167 |
| 8000 | -18 | -1 | 21 | 72 | 12.0 | 160 | 172 | 172 |
| 10000 | -22 | -8 | 21 | 73 | 12.2 | 158 | 176 | 176 |
| 12000 | -26 | -15 | 19 | 68 | 11.3 | 151 | 173 | 173 |
| 14000 | -30 | -22 | 18 | 64 | 10.7 | 143 | 169 | 169 |
| 16000 | -34 | -30 | 17 | 60 | 10.0 | 134 | 164 | 164 |
| SL | 17 | 63 | 21 | 60 | 10.0 | 150 | 150 | 150 |
| 2000 | 13 | 56 | 21 | 63 | 10.5 | 152 | 156 | 156 |
| 4000 | 9 | 49 | 21 | 65 | 10.8 | 153 | 162 | 162 |
| 6000 | 6 | 42 | 21 | 68 | 11.3 | 154 | 167 | 167 |
| 8000 | 2 | 35 | 21 | 70 | 11.7 | 155 | 173 | 173 |
| 10000 | -2 | 29 | 21 | 71 | 11.8 | 153 | 177 | 177 |
| 12000 | -6 | 21 | 19 | 66 | 11.0 | 145 | 173 | 173 |
| 14000 | -10 | 14 | 18 | 62 | 10.3 | 137 | 169 | 169 |
| 16000 | -14 | 6 | 17 | 58 | 9.7 | 128 | 163 | 163 |
| SL | 37 | 99 | 21 | 59 | 9.8 | 145 | 150 | 150 |
| 2000 | 33 | 92 | 21 | 61 | 10.2 | 147 | 156 | 156 |
| 4000 | 30 | 85 | 21 | 63 | 10.5 | 148 | 162 | 162 |
| 6000 | 26 | 78 | 21 | 66 | 11.0 | 149 | 167 | 167 |
| 8000 | 22 | 72 | 21 | 68 | 11.3 | 149 | 173 | 173 |
| 10000 | 18 | 65 | 21 | 69 | 11.5 | 148 | 177 | 177 |
| 12000 | 14 | 57 | 19 | 64 | 10.7 | 140 | 173 | 173 |
| 14000 | 10 | 50 | 18 | 60 | 10.0 | 131 | 168 | 168 |
| 16000 | 6 | 42 | 17 | 56 | 9.3 | 122 | 160 | 160 |

CRUISE POWER SETTINGS
20° RICH
 RECOMMENDED CRUISE POWER
 25 IN. HG (OR FULL THROTTLE)
 @ 2100 RPM (5200 LBS)
 OF PEAK EGT.

| PRESS. ALT. FEET | IOAT | | MAN. PRESS. | | FUEL FLOW/ENGINE | | AIRSPEED | |
|------------------|------|-----|-------------|-----|------------------|-----|----------|------|
| | °C | °F | IN. HG | PPH | GPH | PPH | KIAS | KTAS |
| SL | -2 | 28 | 25 | 79 | 13.2 | 175 | 168 | 168 |
| 2000 | -6 | 21 | 25 | 82 | 13.7 | 176 | 174 | 174 |
| 4000 | -10 | 14 | 25 | 85 | 14.2 | 176 | 180 | 180 |
| 6000 | -14 | 7 | 24 | 83 | 13.8 | 173 | 181 | 181 |
| 8000 | -18 | 0 | 23 | 78 | 13.0 | 166 | 179 | 179 |
| 10000 | -22 | -8 | 21 | 73 | 12.2 | 158 | 176 | 176 |
| 12000 | -26 | -15 | 19 | 68 | 11.3 | 151 | 173 | 173 |
| 14000 | -30 | -22 | 18 | 64 | 10.7 | 143 | 169 | 169 |
| 16000 | -34 | -30 | 17 | 60 | 10.0 | 135 | 164 | 164 |
| SL | 18 | 64 | 25 | 77 | 12.8 | 170 | 169 | 169 |
| 2000 | 14 | 57 | 25 | 80 | 13.3 | 171 | 175 | 175 |
| 4000 | 10 | 50 | 25 | 82 | 13.7 | 171 | 181 | 181 |
| 6000 | 6 | 43 | 24 | 81 | 13.5 | 167 | 182 | 182 |
| 8000 | 2 | 36 | 23 | 76 | 12.7 | 160 | 180 | 180 |
| 10000 | -2 | 29 | 21 | 71 | 11.8 | 153 | 177 | 177 |
| 12000 | -6 | 21 | 19 | 66 | 11.0 | 145 | 173 | 173 |
| 14000 | -10 | 14 | 18 | 62 | 10.3 | 137 | 169 | 169 |
| 16000 | -14 | 6 | 17 | 58 | 9.7 | 128 | 163 | 163 |
| SL | 38 | 100 | 25 | 74 | 12.3 | 165 | 170 | 170 |
| 2000 | 34 | 93 | 25 | 77 | 12.8 | 166 | 176 | 176 |
| 4000 | 30 | 86 | 25 | 80 | 13.3 | 166 | 181 | 181 |
| 6000 | 26 | 79 | 24 | 78 | 13.0 | 162 | 183 | 183 |
| 8000 | 22 | 72 | 23 | 73 | 12.2 | 155 | 180 | 180 |
| 10000 | 18 | 65 | 21 | 69 | 11.5 | 148 | 177 | 177 |
| 12000 | 14 | 57 | 19 | 64 | 10.7 | 140 | 173 | 173 |
| 14000 | 10 | 50 | 18 | 60 | 10.0 | 131 | 168 | 168 |
| 16000 | 6 | 42 | 17 | 56 | 9.3 | 122 | 160 | 160 |

Intentionally
Left
Blank

CHAPTER 6

TROUBLE SHOOTING

SOFTWARE ISSUES

Is ELITE a Windows native or 32-bit program?

Yes. ELITE is a true Windows native 32-bit program and is fully compatible with Windows 98/NT4/2000/XP. The ELITE software uses standard Windows file open and save file boxes and other Windows native features such as Direct Sound, Direct Input, and Multi monitor support.

What does being a Windows native program mean?

It only means that the software will support the latest features of the Windows operating system, allowing for better compatibility with computer hardware, support for new operating system features, and easier installation, setup, and program navigation.

Serial Numbers Do Not Match

The USB key and the software are encoded with the same serial number. If they do not match you will receive a warning message. Check the USB key key chain and the diskette to see if they match. Also check the bottom left corner of the program startup screen for the serial number of the program. If these numbers do not match, please contact your dealer immediately.

Bad Disk

If there is an error in reading the diskette or the CD is physically damaged, please contact your dealer for a replacement. Diskettes are thoroughly tested prior to shipping. However, they store data magnetically. If exposed to extreme temperatures or other magnetic fields, they can be damaged. Please make backups of any diskettes and store them in a safe place.

Aircraft Selection Menu

If you do not get the Mini Pictures for selecting the aircraft upon starting the software, make sure that the resolution of the desktop area is set to 1024 x 768. Change the Display Properties (Windows) to the proper resolution.

HARDWARE ISSUES

What does Multi-monitor capability mean?

Although not a requirement to run ELITE, the multi monitor capability allows for setting up a separate instructor's station on an additional monitor attached to the one computer equipped with two video cards. The use of the second monitor allows the ELITE program to display the Map, Weather, and Control pages on one screen, while the other screen is dedicated to the instrument panel. By doing this, it allows an instructor to monitor a persons flight path, give "radar" vectors, invoke failures, and change weather all without stopping and interrupting the student's flight.

What flight control devices (sticks/yokes/rudders) are compatible with ELITE?

Just about any stick, yoke, or rudder pedals that are recognized by the operating system will be compatible with the ELITE program. ELITE uses Direct Input from the Windows operating system to interface with controls plugged into the IBM gameport or IBM USB ports.

Can I use the ELITE digital flight consoles, avionics panels, and throttle quadrants with other flight sims?

The avionics panels and digital flight consoles operate with the ELITE software and Microsoft FS2002, FS2004 Flight Simulator.

If using Microsoft FS2002 and FS2004 additional third party software is needed. The throttle quadrants may operate with a few other programs, if those programs can interface with a device using an EPIC card.

How do I connect flight controls to my computer?

Yokes, joysticks, and rudder pedals can be plugged directly into the computer's gameport (IBM), or USB port depending on the connection(s) required by each.


ERROR MESSAGES

“No elite control interface detected, flight will be halted after 3 minutes”

This error indicates that the program does not recognize the UCI box. The proper way of testing the UCI is by double clicking on the PROP/PCATD icon. Immediately after the last click, hold down the “C” key on your keyboard until a box opens that allows your com port to be selected and tested. You will need to select one and test it. After pressing the test button, you'll see a window with your serial number. Compare the number displayed with the one on your software. If there is no serial number, the UCI is not communicating with the program

To fix this, disconnect the power on the UCI for 5 seconds and connect it again (resets the UCI). If problem persists, your com ports might be disabled in your system BIOS. If you do not have any com ports to select from on the menu, you will need to go in to your system BIOS and change your com ports to an active address (you will need to consult with the manufacturer of your mother board for more info). Please make sure that you don't have any palm or syncing software running in your task bar.

If you do not have a UCI box and you have a USB Key and you still receive this error, you will need to check your windows control panel in the WIBU section. Consult the diagram below for the two important items to look for.

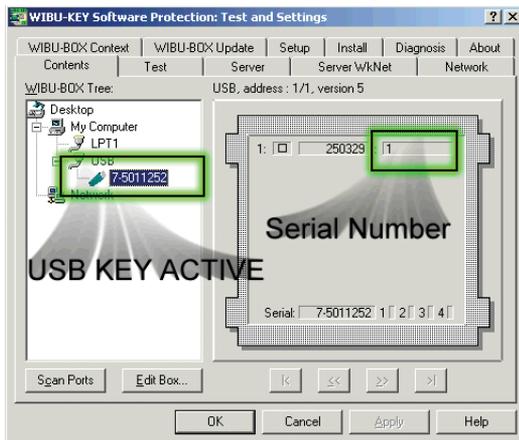

“No visual database found”

This message indicates GenView was not installed or installed in the incorrect directory. You will need to reinstall the GenView disk and find the correct directory using the browse section in the installer.

“Open GL Subsystem Error”

The Graphics card/driver installed in your computer does not support Open GL acceleration. In order to fix this error you will need to download the latest driver for the video card or replace the video card for one that supports OPEN GL such as NVIDIA.

For more information on this topic visit www.nvidia.com

Serial number of ELITE and control interface do not match

Please contact our support department for a control RMA Number. The UCI has encountered an internal power surge, and the serial chip will have to be replaced.

You can test the UCI to make sure against the software that in fact the UCI's number has changed. Double click on the ELITE icon then hold the “C” key down, the next option will be for you to test the UCI. Consult image below.

This application has failed to start because FTD12XX.DLL was not found. Re-installing the application may fix this problem

If you do not have ELITE USB BRAND HARDWARE, uninstall the ELITE Software in Add/Remove programs in the Windows control panel.

Re-install making sure you select “no” to the ELITE USB brand hardware screen.

If you do have ELITE USB BRAND HARDWARE then connect your hardware in the USB port. If Windows does not prompt you for hardware drivers to install, go into your control panel in Windows, and click on system icon, then hardware tab. When you click on “device manager” you will see a list of hardware. Look for an unknown device. Double click on the unknown device and click the reinstall driver button. Select the advanced option. In the window include this location in the search: C:\Program Files\Elite\ELITE PCATD 8\Drivers\ELITEUSB. Press next several times then finish and your hardware should be online.

“DISK FULL”

Hard drive space required not available.

Need to free up hard drive space.

INSTALLATION STARTING IN “DEMO” MODE

Floppy disk not detected, or defective.

Insert or replace floppy disk.

PROGRAM FREEZES ON INSTALLATION

Another application is halting the installation.

End all pending tasks (CTRL +ALT+DEL).

“NOT ENOUGH MEMORY”

Computer does not have enough resources.

Restart CPU or free up more resource.

“RESOLUTION ERROR”

ELITE requires a display set to 1024 x 768 resolution.

Need to change your screen resolution.

“NO OPEN GL SUBSYSTEM”

ELITE can't display graphics.

Need to install an Open GL capable video card or latest drivers of your current video card.

“NO ELITE CONTROL DETECTED”

Control Interface or USB Key not detected.

Check USB key for correct connection; also verify that the drivers for the key are installed.

“ELITE SERIAL NUMBER MISMATCH”

ELITE serial number not the same.

Check physical number on the software to the one on the USB key or UCI to be the same. (If not contact support dept.)

“ERROR IN LOADING INSTRUMENT PICTURES”

Problem in the memory configuration (MAC ONLY).

Allocate at least 15000K/25000K of memory to ELITE.

AVIONICS PANEL NOT DISPLAYED ON INSTRUMENT PANEL

External avionics selected on digital mode.

Select non-digital avionics on the Configuration Page, then save and restart program.

CONTROLS DO NOT OPERATE CORRECTLY

Controls are not properly calibrated.

Re-calibrate controls in the Configuration Page (Under calibration section).

SOUND NOT WORKING PROPERLY

Direct X drivers possibly corrupted.

Need to install latest version of Direct X (www.microsoft.com/directx)

CONTROLS

I have a yoke or stick that is not ELITE brand. How do I program the buttons to perform specific tasks (Trim up, parking brake, freeze, etc...)?

ELITE has a built in programming system. To find it, open ELITE and go to the CONFIGURATION screen. On the top left hand side is a category called HARDWARE CONFIGURATION with 2 SET buttons within it. Click on the SET button next to “Computer”.

This will open up a new window with 4 options. You want to hit the CHANGE button next to “Game Controller”.

You will then see a window with your stick/yoke (or stick/yoke and pedals) listed. Highlight the stick/yoke and hit the SELECT button under “Main Flight Controls”, then click the CONFIGURE button beneath it. This will open the Flight Control Configuration screen.

On this screen all the axes of the stick/yoke will be listed on the top and the buttons on the bottom. When you push a button (or rocker/HAT switch) it will turn red. Once it is highlighted use the pull-down window next to “Function” to select the function for THAT button. Push the next button you want to program and select its function. Repeat until all your buttons have been programmed.

My USB Rudders are reversed, how do I fix this?

When you launch the simulator go into the Configuration screen (ALT+G) and click computer set. Click “Game Controller Change” (If that button is not accessible you will need to exit the software and delete the PREF folder in the

ELITE Directory.) Then you can click on the pedals. Press “configure” under Rudder(+) and click (RVS) under rudder to fix the reversed AXIS (don't forget to restart the ELITE software).

My brakes are reversed, how do I fix this?

When you launch the simulator go in to the Configuration screen (ALT+G) then click computer set. Click game controller change (If that button is not accessible you will need to exit the software and delete the PREF folder in the ELITE Directory.) Then you can click on the pedals. Press “configure” under Rudder(+) and click (RVS) under the brakes (L+R) to fix the reversed AXIS (don't forget to restart the ELITE software).

My left throttle is not working on my quadrant, how do I fix this?

More than likely you have set in the program to use the Yoke's quadrant as the one in operation. Go to the configuration screen, then CPU set, then game controller change, then press configure on the main flight controls. Make sure you do not see any throttle selected in the drop down menu, because if you do the ELITE will use the one on the yoke not on your quadrant.

These questions and more can be answered on our web site.

INDEX

Symbols

3D Sound 147

A

ACC. *See* Area Control Center

ACFT Information 77

ACP. *See* Airlift Command Post

Active Metar 111

AC Voltage 309

ADF 181, 183, 186, 332. *See also* Automatic Direction Finder

Advanced True Integrated Sound 147

ATIS 147

Advisory panel test 263

Aerodrome Actual Weather METAR And SPECI Decode 120

Aerodrome Flight Information Service 91

A/FD. *See* airport/facility directory

AFIS. *See* Aerodrome Flight Information Service

Aircraft Attitude 254

Aircraft Identification 137

Aircraft Information 147

Aircraft Module 28

Aircraft Panel 135

Aircraft Position 51

Aircraft Snapping 59
Centering 60

Map Scrolling 59

Aircraft State. *See* State Panel

Air / Ground 92

Airlift Command Post 90

Airport Advisory Service 91

airport/facility directory 89

Airport Frequency Information 89

Communication box 89

Frequency Column 89

Airport Radar Service Area 91

Airspeed 208, 209, 216, 217, 225, 226, 235, 254, 255, 265, 266, 276, 277, 287, 288, 289, 311, 323, 337, 338, 339

Airspeed Indicator 177

Airspeed Panel 73

Air Traffic Control Tower 91

ALT button 304

Alternate Air 243, 244, 273, 275, 322

Alternate Air Controls 320

Alternate static source 233, 262, 273

Alternate Static Source Push 252

Alternator Field Switch 252, 255

Alternator Output 320, 321

Alternators 320

Alternator switch 233, 234, 236, 262, 286, 324, 336

Altimeter 104, 178, 253, 264, 275, 288, 310, 321, 338

Altitude Grid 74

Altitude Panel 72

ALTr FLD switch-breaker 273

ALTR Switch 243, 244, 245

ALTr warning light 273

Ammeter 215, 234, 243

Annunciator Lights 252, 253, 309

Annunciator panel 208, 224, 234, 243

Annunciator Panel Lights 321, 322
Anticollision light 262, 273
AP. *See* Autopilot
AP-3000 4, 23, 300, 301, 302, 305
AP ENG 304, 305. *See also* auto-pilot engage
Apollo Series GPS 2
APP. *See* Approach Control
Approach Control 90
APR button 304
Area Control Center 90
ARM button 304
ARR. *See* Arrival Control
Arrival Control 90
Arrival Service 91
ARSA. *See* Airport Radar Service Area
Artificial Horizon 177
ASI. *See* Airspeed Indicator
Assembly 1
ATD Detection Report 145
ATI. *See* Automatic Terminal Information Services
ATIS. *See* Automatic Terminal Information Services
Autofeather 310
Autofeather Switch 310, 312
Auto Ignition 309
Automatic Direction Finder 186
Automatic Terminal Information Service 90
Automatic Weather Observing Station 90
Autopilot 2, 195, 217, 309
ALT 197
Altitude/Vertical Speed Selector 198
AP ENG 195
APR 196, 197
BC 196, 197
CWS 197, 199

FD 197
GS 196, 197
HDG 195
KAP 150 195
KAS 297B 198
KFC 150 195, 197
NAV 196
auto-pilot engage 195
autopilot mode 305
Auxiliary Fuel Gauge 310
Auxiliary Fuel Pump 207, 214, 224, 322, 323
avionics 346
Avionics xv, xvi, 233, 243, 245, 253, 286, 287, 289, 309, 336
Avionics Equipment 336
Avionics master 236, 309, 312
Avionics power 207, 209, 214, 224, 226
AWO. *See* Automatic Weather Observing Station
AWOS. *See* Automatic Weather Observing Station

B

Battery 312
Battery / Alternator Switches 286, 289, 336, 339
Battery master 233, 234, 236, 308, 320, 321, 324
BATT MASTR Switch 243, 244, 245
BC button 304
Beacon Light 207
Beacon Nav Lights 214
Bearing Pointer 181
BEARING TO 78
Beech
Baron 58 xvi, xvii, 198, 331
Aircraft Checklist 336
Aircraft Settings Panel 340
Cockpit Functions 332

- Bonanza A36 xvi, xvii, 198, 281
 - Aircraft Checklist 286
 - Aircraft Settings Panel 290
 - Cockpit Functions 282
- Bendix King Silver Crown
 - Avionics 2
- BKN 103
- Boost Pump 255
- Brakes 207, 208, 214, 215, 216, 224, 225, 233, 243, 265, 276, 277, 287, 308, 309, 321, 322, 336
- Braking 217
- C**
- Calibration screen 29
- Carb Heat Lever 232
- Carburetor heat 224, 233, 234, 235, 262, 263, 264, 266
- Carburetor temperature indicator 264
- CARS. *See* Community Aerodrome Radio Station
- CAVOK. *See* Ceiling/Visibility OK
- Ceiling/Visibility OK 103
- Cessna 223
 - 172R xvi, 200
 - Aircraft Checklist 207
 - Aircraft Settings Panel 210
 - Climb 211
 - Clock / OAT Gauge 202
 - Cruise 212
 - 182RG xvi, 223
 - Aircraft Checklist 224
 - 182S xvi, 213
 - Aircraft Checklist 214
 - Aircraft Settings Panel 219
- Circuit Breakers 233, 286, 336
- CLD. *See* Clearance Delivery
- Clearance Delivery 90
- Clearance Pre-Taxi 90
- Climb 266
- Climb Power 310
- Climb speed 208, 209, 216, 217, 225, 226, 254, 265, 322, 323
- Collins Flight Control System 304
- Collins Pro Line II 301
- COMM1/NAV1 183
- COMM2/NAV2 183
- Community Aerodrome Radio Station 91
- Condition Lever 308, 309, 311, 312
- Configuration 22
- Configuration Page 23, 25, 31, 45, 143, 168, 191, 333
 - Aircraft Information 25
 - Color for Digits 25
 - Controls 25
 - General Settings 25, 28, 143
 - Handling 25
 - Hardware Configuration 25
 - Instrument 25
 - Sounds 25
 - State Files 143
 - Units 25
- Configuration Screen 26
- Control 90
- Control Page 47, 132, 169, 319
 - Preset Level of Detail (GenView) 133
 - Scenery/Runway Lighting 135
 - Visual Panel 132
 - Set Date and Time 133
- Controls Calibraton 22
- Control Screen 26
 - State files 140
- control sensitivity, adjusting 37
- Control wheel 234, 244
- Control Wheel Steering 304
- Copyright xix

Cowl Flaps 214, 215, 216, 217,
224, 252, 253, 254, 255,
286, 288, 289, 303, 320,
322, 323, 324, 336, 338,
339

CPT. *See* Clearance Pre-Taxi

CRS knob 303

CTL. *See* Control

CWS. *See* Control Wheel
Steering

D

DC Volt/Loadmeters 308

DC Voltmeters 309

Decision Height 284

Demo Mode 12

DEP. *See* Departure Control

Departure Control 90

Departure Service 91

DG. *See* Directional Gyro

DH 299. *See also* Decision
Height

DIR. *See* Director (Approach
Control/Radar)

Directional Gyro 178, 332

Director (Approach Control/
Radar) 90

Direct X 351

Display Properties 346

DME 181

DME Receiver 184

Frequency Mode 184

GS/T Mode 185

RMT Mode 185

E

EFIS. *See* Electronic Flight
Instrumentation System

EGT gauge 231

elapsed time 203, 204

Electrical Equipment 214, 224,
226, 324

Electrical Load 311

Electrical switches 236, 245,
289, 320, 339

Electric Elevator Trim Control
309

Electric Fuel Boost Pump 253,
254

Electric fuel pump 233, 234,
235, 236, 243, 244, 245

Electric pitch trim 2

Electronic Flight Instrumentation
System 192

Elevator 225

Elevator and Rudder Trim 215

Elevator Control 208, 216, 225

Elevator & Rudder Trim 216

Elevator Trim 207, 208, 224

ELT 252. *See* Emergency
Locator Transmitter

Emergency 90

Emergency Locator Transmitter
202

EMR. *See* Emergency

ENG button 304

Engine Auto Ignition 311

Engine Control Friction Locks
309

Engine / Flight Instruments 287,
337

Engine gauges 234, 244

Engine Instruments 208, 215,
224, 310, 321

Engine Runup 322

Engine Startup 135

Engine Temperatures 288, 338

ET. *See* elapsed time

Extend Button 77

F

Failures Activating with
Keyboard ON 145

FD. *See* flight director

FEW 103

- FIR. *See* Flight Information Region
- FIS. *See* Flight Information Service
- Flaps 234, 235, 236, 244, 245, 255, 263, 264, 265, 266, 274, 275, 276, 277, 287, 288, 289, 309, 310, 311, 322, 323, 324, 337, 338, 339
- Flap Switch 252
- Flight Controls 4
Calibration 29
- Flight Data Recorder 3
- flight director 195
- flight director mode 304
- Flight & Engine Instruments 309
- Flight Information Region 53
- Flight Information Service 91
- Flight instrument 207, 215, 224, 234, 244, 263, 274, 321
- Flight Service Station 90
- flight time 203, 204
- FREEZE 23, 48, 167, 169, 203
- FSS. *See* Flight Service Station
- FT. *See* flight time
- Fuel Boost Pump 252, 254, 286, 287, 288, 289, 336, 337, 338, 339
- Fuel Flow Indicator 253
- Fuel Imbalance 136
- Fuel Indicators 287, 337
- Fuel / Load Panel 136
- Fuel pressure 234, 244, 262, 263, 264
- Fuel pump 262, 264, 265, 266, 273, 275, 276, 277
- Fuel Quantity 207, 308, 309, 322
- Fuel Quantity Indicators 286, 336
- Fuel selector 233, 234, 235, 244, 245, 252, 253, 254, 262, 263, 264, 273, 274, 275, 286, 287, 321, 322, 323, 336, 337
- Fuel Selector Valve 207, 208, 209, 214, 215, 216, 217, 224, 225, 226, 288, 338
- Fuel Shutoff Valve 207
- Full throttle 264, 275
- ## G
- gameport 346, 347
- Gate Control 90
- Gear 245, 322, 323
- Gear Lights 320
- Gear Selector 320
- Generation warning light 262
- Generator 308, 309
- GenView 2, 157
Runway Definitions 157, 172
Taxiing 158, 172
Vector Data 157, 172
- Glideslope Limits 74
- GND. *See* Ground Control
- Go-Around 277
- GPS Annunciator 190
Apollo GPS 190
Bendix/King
EFS 40 192, 193
Silver Crown Plus 191
Trimble GPS 190
- GPS-NAV Control 307
- GPS Receiver 187
Apollo
GX50 188
GX55 188
GX60 188
GX65 188
Trimble 2000 Approach Plus
GPS 188
- Ground Control 90
- Ground Speed 185
- GS. *See* Ground Speed

GTE. *See* Gate Control
 Gyro Compass 178
 Gyros 321
 Gyro Vacuum 320
 Gyro Vacuum Gauge 321

H

HDG 306. *See also* heading
 HDG button 304
 HDG knob 181
 heading 195
 heading bug 179
 Heading indicator 264, 275
 Heading Panel 72
 HEL. *See* Helicopter Frequency
 Helicopter Frequency 90
 Horizontal attitude gyro 264,
 275
 Horizontal Situation Indicator
 179
 HotPlates 1, 92
 HSI 332. *See also* Horizontal
 Situation Indicator

I

IAS 73. *See also* Instrument
 Approach Scenarios
 IC. *See* Initial Contact
 IDENT button 63
 Ignition 308, 309
 Ignition Annunciators 310
 Ignition Switch 207, 209, 214,
 224, 226
 ILS 56
 INF. *See* Information
 Information 90
 Initial climb 265, 275
 Initial Contact 91
 Injection 262
 Instructor / Operator Station 39
 Instrument 48, 169
 Instrument Approach Scenarios
 68, 138

Instrument Configuration 38
 Instrument Panel
 Adjusting 174
 Instruments 177, 309, 321
 Airspeed Indicator 177
 Altimeter 178
 Artificial Horizon 177
 Gyro Compass 178
 Horizontal Situation Indicator
 179
 Moving Dial Indicator 181
 Radio Magnetic Indicator 180
 Turn Indicator 178
 Vertical Speed Indicator 178
 VOR/LOC/Glideslope Indicator
 180
 Instrument Screen 171
 Instrument Vacuum 309
 Inverter 309, 312
 IOS. *See* Instructor / Operator
 Station
 ITT 312

J

Jeppesen xviii

K

Keyboard
 Shortcuts
 Knobs and Rotary Dials 165
 Keyboard Control 162
 King Air 198
 B200 297
 Aircraft Checklist 308
 Aircraft Settings Panel 313
 Battery & Generator
 Switches 298
 Firewall Shutoff Valves 298
 Load / Voltmeter Panel 298
 Operational Limitations 298
 King Crown 181
 King Flight Control Integrated
 Systems 161

King Silver Crown xv, xvi

L

Landing gear 254, 255, 276,
287, 288, 289, 310, 311,
323, 337, 338, 339

Landing gear indicator lights test
274

Landing gear lever (handle)
224, 273, 276, 277, 286,
336

Landing Gear (Position) Lights
286, 323, 336

Landing gear switch (handle).
See Landing gear lever
(handle)

Landing Gear Warning Horn
299

Landing Roll 209, 217, 226

Landing/Taxi Lights 209, 217,
311

Language other than English
92

Level of Detail 133

License Agreement xx, 7

Lights 289, 321, 339

Light Switches 312

Limits 30

Loadmeters 286, 309, 336

local time 144, 203

LOD. *See* Level of Detail

LT. *See* local time

M

MAG HDG. *See* Heading Panel

Magnetos 207, 215, 224, 233,
234, 243, 245, 253, 287,
321, 337

Magneto selector 262, 263,
264, 273, 274, 275

Magneto/Start selector 262

Magneto/Start switch 252, 253,
255, 286, 289, 336, 339

Magneto switch 236, 320, 324

Main switch 262, 273

Malfunctions 2

Malfunctions Page 41, 122, 168

ARM button 123, 124

Clear all failures 131

Engine Failures 127

FAIL 123

Failure States 130

Failure Time Window 124

Flaps 126

Gear 126

Immediate Failure 125

Instrument INOPs 129

Instruments and Systems
Failures 124

Malfunction files

Open 130

Save 130

Random Failures 128

Receivers 126

Ref. Failure Time 131

Reset to ARM 131

Specific Time Failure 125

Manifold pressure 264, 275

Manual Reposition 56

Map Borders 53

Map Cursors 52

Active Runway 52

Add point 52

Change/Move Point 52

Heading/Distance 52

Normal cursor 52

Remove point 52

Zoom in cursor 52

Zoom limit 52

Zoom out cursor 52

Map Information 53

Map page 23, 46, 49, 80, 158,
169, 173

Path Button 83

Clear 83

Load 83

- Save 83
- Print Button 84
- Print 84
- Save 84
- Route Button 84
- Route Planner 86
 - Add Point 86
 - Move Point 87
 - Remove Point 86
 - Route Info 87
- Shortcuts 87
 - GenView Specific Shortcuts 88
- Mapping 3
- MAP profile view 74
- Map Scale 51
- Map screen 26
- Map Zoom Levels 60
 - Custom 60
 - Storing 61
- Marker Receiver 186
- Master Panel Power 35
- Master Switch 207, 209, 214, 224, 226, 252, 255
- MASTER SWITCH 298
- MDI. *See* Moving Dial Indicator
- MDI knob 303
- Menu 166, 175
- Metar Files
 - Downloading METAR Files
 - Advanced Method 115
- Metar Page 43, 111, 168
 - Downloading METAR Files 114
 - Basic Method 114
 - METAR Data 112
 - Wind and Gusts 112
- Meteo Files 108
 - Load 108
 - Save 108
- Meteo Page 42, 95, 105, 123, 168, 319
 - Actual Weather Column 97
 - Ceiling (Standard View) 101
 - Clouds Page 95, 96
 - Dynamic WX 97
 - Layout (GenView) 96
 - Static Weather 98
 - Transition Zones 99
 - GenView 99
 - Standard View 100
 - Turbulence 101
 - Visibility (GenView) 101
 - Wind 99
 - Wind Direction 100
 - Wind Page 95, 96
 - Wind Speed 100
- Meteorological page. *See* Meteo Page
- Meteo Screen 26
- Microsoft Flight Simulator 346
- Military Frequency 92
- Mixture 207, 208, 209, 214, 215, 216, 224, 225, 226, 233, 234, 235, 236, 243, 244, 245, 252, 253, 254, 255, 262, 263, 264, 265, 266, 273, 274, 275, 276, 286, 287, 288, 320, 321, 322, 323, 324, 336, 337, 338
- Mixture Controls 288, 289, 322, 323, 338, 339
- Modification Screen 26
- Modification Page 44, 149, 168
 - Facilities 149, 150
 - Facility Info 152
 - MODIFY button 151
 - Undo Changes 151
- Monitor
 - Second 37
- Mooney
 - M20J xvi, xvii, 161, 249
 - Aircraft Checklist 252
 - Aircraft Settings Panel 256
 - Cockpit Functions 251

Mouse Control 164
 Moving Dial Indicator 181
 Moving Map 181
 BACK 182
 ID Button 182
 Mode A 182
 Mode M 182
 Mode N 182
 ZOOM 182
 MUL. *See* Multicom
 Multicom 90
 Multi-Engine Aircraft 295
 Multi-monitor 26, 346
 Setup 26
 Three Displays 26
 Two Displays 26
 Multiple ILS/Deselection 56

N

National Flight Data Center xviii
 NAV1 179, 180
 NAV1/ NAV2 Toggle 302
 NAV2 180
 NAV button 304
 NAV/COMM 183
 NAV Data
 Changing 66
 Loading 66
 NAV database 55
 Nav Data Symbols 51
 Airport Symbol 52
 Communication frequencies 52
 DME 51
 FIX 51
 Glide Path Track 51
 Glideslope transmitter 52
 Holding 51
 Localizer transmitter 52
 Marker 51
 NDB 51
 Runway with displaced threshold 52

VOR 51
 VOR DME 51
 Navigation Data 2
 Navigation Databases 28, 64
 NAVset. *See* NAV database
 Creating 67
 Non Directional Beacon 186
 NDB 186
 Null Zone 30

O

OAT 319
 ODP. *See* Parametres (French Radio)
 Oil pressure 207, 214, 224, 233, 234, 243, 253, 262, 263, 264, 273, 274, 275, 286, 308, 309, 320, 336
 Oil temperature 234, 243, 263, 264, 274, 275, 287, 337
 Open GL 348
 Operations 90
 OPS. *See* Operations
 Optimum climb speed 265
 OVC 103, 104. *See also* OVERCAST
 OVERCAST 102, 103

P

Parametres (French Radio) 90
 Parking brake 207, 209, 215, 217, 224, 226, 233, 243, 252, 253, 254, 255, 262, 263, 264, 266, 273, 274, 275, 277, 286, 287, 289, 312, 320, 321, 322, 336, 337, 339
 Password Protection 144
 PI-121 xiv
 Pilot Controlled Lighting (Air / Ground) 92

Piper

- Archer III xvi, 230
 - Aircraft Checklist 233
 - Aircraft Settings Panel 237
 - Cockpit Functions 231
- Arrow xvi, xvii
- Arrow IV 240
 - Aircraft Checklist 243
 - Aircraft Settings Panel 246
 - Climb Performance 247
 - Cockpit Functions 241
 - Cruise Performance 248
- Seneca III xvi, xvii, 198, 316
 - Aircraft Checklist 320
 - Aircraft Settings Panel 325
 - Cockpit Functions 317
- Pitch trim 264, 265, 275, 276
- Pitot 177
- Pitot Heat 177, 252
- Power Levers 166, 308, 311
- POWER light 36
- Power Quadrant 31
- Product Registration 16
- Profile Button 73
- Profile Scroll 74
- Program Menu 39
- Pro Panel II 21
- Propeller 214, 215, 217, 224,
233, 243, 244, 245, 252,
253, 254, 262, 263, 264,
265, 266, 273, 274, 275,
276, 277, 286, 287, 288,
289, 310, 312, 336, 337,
338, 339
- Propeller Area 214
- Propeller Controls 308, 320,
321, 323
- Propeller Levers. *See* Propeller
Controls
- Propeller Synchrophaser 310
- Pump warning light 262

Q

- Quit 48, 170

R

- Radar Altimeter 2, 284, 299,
303
- Radar Only Frequency 90
- RAD button 184
- Radial Button 78
- Radio 90, 207, 214, 224, 266,
277
- Radio Magnetic Indicator 180
- Radio master 252, 253, 255,
262, 263, 266, 273, 274,
277, 320, 321, 324
- Radio Navigation Receivers
183
- Radios and Avionics 208, 215,
225
- Ramp / Taxi Control 90
- RBI. *See* Relative Bearing
Indicator
- RCAG. *See* Remote
Communications Air to
Ground
- RCO. *See* Remote
Communications Outlet
- RDO. *See* Radio
- RDR. *See* Radar Only Frequency
- Red START Annunciator Light
286, 336
- Reference Meteo Time 109
- RESET 110
- Relative Bearing Indicator 181
- Remote Communications Air to
Ground 92
- Remote Communications Outlet
92
- Remote Flight Service Station
90
- Reposition 53

RFS. *See* Remote Flight Service Station
 RFSS. *See* Remote Flight Service Station
 RMI 180, 332. *See also* Radio Magnetic Indicator
 RMP. *See* Ramp / Taxi Control
 Rotate Speed 322
 Rotation 265, 275
 RSA. *See* Airport Radar Service Area
 Rudder trim 2, 275

S

SCT 103
 SEL. *See* Single Engine Land
 Serial 8
 Serial Numbers 345
 SET ALTITUDE 306
 Shortcuts
 General 163
 Control 163
 Engine Sound 163
 Simulation Speed 163
 Visual 163
 MAP Screen 162
 Custom Zoom 163
 HDG/Dist 163
 Position 163
 Route 162
 Scroll 162
 Zoom 162
 Show Facilities 61, 63
 Single Engine Land 4
 SKC. *See* Sky Clear
 Sky Clear 103
 Socata
 TB10 Tobago xvi, xvii, 259
 Aircraft Checklist 262, 273
 Aircraft Settings Panel 270
 Cockpit Functions 260
 TB20 Trinidad xvi, xvii, 271
 Aircraft Settings Panel 280

Cockpit Functions 272
 Sound and Volume Control 147
 Spot Weather 63
 Spot WX 3
 Starter 233, 243, 320
 Starter Annunciator Light 287, 337
 Startup 1
 State Panel 71, 140
 Station Plot 118
 Steering 233
 Strobe Lights 215
 Structural Icing 105
 Suction Gauge 208, 215, 224
 Sunrise 133
 Sunset 133
 Switches 308
 System Features 1
 System Settings
 Changing 29

T

Take-off Power 287, 337
 TAS 177
 Taxi light 263, 274
 TCA. *See* Terminal Control Area
 Temperature 105
 Terminal Control Area 91
 Terminal Radar Service Area 91
 Throttle 207, 208, 209, 214, 215, 217, 224, 225, 226, 233, 234, 235, 236, 243, 244, 245, 252, 253, 255, 262, 263, 264, 265, 266, 273, 274, 275, 276, 277, 286, 320, 336
 Throttle Friction Lock 215
 Throttle Quadrants 346
 Changing 32
 Throttles 287, 289, 320, 321, 323, 324, 337, 339
 Time Flown Panel 142
 TIME/SPEED/DISTANCE 85

Time-to-Station 185
 TTS 185
 Touchdown 209, 217, 226, 323
 Transcribed Weather Broadcast
 91

TRANSMIT light 36
 Transponder 187, 309
 Transponder Tag 63
 Trim 217, 234, 244, 253, 254,
 255, 266, 277, 287, 311,
 323, 337

Trimble 2000 Approach Plus™
 GPS 2

Trim Tabs 289, 309, 339
 trim wheels 166

TRS. *See* Terminal Radar
 Service Area

TRSA. *See* Terminal Radar
 Service Area

Turn and bank indicator 263,
 266, 273, 277

Turn Coordinator. *See* Turn
 Indicator

Turn Indicator 178

TWE. *See* Transcribed Weather
 Broadcast

TWEB. *See* Transcribed Weather
 Broadcast

TWR. *See* Air Traffic Control
 Tower

U

UAC. *See* Upper Area Control
 Center

UCI box 347

UNI. *See* Unicom

Unicom 91

universal time 203

Upper Area Control Center 91

USB Button 36

USB Key 347

USB port 346, 347

UT. *See* universal time

UTC 319

UTC (Zulu) 144

V

Vacuum 234, 243

Vacuum gauge 263, 273

Vertical Speed Indicator 178

Virtual Flight Data Recorder 79

Fast-Forward Button 80

Play/Pause Button 80

Replay 79

REPLAY options button 81

Rewind Button 80

Slow Button 80

Stop Button 80

Visual Settings 144

VOL. *See* VOLMET

VOLMET 91

Voltmeter 253, 262, 263, 264,
 273, 275, 286, 336

VOR 306

VOR/LOC/Glideslope Indicator
 180

VSI. *See* Vertical Speed Indicator

W

Warm-up 286, 336

Weather 3

Weight & Fuel 146

Wheels 166

Wibu Key 5, 6, 8, 12, 17

Wind Barb Description 119

Windows 345, 346

Windows Vista 6

Windows XP 6, 26

Wing Flap 208, 209, 215, 216,
 217, 225, 226, 253, 254,
 255

X

Y

Yaw Control 137

Yaw Damp 310, 311

Yaw Damper 305

YD. *See* Yaw Damper

Z

Intentionally
Left
Blank

SUPPLEMENTS

This section will include supplemental instructions for standard equipment for the PI-121 and PI-135 and also be used for the insertion of optional products or future product additions or releases.

Intentionally
Left
Blank